

CCD-TR91 / TR636

RMT-706

SERVICE MANUAL

US Model
Canadian Model
CCD-TR91
E Model
CCD-TR636



Remote commander is available as a unit. But as individual parts the battery case lid of commander is only available.

**Video8
Handycam**

A MECHANISM

For MECHANISM ADJUSTMENTS, refer to the "8 mm Video MECHANICAL ADJUSTMENT MANUAL IV" (9-973-199-11).

SPECIFICATIONS

Video Camera Recorder

System

Video recording system
Two rotary heads, Helical scanning
FM system

Audio recording system
Rotary heads, FM system

Video signal
NTSC color, EIA standards

Usable cassette
8 mm video format cassette
(standard 8 mm)

Tape speed
SP mode: Approx. 1.43 cm
(19/32 inches)/second
LP mode: Approx. 0.72 cm
(5/16 inches)/second
(playback only)

Recording time
SP mode: 2 hours (P6-120)

Playback time
SP mode: 2 hours (P6-120)
LP mode: 4 hours (P6-120)

Fastforward/rewind time
Approx. 6 min. 30 sec. (P6-120)

Image device
CCD (Charge Coupled Device)

Viewfinder
Electronic viewfinder (color)

Lens
Combined 10 x power zoom lens
f= 6.1 to 61 mm (1/4 to 2 7/16
inches) (44 to 440 mm when
converted to a 35 mm still camera)
F 1.6 to 3.1
Filter diameter 52 mm (2 1/8 inches)
TTL autofocus system inner focus
wide macro system

Colour temperature

Auto
Minimum illumination
1 lx (F 1.6)

Illumination range
1 lx to 100,000 lx

Recommended illumination
More than 100 lx

Output connector

Video output
Phono jack, 1 Vp-p, 75 Ω ,
unbalanced, sync negative

Audio output
Phono jacks (2: stereo L and R)
-7.5 dBs, (at output impedance
47 k Ω) impedance less than 2.2 k Ω

RFU DC OUT
Special minijack, DC 5 V

Headphones jack
Stereo minijack

Remote jack
Stereo mini-minijack (\varnothing 2.5 mm)

MIC jack
Stereo minijack, -66 dBs low
impedance with 2.5 to 3 V DC,
output impedance 6.8 k Ω (\varnothing 3.5 mm)

General

Power requirements
On battery mounting surface
6.0 V (battery pack)
7.5 V (AC power adaptor)

Average power consumption
6.0 W (camera recording) including
the viewfinder

— Continued on next page —

8 VIDEO CAMERA RECORDER
SONY®



Installation Vertically, Horizontally
 Operating temperature 0°C to 40°C (32°F to 104°F)
 Storage temperature -20°C to +60°C (-4°F to +140°F)
 Dimensions Approx. 109 x 109 x 197 mm (w/h/d)
 (4 3/8 x 4 3/8 x 7 4/8 inches)
 Mass About 920 g (2 lb) excluding the battery pack, lithium battery, cassette, and shoulder strap
 About 1140 g (2 lb 7 oz) including the battery pack NP-55H, lithium battery CR2025, cassette P6-120, and shoulder strap
 Microphone Electret condenser microphone, stereo type


AC power adaptor

Power requirements 110-240 V AC*, 50/60 Hz
 Power consumption 20 W
 Output voltage DC OUT: 7.5 V, 1.6 A in operating mode
 Battery charge terminal: 10 V, 1.3 A in charge mode
 Application Sony battery packs NP-55H, NP-60D, NP-66H, NP-77H/77HD, NP-80/80D
 Operating temperature 0°C to 40°C (32°F to 104°F)
 Storage temperature -20°C to +60°C (-4°F to +140°F)
 Dimensions Approx. 170 x 41.6 x 82 mm (w/h/d)
 (6 3/4 x 1 11/16 x 3 1/4 inches) including projecting parts and controls
 Mass Approx. 520 g (18 oz)

* Canadian Standard Association (CSA) certifies 120 V AC only.

Design and specifications are subject to change without notice.

Supplied accessories

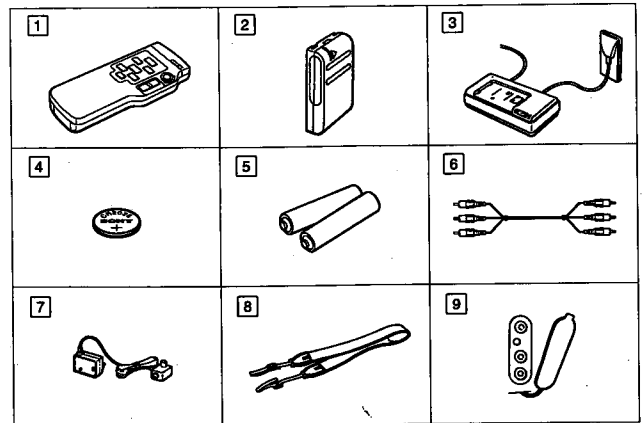

- 1 Wireless Remote Commander (1)
- 2 NP-55H Battery pack (1)
- 3 AC-V35 AC power adaptor (1)
- 4 CR2025 Lithium Battery (1)
- 5 Size AA (R6) battery for Remote Commander (2)
- 6 A/V connecting cable (1)
- 7 RFU-80UC RFU adaptor (1)
- 8 Shoulder strap (1)
- 9 Jack cover (1)
(Attached to camcorder)

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK OR DOTTED LINE WITH MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
SERVICE NOTE			3. DIAGRAMS		
	Semiconductor for Correction List Display	6	3-1.	Circuit Boards Location	36
	Parts Location Diagram Related to Power Supply	6	3-2.	Overall Block Diagram	37
	Semiconductor Location	6	3-3.	Camera (1) Block Diagram	41
	Head Cleaning	6	3-4.	Camera (2) Block Diagram	45
1. GENERAL			3-5.	Camera (3) Block Diagram	46
	Charging and Installing the Battery Pack	7	3-6.	Video (1) Block Diagram	50
	Tips for Using the Battery Pack	8	3-7.	Video (2) Block Diagram	55
	Inserting the Supplied Batteries	9	3-8.	Servo Block Diagram	57
	Setting the Date and Time	10	3-9.	System Control Block Diagram	60
	Inserting a Cassette	10	3-10.	Audio Block Diagram	65
	Adjusting the Viewfinder Lens	11	3-11.	EVF Block Diagram	69
	Hints for Better Shooting	11	3-12.	Power Block Diagram	73
	Camera Recording	12	4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS		
	Connections for Playback	14	4-1.	Frame Schematic Diagram	78
	Playing Back a Tape	15	4-2.	Printed Wiring Boards and Schematic Diagrams	81
	Using Alternative Power Sources	16		● CD-105 Board	82
	Selecting Automatic or Manual Adjustment Mode	16		● VC-132 Board (Camera, Lens Drive, Mode Control, Lens Control)	84
	Focusing Manually	17		● VC-132 Board (Camera)	87
	Using the PROGRAM AE Function	18		● VC-132 Board (Camera)	90
	Fade-in and Fade-out	19		● VC-132 Board (Lens Drive)	93
	Changing the Mode Settings	19		● VC-132 Board (Mode Control)	96
	Editing onto Another Tape	20		● VC-132 Board (Lens Control)	99
	Playback Modes	21		● YP-12 Board	103
	Maintenance Information and Precautions	21		● VS-99 Board (REC/PB Head Amp, Video, Servo/System Control)	108
	Using Your Camcorder Abroad	23		● VS-99 Board (REC/PB Head Amp)	111
	Identifying the Parts	24		● VS-99 Board (Video)	113
	Indicators in the Viewfinder and the Display Window	27		● VS-99 Board (Video)	116
	Index	27		● VS-99 Board (Video)	120
2. DISASSEMBLY				● VS-99 Board (Servo/System Control)	123
2-1.	Removal of Front Panel Assembly	28		● JK-98, SW-222, MF-213 Boards and CF Block	128
2-2.	Removal of Cassette Lid Assembly	28		● SL-32, FP-442, LM-40, LS-33 Boards	131
2-3.	Removal of Cabinet (L) Assembly	29		● AU-149 Board	136
2-4.	Removal of Cabinet (R) Assembly	29		● MA-169 Board	141
2-5.	Removal of Control Switch Block	30		● VF-68, VF-69, FF-75 Boards	145
2-6.	Removal of DD-55 and SW-222 Boards	30		● DD-55 Board	152
2-7.	Removal of LS Lid Assembly	31	4-3.	Semiconductors	157
2-8.	Opening of VC-132 Board	31	5. EXPLODED VIEWS		
2-9.	Removal of Lens Assembly (CD-105 Board)	32	5-1.	Cabinet (L) and Front Panel Assemblies	158
2-10.	Removal of VS-99 Board	32	5-2.	Cabinet (R) and EVF Assemblies	159
2-11.	Removal of JK-98 and AU-149 Boards	33	5-3.	Main Boards Assembly	160
2-12.	Removal of SL-32 Board	33	5-4.	Cassette Compartment Holder Assembly	161
2-13.	Removal of EVF Assembly	34	5-5.	LS Chassis Assembly	162
2-14.	Internal Views	35			

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
5-6.	Mechanism Chassis Assembly (1)	163	9.	HALL adjustment	215
5-7.	Mechanism Chassis Assembly (2)	164	10.	Flange back adjustment	217
5-8.	Zoom Lens Assembly (VCL-6110WF)	165	11.	Flange back check	218
6.	ELECTRICAL PARTS LIST	166	12.	SYNC level check (VC-132 board)	219
	HARDWARE LIST	188	13.	Burst level check (VC-132 board)	220
7.	INTERFACES · IC PIN FUNCTIONS		14.	Picture frame setting	221
7-1.	Camera Micro Processor Pin Function (VC-132 Board IC653: MC68HC11FU)	189	15.	IRIS IN/OUT adjustment	222
7-2.	VAP Micro Processor Pin Function (VC-132 Board IC745: CXP80620A-020R)	190	16.	Max gain adjustment (VC-132 board)	223
7-3.	Mechanism Control Micro Processor Pin Function (VS-99 Board IC501: CXP80624A-025R)	190	17.	Auto white balance reference data input	224
7-4.	Mode Control Micro Processor Pin Function (VC-132 Board IC902: MB89092PFV-G128)	192	18.	Auto white balance adjustment	225
7-5.	Interface	194	19.	White balance check	226
7-5-1.	Video/Audio Block Interface	194	20.	Color reproductivity adjustment	227
7-5-2.	Servo Block Interface	195	8-3.	Electronic Viewfinder System Adjustments	228
8.	CAMERA SECTION ADJUSTMENTS		1.	Current consumption adjustment (VF-69 Board)	229
8-1.	Preparations before adjustment (Camera Section)	196	2.	Power supply voltage check (VF-68 Board)	229
8-1-1.	List of Service Tools	196	3.	VCO adjustment (VF-68 Board)	229
8-1-2.	Preparations	198	4.	LC COM vlotage check (VF-68 Board)	230
8-1-3.	Precautions	199	5.	BRIGHT adjustment (VF-69 Board)	230
1.	Switch settings	199	6.	CONTRAST Check (VF-68 Board)	231
2.	Adjusting Procedure	199	7.	SUB BRIGHT R preset adjustment (VF-68 Board)	231
3.	Subject	199	8.	SUB BRIGHT B preset adjustment (VF-68 Board)	232
8-1-4.	Adjusting Remote Commander	200	9.	White balance adjustment (VF-68 Board)	232
1.	Using the adjusting remote commander	200	8-4.	Arrangement Diagram for Adjustment Parts	234
2.	Precautions upon using the adjusting remote commander	200	9.	MECHANICAL SECTION ADJUSTMENTS	
8-1-5.	Page F address List	201	9-1.	Setting the Track Shift Mode	239
8-1-6.	Page 6, Page 2 Address List	208	9-2.	Preparation for Adjustment	239
1.	Page 6	208	10.	VIDEO SECTION ADJUSTMENTS	
2.	Page 2	209	10-1.	Preparations Before Adjustment	240
8-1-7.	Data Processing	209	10-1-1.	Equipments Used	240
8-2.	Camera System Adjustments	210	10-1-2.	Precautions upon Adjustment	240
1.	Adjusting points when replacing main parts	210	10-1-3.	How to Set the REC in the Model without REC Switch	241
2.	Power supply voltage check (DD-55 board)	210	10-1-4.	Connector for Adjustments (CN002 of VS-99 board)	241
3.	Page F data initialization	211	10-1-5.	Connection of Equipments	242
4.	Page F data modification	212	10-1-6.	Checking the Input Signals	242
5.	28 MHz origin oscillation adjustment (VC-132 board)	212	1.	VIDEO input	242
6.	V SUB adjustment (VC-132 board)	213	10-1-7.	Alignment Tape	243
7.	VRG adjustment (VC-132 board)	213	10-1-8.	Output Level and Impedance	244
8.	CCD imager correction data writing	214	10-1-9.	Service Mode	245
			1.	Setting the service mode	245
			2.	Page D write protect	248
			3.	Test mode setting	248
			4.	Emergency code	248
			5.	Emergency mode	249
			6.	Bit value discrimination	249
			7.	Mode controller input check	250

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
8.	White balance mode switching	251	6.	1.7 MHz deviation adjustment (AU-149 board)	288
9.	Zoom position check	251	7.	Overall level characteristics, distortion rate check ...	289
10.	LCD, LED check	251	8.	Separation check	289
11.	Key input check	252	9.	Overall noise level check	289
12.	Key input check (A/D Port)	252	10-8.	Arrangement Diagram for Adjustment Parts	290
13.	Wireless remote commander reception contents check	253			
14.	Battery voltage check	253			
15.	Mechanism section switch, etc. check	254			
16.	Mechanism controller input/output check	255			
17.	Mechanism controller input check	255			
18.	Mechanism controller A/D port input voltage check ...	256			
19.	Tape top/end sensor check	256			
20.	Individual operations of the drum, capstan, and loading motor	257			
21.	Version of mechanical control microprocessor	257			
22.	Page D address list	258			
10-2.	Adjusting Points when Replacing Main Parts	262			
1.	When replacing drum	262			
10-3.	Power Supply System Adjustments	262			
1.	Oscillator frequency check (DD-55 board)	262			
2.	Power supply voltage check (DD-55 board)	262			
10-4.	System Control System Adjustments	263			
1.	Page D initial value input	263			
2.	Battery end adjustment	264			
3.	Battery down check	265			
10-5.	Servo System Adjustments	266			
1.	Switching position adjustment (VS-99 board)	266			
10-6.	Video Adjustments	267			
1.	Playback frequency characteristic adjustment (VS-99 board)	268			
2.	Flying erase check (VS-99 board)	269			
3.	VXO oscillation frequency check (VS-99 board)	269			
4.	EE level adjustment (VS-99 board)	270			
5.	IR adjustment (VS-99 board)	271			
6.	Chroma comb filter adjustment (VS-99 board)	272			
7.	Emphasis input level adjustment (VS-99 board)	273			
8.	PB Y level adjustment (VS-99 board)	274			
9.	PB line out level adjustment	275			
10.	Y FM deviation adjustment (VS-99 board)	276			
11.	Y FM carrier frequency adjustment (VS-99 board) ...	277			
12.	Chroma emphasis f0 adjustment (VS-99 board)	278			
13.	REC Y level adjustment (VS-99 board)	279			
14.	REC C level adjustment (VS-99 board)	280			
15.	REC ATF level check (VS-99 board)	281			
16.	REC AFM level check (VS-99 board)	282			
17.	Chroma comb filter fine adjustment (VS-99 board) ...	283			
10-7.	Audio System Adjustment	284			
1.	1.5 MHz record level check (AU-149 board)	284			
2.	E-E output lever check (AU-149 board)	285			
3.	REC matrix L-R adjustment (AU-149 board)	285			
4.	REC matrix L+R check (AU-149 board)	286			
5.	1.5 MHz deviation adjustment	287			

SERVICE NOTE

[SEMICONDUCTOR FOR CORRECTION LIST DISPLAY]

Part code and part name of the semiconductor for correction of the print board is described in the space of each print figure. Use this list when ordering parts.


[PARTS LOCATION DIAGRAM RELATED TO POWER SUPPLY]

The parts location diagram for the power supply which are often checked and replaced when repairing the fuse and IC link and so on. (See page 96, 97, 126, 149, 152)

This diagram is useful for repair.

[SEMICONDUCTOR LOCATION]

In this service manual, the mounted locations of the semiconductors (IC, transistor, diodes) are indicated in red as shown below. This enables to find the location on the board easily when servicing.

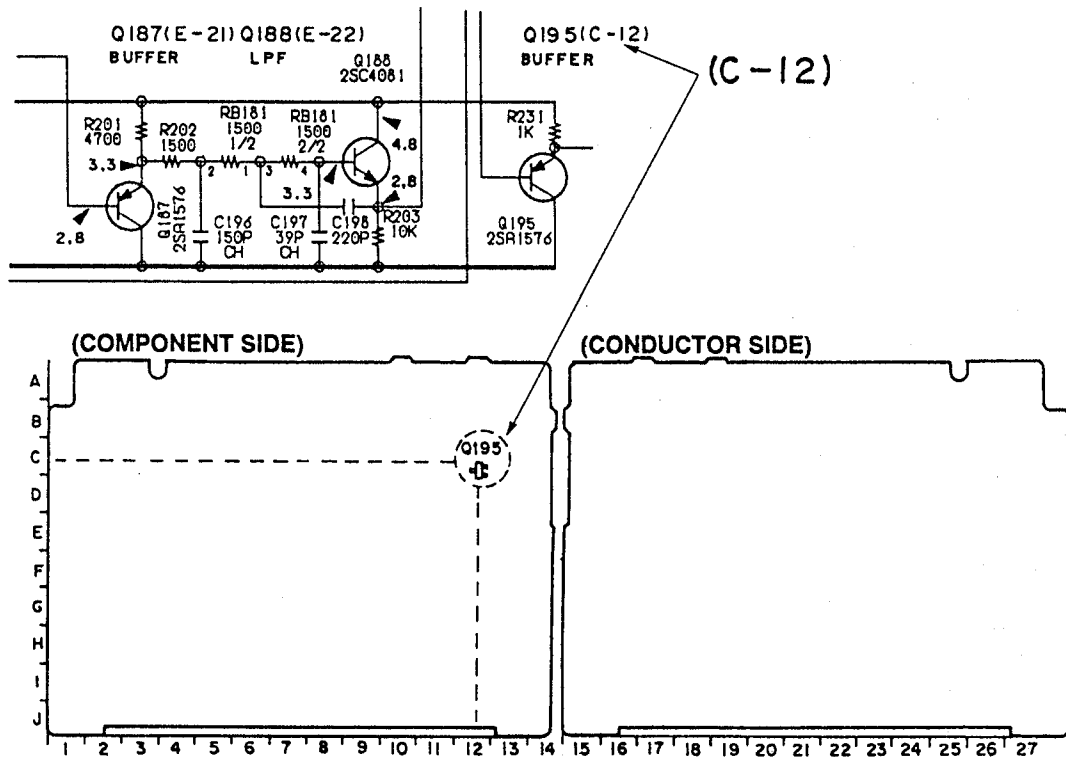

[HEAD CLEANING]

After an extended period of use the video image may become indistinct or may not appear at all during playback of a tape. The cause of this usually are dirty video heads. For remedy, cleaning of the heads is required.

Check for Head Clogs During Recording

- ① Use a blank tape, record a short section, then press the stop button to stop.
- ② Set to recording mode again.
- ③ If the [⊗] mark is flashing in the viewfinder at this time, head clogs are occurred.

Check During Playback of a Tape

- ① Play back a pre-recorded tape and display the image on a TV screen.
- ② If there is no sound and the image is unstable, no image appears on the screen, or tape transport is unstable, head clogs are occurred.

Remedy

[Cleaning method using a cleaning tape]

- Use the Cleaning Tape. (Please follow the instructions attached to the cleaning tape.)

SECTION 1 GENERAL

This section is extracted from instruction manual.


Getting Started Charging and Installing the Battery Pack

Before using your camcorder, you first need to charge and install the battery pack. To charge the battery pack, use the supplied AC-V35 AC power adaptor.

Charging the Battery Pack

Charge the battery pack on a flat place without vibration.

- (1) Connect the power cord to a wall outlet. (2) Align the right side of the battery pack with the line on the AC power adaptor, then slide the battery pack in the direction of the arrow. (3) Set the selector to CHARGE. The CHARGE lamp (orange) lights up. Charging begins.
- When charging is completed, the CHARGE lamp goes out. Set the selector to the center position and unplug the unit from the wall outlet. Then remove the battery pack and install it on the camcorder.
- To stop charging, set the selector to the center position.

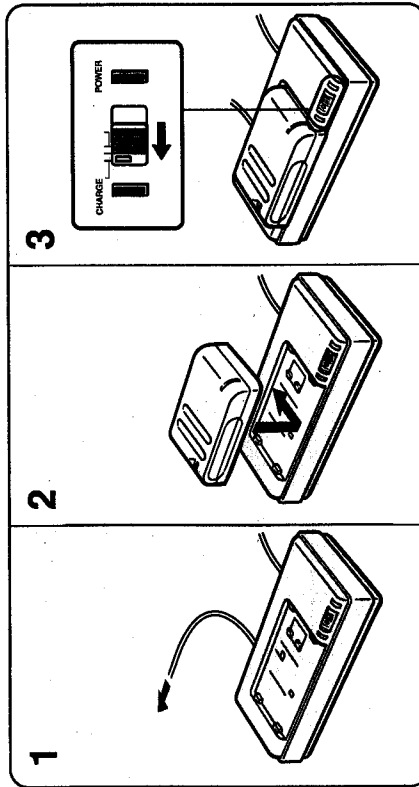

Charging Time and Battery Life

Battery pack	NP-55H (supplied)	NP-80	NP-77H	NP-66H	NP-60D
Charging time*	70	155	140	100	75
Battery life**	60	140	135	100	65

- * Approximate minutes to charge an empty battery pack using the AC-V35 (Lower temperatures require a longer charging time.)
- ** Approximate continuous recording time (in minutes) indoors

Important!


Use the battery completely before re-charging!

Before you recharge the battery pack, make sure the battery has been used up (discharged) completely. Repeated charging while some capacity remains causes a lowering of battery capacity. However, the original battery capacity can be recovered if you use the battery completely and charge it fully again.

To use up the battery, remove the cassette and slide the POWER switch to CAMERA with the battery pack attached, and leave the camcorder until the indicator and the red lamp flash in the viewfinder.

Removing the Battery Pack


Slide the battery pack in the direction of the arrow (see drawing).

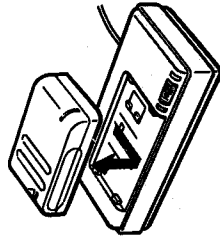

Note on charging the battery pack
The POWER lamp will remain lit for a while even if the battery pack is removed and the power cord is unplugged after charging the battery pack. This is normal.


Installing the Battery Pack

- (1) Lift up the viewfinder. (2) Align the right side of the battery pack with the white line on the camcorder, and slide the battery pack to the right.

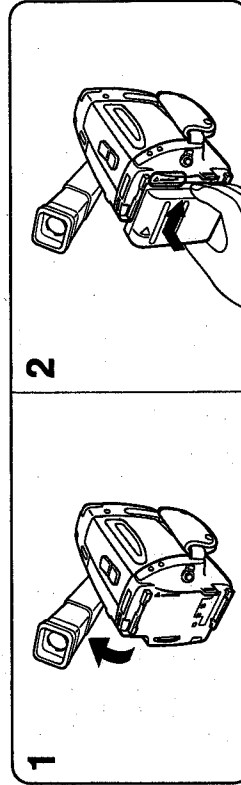

Removing the Battery Pack

- (1) Lift up the viewfinder. (2) While pressing BATT, slide the battery pack to the left.

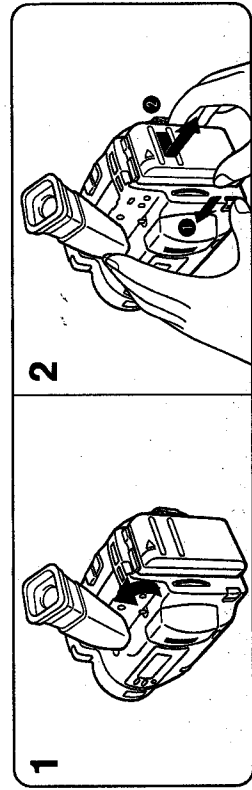

Charging and Installing the Battery Pack

7

Tips for Using the Battery Pack

This section shows you how you can get the most out of your battery pack.

Preparing the Battery Pack

Have Sufficient Battery Pack Power to Do 2 to 3 Times as much Recording as You have Planned.

"Battery life" indicated in this manual is measured by the continuous recording time of the camcorder, placed at room temperature using a fully-charged battery pack.

Battery Life is Shorter in Cold Environment

Battery efficiency is decreased and the battery will be used up more quickly if you are recording in a cold environment.

To Save Battery Power

Turn **STANDBY** on the camcorder down when not recording to save battery power. (p. 9) [a]
A smooth transition between scenes can be made even if recording is stopped and started again. While you are positioning the subject, selecting an angle, or looking through the viewfinder lens, the lens moves automatically and the battery is used. The battery is also used when a tape is inserted or removed.

When to Replace the Battery Pack

While you are using your camcorder, the remaining battery indicators in the viewfinder (1) and in the display window (2) decrease gradually as battery power is used up.



When the remaining battery indicator reaches the lowest point, the indicator appears and starts flashing in the viewfinder. (p. 9) [b]

When the indicator in the viewfinder changes from slow flashing to rapid flashing while you are recording, slide the **POWER** switch to **OFF** on the camcorder and replace the battery pack. Leave the tape in the camcorder to obtain a smooth transition between scenes after the battery pack is replaced.

Note on the remaining battery indicator

The remaining battery indicator of the camcorder may indicate a different remaining capacity from that of the NP-77HD battery pack (not supplied). The indicator of NP-77HD is more accurate.

Note on the Rechargeable Battery Pack

The Battery Pack Heats Up

During charging or recording, the battery pack heats up. This is caused by energy that has been generated and a chemical change that has occurred inside the battery pack. This is not cause for concern.

Battery Pack Care

- Remove the battery pack from the camcorder after using the battery pack, and keep it in a cool place. When the battery pack is attached to the camcorder, a small amount of current flows to the camcorder even if the **POWER** switch is set to **OFF**, which shortens battery life.
- The battery pack is always discharging even when it is not in use after charging. Therefore, you should charge the battery pack right before using the camcorder.

How to Use the Switch on the Battery Pack

This switch is provided so that you can mark the charged battery pack. Set the switch to the "no mark" position when charging is completed. Set the switch to the "red mark" position when the battery is used up (or in whichever direction you want to remind yourself). (p. 9) [c]

The Life of the Battery Pack

The battery pack can be fully charged and discharged about 500 times under normal temperatures. If the battery indicator flashes rapidly just after turning on the camcorder with a fully charged battery pack, the battery pack should be replaced with a new fully charged one.

Charging Temperature

You should charge batteries at temperatures from 10°C to 30°C (from 50°F to 86°F). Lower temperatures require a longer charging time.

Note on Charging

A Brand-new Battery Pack

A brand-new battery pack is not charged. Before using the battery pack, charge it completely.

Before Recharging a Used Battery Pack

- Make sure to use up the battery before recharging.
- If recording is completed before the indicator appears in the viewfinder, you should remove the tape, slide the **POWER** switch to **CAMERA**, turn **STANDBY** up, and leave the camcorder until the battery indicator flashes rapidly.
- When you use the AC-S10 power adaptor, the DC-S10 car battery charger or the BC-S10 portable battery charger, you can use the discharging function.
- **Charging the usable battery pack causes a lowering of battery capacity. Battery capacity can be recovered if you fully discharge and charge the battery pack again.**

After Long Storage

Recharge the battery pack after a long period of storage. If the battery pack is charged fully but not used for a long time (about 1 year), it becomes discharged. Charge it again, but in this case the battery life will be shorter than normal. After several charging and discharging cycles, the battery life will recover its original capacity.





Note on the Terminals

If the terminals (metal parts on the back) are not clean, the battery duration will be shortened.

When the terminals are not clean or when the battery pack has not been used for a long time, repeat installing and removing the battery pack. This improves the contact condition. Also, wipe the + and - terminals with a soft cloth or paper.

Be Sure to Observe the Following

- **To prevent an accident caused by a short circuit, do not allow metal objects such as a necklace to touch the battery terminals. Carry the battery pack attaching to the terminal cover. [d]**
- Keep the battery pack dry.
- Do not open nor convert the battery pack.
- Do not expose the battery pack to any mechanical shock.

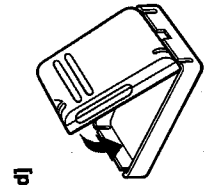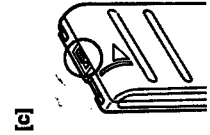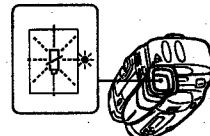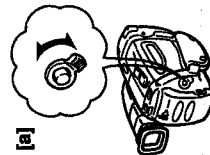


Inserting the Supplied Batteries

Your camcorder is supplied with a lithium battery and two size AA (R6) batteries. The lithium battery is for the camcorder and the size AA (R6) batteries are for the Remote Commander.

Inserting the Lithium Battery into the Camcorder


The lithium battery has a positive (+) side and a negative (-) side as illustrated below. Be sure to install the lithium battery with the positive side facing out.

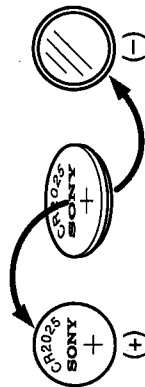

Inserting the Lithium Battery


To activate the clock, you must insert a lithium battery.

(1) Open the lid of the lithium battery compartment on the bottom of the camcorder. (2) Install the lithium battery with the positive (+) side facing out. (3) Close the lid.

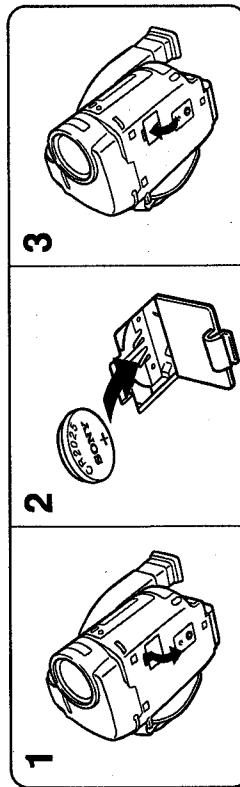

To Remove the Lithium Battery


Push the battery upward once and pull it out from the holder. When replacing the lithium battery, keep the battery pack or other power source attached. Otherwise, you will need to reset the date and time.

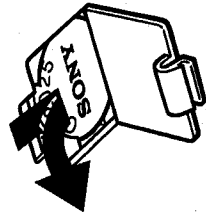

Lithium Battery Life

The lithium battery for the camcorder lasts for about 1 year under normal operation. When the battery becomes weak or dead, the date or the time indicator and the indicator flash in the viewfinder for about 5 seconds and the date or the time indicator keeps flashing in the display window when you set the POWER switch to CAMERA.

In this case, replace the battery with a Sony CR2025 or Duracell DL-2025 lithium battery. Use of any other battery may present a risk of fire or explosion.

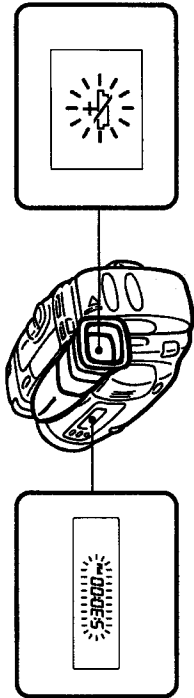


Caution

Keep the lithium battery out of the reach of children. Should the battery be swallowed, consult a doctor immediately.

Inserting the Size AA (R6) Battery into the Remote Commander

To use the Remote Commander, you must insert two size AA (R6) batteries. Use the supplied size AA (R6) batteries.

(1) Remove the battery cover from the Remote Commander. (2) Insert both of the size AA (R6) batteries with correct polarity. (3) Put the battery cover back onto the Remote Commander.

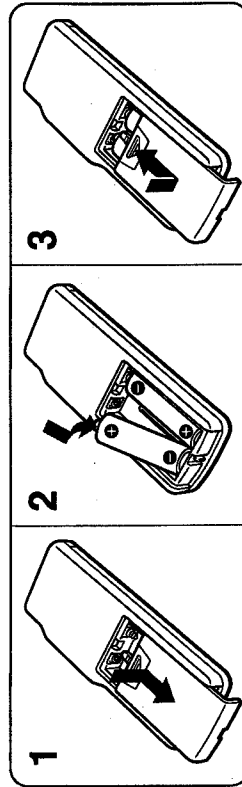

Battery Life

The batteries for the Remote Commander last about 6 months under normal operation. When the batteries become weak or dead, the Remote Commander does not work.

To avoid damage from possible battery leakage

Remove the batteries when you will not use the Remote Commander for a long time.


WARNING

The battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.

Setting the Date and Time

You need to set the camcorder's date and time to record the correct ones onto your video. Before setting the clock, make sure a power source and lithium battery are installed.

(1) While pressing the small green button on the POWER switch, slide it to CAMERA. (2) Turn STANDBY up. (3) Move the viewfinder lens adjustment lever so that the "STBY" indicator in the viewfinder comes into sharp focus. (4) Press DATE (+) and TIME (NEXT) simultaneously for 3 seconds. (5) Adjust the digits of the year, month, day, hour and minutes by pressing DATE (+) and TIME (NEXT). To set the year to 1993, there is no need to press DATE (+) in 5-1. Note that when you keep DATE (+) pressed, the digits advance faster.

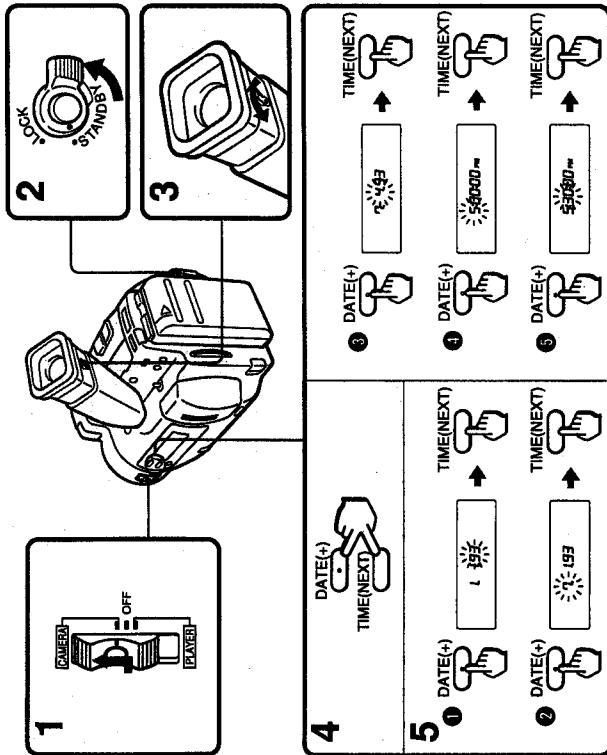

To Correct the Date and Time Settings

Press TIME (NEXT) repeatedly until the minute digits stop flashing. Then repeat steps 4 and 5.

To Check the Preset Date and Time

Press DATE (+) to display the date indicator in the viewfinder and the display window. Press TIME (NEXT) to display the time indicator. When you press the same button again, the indicator goes off.

Note on the setting of the year
When you set the year, each time you press DATE (+) the digits change as follows.


1993 → 1994 → ----- → 2023

Note on the time indicator
The internal clock of this camcorder operates on a 12-hour cycle. 12:00 AM stands for midnight. 12:00 PM stands for noon.

Inserting a Cassette

Make sure that the power source is installed.

(1) While pressing the small blue button on the EJECT knob, slide it in the direction of the arrow. The cassette holder automatically lifts up and opens. (2) Insert a tape with the window facing out. (3) Close the cassette holder by pressing the "PUSH" mark on the cassette holder.

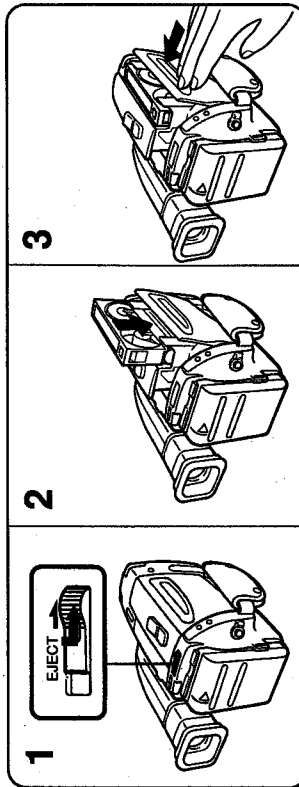


To Eject the Cassette

While pressing the small blue button on the EJECT knob, slide it in the direction of the arrow.


Adjusting the Viewfinder Lens

Before you use the camcorder for the first time or after someone else has used it, focus the viewfinder lens. Make sure that the power source is attached to the camcorder.

(1) While pressing the small green button on the POWER switch, slide it to CAMERA. The lens cover opens. (2) Turn STANDBY up. (3) Move the viewfinder lens adjustment lever so that the indicators in the viewfinder come into sharp focus.

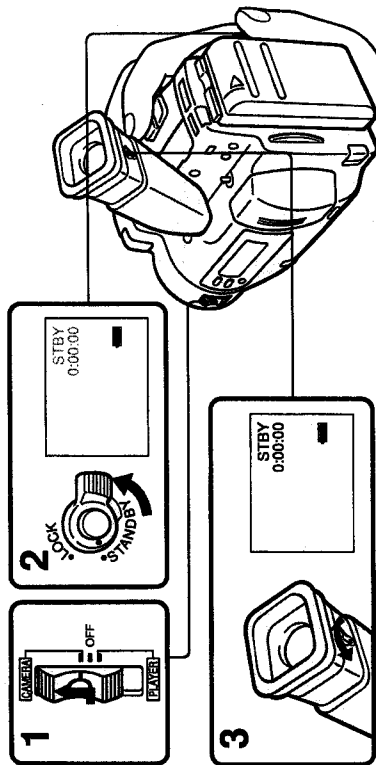


To adjust the picture quality if you want to change hue, color, and brightness of the picture displayed on the viewfinder screen, turn the screws on the viewfinder slowly using a screwdriver (not supplied). You do not need to adjust them in everyday operation.

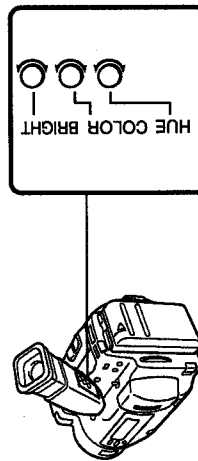

	Turn clockwise	Turn counterclockwise
BRIGHT	More brightness	Less brightness
COLOR	More color intensity	Less color intensity
HUE	Greenish skin tones	Reddish skin tones

Hints for Better Shooting

For hand-held shots, you'll get better results by holding the camcorder according to the following suggestions:

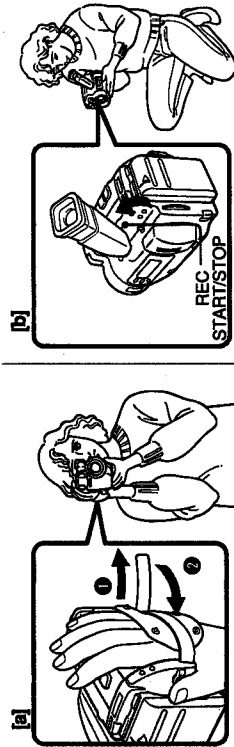

- Hold the camcorder firmly and secure it with the grip strap so that you can easily manipulate the controls with your thumb. [a]
- Place your right elbow against your side.
- Place your left hand under the camcorder to support it.
- Use the viewfinder frame as a guide to determine the horizontal plane.
- You can also record in a low position to get an interesting recording angle. Lift the viewfinder up for recording from a low position. (You can lift it up to 90 degrees.) Press REC START/STOP with your left thumb. [b]

Place the camcorder on a flat surface or use a tripod


Try placing the camcorder on a table top or any other flat surface of suitable height. If you have a tripod for a still camera, you can also use it with the camcorder (p. 42). When attaching a non-Sony tripod, make sure that the length of the tripod screw is less than 6.5 mm (9/32 in.) Otherwise, the screw may damage the inner parts of the camcorder.

Camera Recording

Make sure that the power source is installed and a cassette is inserted. If you set the date (p. 12), the date is automatically recorded for 10 seconds after you start recording (AUTO DATE feature). This feature works only once a day.

Before you record one-time events, you may want to make a trial recording to make sure that the camcorder is working perfectly.

(1) While pressing the small green button on the POWER switch, slide it to CAMERA. The lens cover opens. (2) Close the AUTO LOCK cover. Now all the camera functions activate automatically (i.e. focus, shutter speed). (3) Turn STANDBY up. (4) Press START/STOP. The camcorder starts recording. The "REC" indicator appears and the red lamp lights up in the viewfinder.

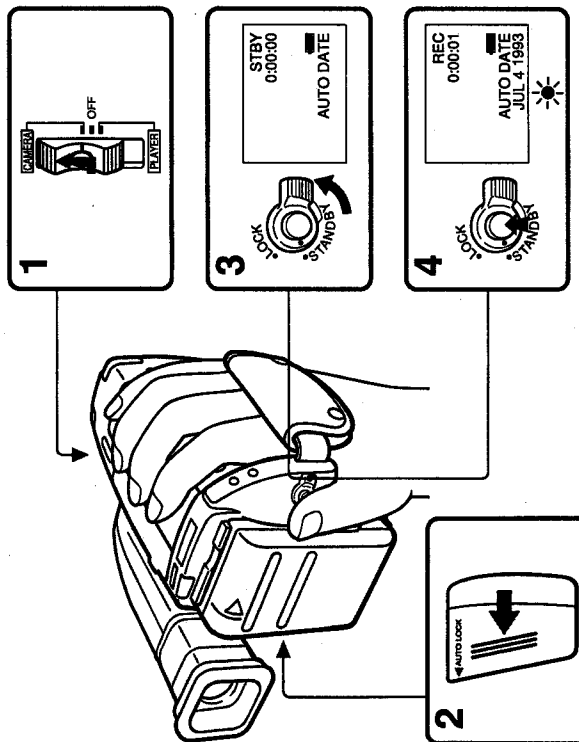**To Stop Recording Momentarily**

Press START/STOP again. The "STBY" indicator appears in the viewfinder (Standby mode).

To Finish Recording

Turn STANDBY down and slide the POWER switch to OFF. The lens cover closes. Then, eject the tape (p. 13).

Notes on Standby mode

If you leave the camcorder in Standby mode for 5 minutes, the camcorder goes off automatically. This prevents wearing down the battery and wearing out the tape. To resume Standby mode, turn STANDBY down once and turn it up again. To start recording, press START/STOP.

Note on the tape counter

The tape counter indicates the recording or playback time. Use it as a guide. There will be a time lag of several seconds from the actual time. To set the counter to zero, press RESET.

Note on the AUTO DATE feature

You can change the AUTO DATE settings by selecting ON or OFF in the menu system.

• The AUTO DATE feature works once a day. However, the date may automatically appear more than once a day when:

- you reset the date and time.
- you stop and insert the tape again.
- you stop recording within 10 seconds.
- Once the AUTO DATE feature turns off the date display 10 seconds after the start of recording, the date and time are displayed as follows:
 - If the date display setting has been made, the date is displayed.
 - If the time display setting has been made, the time is displayed.
 - If neither display setting has been made, nothing is displayed.

Note on BEEP Feature

A beep sounds when you turn the power on or when you start recording and two beeps sound when you stop recording, confirming the operation. Several beeps also sound as a warning of any unusual condition of the camcorder. Note that the beep sound is not recorded on the tape. If you do not want to hear the beep sound, set BEEP to OFF in the menu system (p. 32).

When moving from indoors to outdoors (or vice versa)

Turn STANDBY up and point the camcorder at a white object for about 15 seconds so that the white balance is properly adjusted.

When there is a strong wind

Set WIND to ON in the menu system (p. 32). The noise from the wind will be reduced. The [W] indicator appears in the viewfinder.


After recording, set WIND to OFF. If you leave it ON, the sound may be recorded unnaturally.

Note on recording

When you record from the beginning of a tape, run the tape for about 15 seconds before starting the actual recording. This will ensure that you won't miss any start-up scenes when you play back the tape. You can record tapes in SP (standard play) mode only.



Preventing Accidental Erasure

To prevent accidental erasure, slide the tab on the cassette to expose the red mark. If you try to record with the red mark exposed, the [E] and [A] indicators flash in the viewfinder, and you cannot record. To re-record on this tape, slide the tab back out covering the red mark.

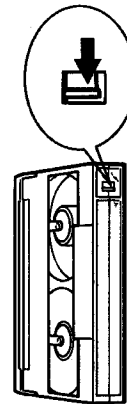

Using the Zoom Feature

Zooming is a recording technique that lets you change the size of the subject in the scene. You can also use the zoom to focus manually or to decide on a shooting angle before you start recording. For more professional-looking recordings, use the zoom function sparingly.
 "T": side: for telephoto (subject appears closer)
 "W": side: for wide-angle (subject appears farther away)

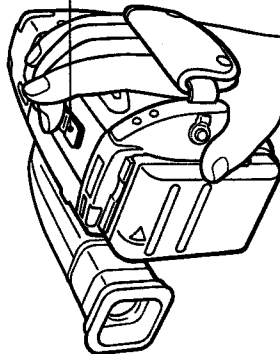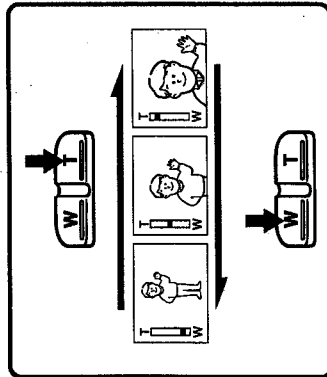

Zooming Speed (Dual speed zooming)

Press the power zoom button firmly for a high-speed zoom, press it softly for a relatively slow zoom.

When you shoot a subject using a telephoto zoom

if you cannot get a sharp focus while in extreme telephoto zoom, press the "W" side of the power zoom button until the focus is sharp. You can shoot a subject that is at least 1 m (about 39 3/8 inches) away from the lens surface in the telephoto position.



Manual focusing in macro

You can also shoot with manual focus while doing close-ups (p. 27).

Getting a Steady Picture

You can use the Steady Shot function to compensate for camera-shake. Set STEADY SHOT to ON. The "S" indicator appears in the viewfinder and the "S" indicator appears in the display window. Use Steady Shot:

- When you zoom in
- When you shoot scenery from a car window
- When you shoot scenes while moving

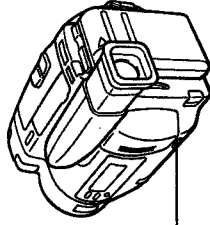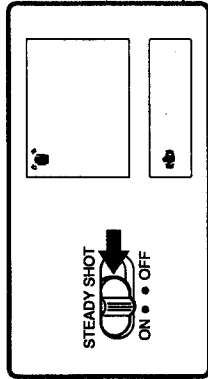

To Release Steady Shot Function



Set STEADY SHOT to OFF.

Notes on using Steady Shot

- To conserve the battery, set STEADY SHOT to OFF when you don't need it. When it is set to ON, battery power is used up more quickly.
- Steady Shot will not correct excessive camera movement.
- When you shoot stationary objects with a tripod, set STEADY SHOT to OFF.

Recording the Date or Time

While you are recording, press DATE (+) or TIME (NEXT). The date or time displayed in the viewfinder is recorded with the picture. You cannot record the date and time at the same time. Except for the date or time indicator, no indicator in the viewfinder is recorded.

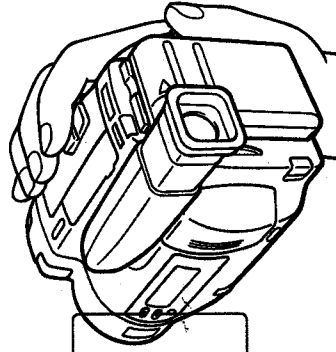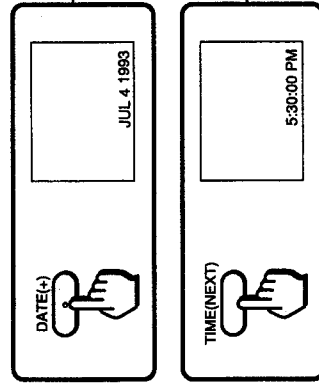

To Stop Recording with the Date and Time


Press DATE (+) or TIME (NEXT) again. The date or time indicator disappears. The recording continues.

Camera Recording

Checking the Recorded Picture in the Viewfinder

Using EDITSEARCH, you can review the last recorded scene or check the recorded picture in the viewfinder.

- (1) While pressing the small green button on the POWER switch, slide it to CAMERA. (2) Turn STANDBY up. (3) Press the - (EDITSEARCH) momentarily; the last few seconds of the recorded portion plays back (Rec Review).
- Keep pressing EDITSEARCH to play back the last recorded portion (Edit Search).
 + side: to view the forward playback picture
 - side: to view the reverse playback picture

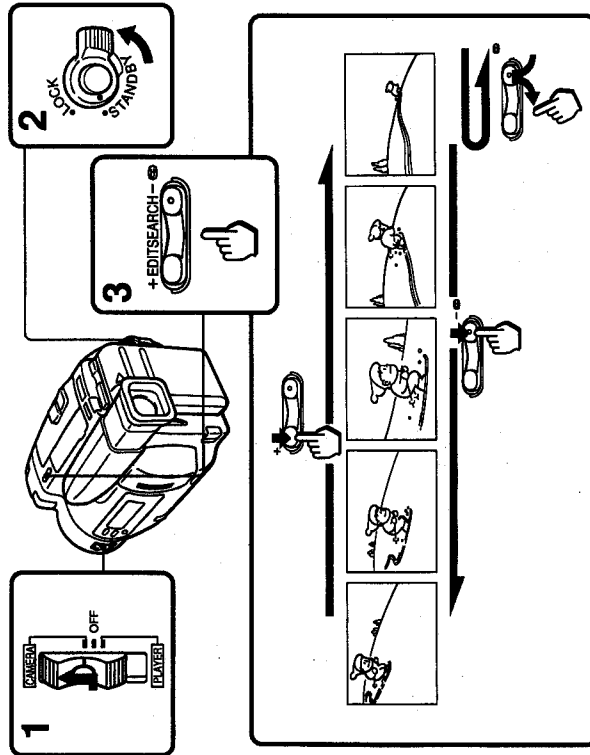

Monitoring the Sound while Viewing the Playback Picture in the Viewfinder
 Connect headphones (not supplied) to the PHONES jack. Play back the tape in PLAYER mode (p. 22).

To Stop Playback
 Release EDITSEARCH.

To Begin Re-recording

Press START/STOP. Re-recording begins from the point you released EDITSEARCH. Provided you do not eject the tape, the transition between the last scene you recorded and the next scene you record will be smooth.

Note on using EDITSEARCH


You cannot hear the recorded sound during Edit Search.

Connections for Playback

You can use this camcorder as a VCR by connecting it directly to your TV for playback. There are two ways to connect the camcorder to your TV.

Connecting to a TV or a VCR with Audio/Video Input Jacks

Connect the camcorder to the TV by using the supplied connecting cable. Set the TV/VCR selector on the TV to VCR. When connecting the camcorder to VCR, set the input selector on the VCR to LINE.

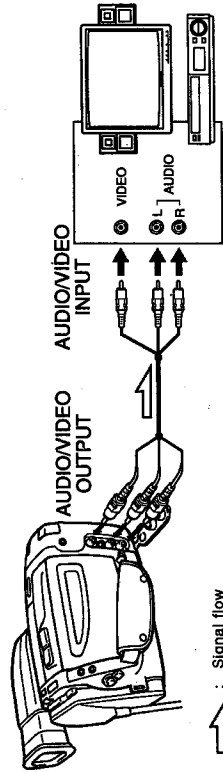


← : Signal flow

If your TV or VCR is a monaural type, connect only the white plug for audio on both the camcorder and the TV or the VCR. With this connection, the sound is in monaural.

Connecting to a TV without Audio/Video Input Jacks

Connect the camcorder to the TV by using the supplied RFU adaptor. Set the channel selector on the RFU adaptor to 3CH or 4CH whichever is not used in your area. Turn on the TV and select the 0 position. Tune the TV so that you can get picture and sound from the camcorder.

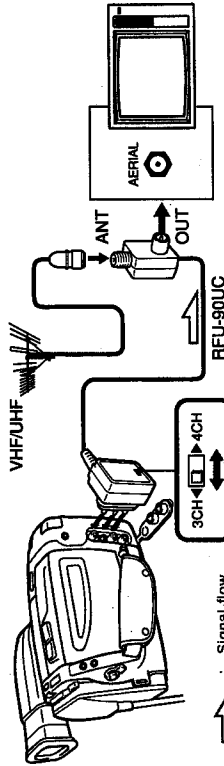


← : Signal flow

Playing Back a Tape

Playing Back a Tape

You can monitor the playback picture in the viewfinder. You can also monitor the picture on a TV screen, after connecting the camcorder to a TV or VCR (p. 21). You can use the supplied Remote Commander to control playback, if you want. Before using the Remote Commander, slide the HOLD switch in the opposite direction of the arrow.

(1) While pressing the small green button on the POWER switch, slide it to **PLAYER**. (2) Insert the recorded tape with the window facing out. (3) Press **▷**. Playback starts.

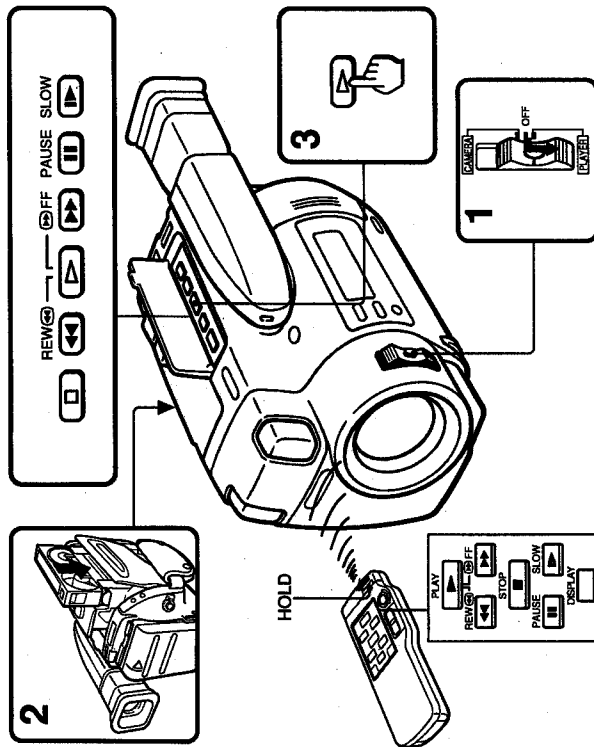

To stop playback, press **□**.
 To rewind the tape, press **◀**.
 To advance the tape rapidly, press **▶▶**.
 To play back at 1/5 speed, press **◀◀**.

When you use the Remote Commander, make sure **COMMANDER** is set to **ON** in the menu system (p. 32), and the **HOLD** switch on the Remote Commander is not working. When you do not use the Remote Commander, slide the **HOLD** switch in the direction of the arrow to prevent any misoperation.

Various Playback Modes

To view a still picture (Playback pause)
 Press **||** during playback. To resume playback, press **||** or **▷**.

To locate a scene (Picture search)
 Keep pressing **◀◀** or **▶▶** during playback. To resume normal playback, release the button.

To monitor the high-speed picture during advancing the tape or rewind (Skip scan)
 Keep pressing **◀◀** while rewinding or **▶▶** while advancing the tape. To resume normal playback, press **▷**.

To view the picture in a sequence of stop-motion images
 Press **EDITSEARCH** in Playback pause mode. If you keep pressing **EDITSEARCH**, you can view the picture play back in the forward (+) or reverse (-) direction.

Note on playback

- Streaks appear and the sound is muted in the various playback modes.
- When Playback pause mode lasts for 5 minutes, the camcorder automatically enters stop mode.

To display the viewfinder screen indicators on the TV

Press **DISPLAY** on the Remote Commander. To erase the indicators, press it again.

To select the playback sound

Change the "HI-FI SOUND" mode setting in the menu system (p. 32).


Advanced Operations Using Alternative Power Sources

You can choose any of the following power sources for your camcorder: battery pack (p. 6), house current, and 12/24 V car battery. Choose the appropriate power source depending on where you want to use your camcorder.

Place	Power source	Accessory to be used
Indoors	House current	AC-V35 AC power adaptor (supplied), AC-S10, AC-V55, AC-V35A
Outdoors	Battery pack	NP-55H Battery pack (supplied), NP-80D, NP-80, NP-77HD, NP-77H, NP-66H, NP-60D
In the car	12 V or 24 V car battery	DCP-77 DC pack

Using House Current

To use the supplied AC-V35 AC power adaptor:
(1) Lift up the viewfinder. (2) Connect the AC power cord to a wall outlet. Connect the connecting plate to the battery mounting surface of the camcorder. (3) Set the selector to VTR (DC OUT).

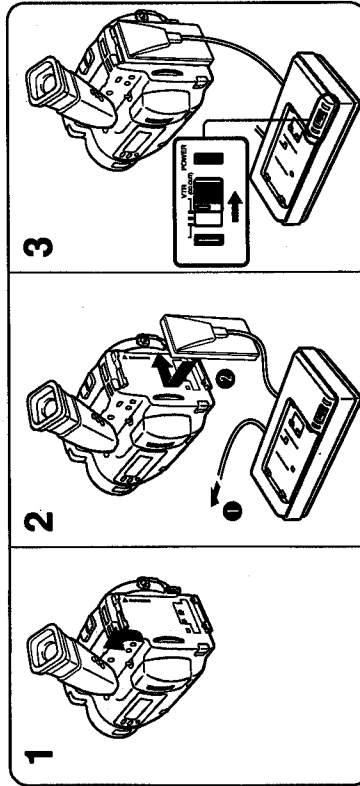

Notes on the AC power adaptor

- The camcorder cannot be operated while charging the battery pack.
- The camcorder cannot be operated unless the selector is changed to VTR (DC OUT) position.
- Keep the adaptor away from the video equipment if video operation is disturbed.
- The POWER lamp will remain lit for a while even if the unit is unplugged after use. This is normal.

To remove the connecting plate

The connecting plate is removed in the same way as the battery pack. (p. 7)

Using a Car Battery

Use the DCP-77 DC pack (not supplied). Connect the cord of the DC pack to the cigarette lighter socket of the car (12 V or 24 V). Connect the DC pack to the battery mounting surface of the camcorder.

To remove the DC pack

The DC pack is removed in the same way as the battery pack. (p. 7)

Options for Charging the Battery Pack


- AC-S10 AC power adaptor:
You can charge a battery pack whether it is used up or not with this adaptor because it has a discharging function.
- BC-S10 portable battery charger (ideal for travel):
You can charge a battery pack on 100-240 V AC current.

Selecting Automatic or Manual Adjustment Mode

The camcorder's automatic functions offer you worry-free operation under most shooting conditions. But in some circumstances, manual adjustment is better for creative recording.


Automatic Adjustment Mode

Close the AUTO LOCK cover. In automatic mode, the camcorder adjusts the focus automatically. It also sets the shutter speed to 1/60.

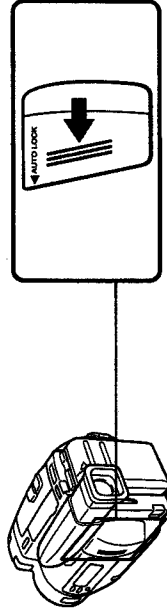

Manual Adjustment Mode

Open the AUTO LOCK cover. In manual mode, you can adjust the focus manually, and select from four PROGRAM AE modes to fit the shooting situation. Even if in manual mode, the settings you didn't adjust manually remain the same as when in automatic adjustment mode.

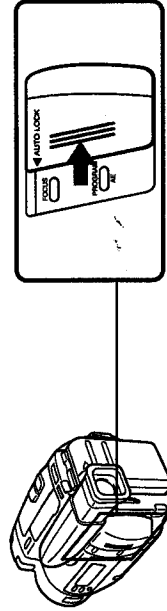


About the previous settings

- Manual settings are saved in the following case:
• When you resume automatic mode after you make manual adjustments and then select manual mode again.
- When you set the POWER switch to OFF.
However, manual settings are cancelled once 5 minutes pass if you have removed the battery.

Focusing Manually

When to Use Manual Focus


In the following cases you should obtain better results by adjusting the focus manually.

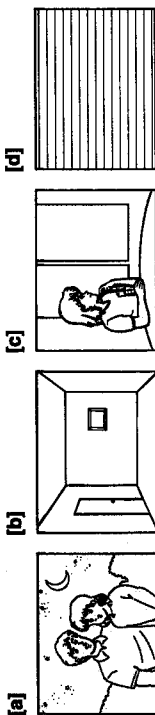

- Insufficient light [a]
- Subjects with little contrast — walls, sky, etc. [b]
- Too much brightness behind the subject [c]
- Horizontal stripes [d]
- Subjects through frosted glass
- Subjects beyond nets, etc.
- Bright subject or subject reflecting light
- Shooting a stationary subject when using a tripod

Focusing Manually

When focusing manually, first focus in telephoto before recording, and then reset the shot length. (1) Open the AUTO LOCK cover. (2) Press FOCUS. The indicator appears in the viewfinder and FOCUS MANUAL indicator appears in the display window. (3) Keep pressing the "T" (telephoto) side of the power zoom button until the zooming stops. (4) Turn the focus dial to achieve a sharp focus. (5) Set the desired shot length.

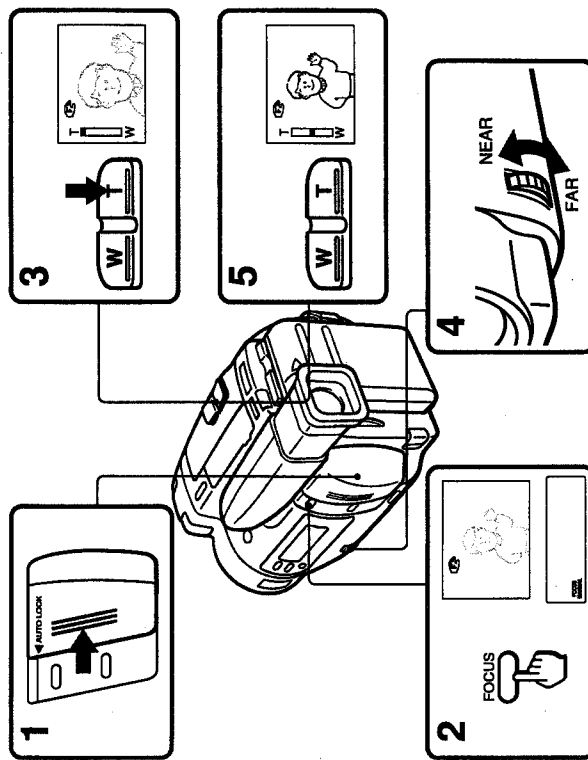

To Reactivate Autofocusing

Press FOCUS again, or close the AUTO LOCK cover. The indicator in the viewfinder and FOCUS MANUAL indicator in the display window disappear.

Shooting in relatively dark places

Shoot at wide-angle after focusing in the telephoto position.

Note on the focus dial

The focus dial does not have a stop position.

Using the PROGRAM AE Function

You can select from four PROGRAM AE (Auto Exposure) modes to suit your shooting situation. When you use PROGRAM AE, you can get a Portrait effect (the subject is in focus and the background is out of focus), capture high-speed action, or record night views.

Selecting the Best Mode

Select one of four modes, referring to the following.



Portrait mode

- A still subject such as a person or a flower
- Zooming in on a subject in the telephoto mode
- A subject behind an obstacle such as a net

Sports mode

- Outdoor sports scene such as football, tennis, golf or skiing
- A landscape in a moving car

High-speed shutter mode


- A golf swing or a tennis match in fine weather with the ball captured clearly
- Playing back certain scenes with high-speed movements in a clear, sharp picture

Twilight mode

- Recording night views, neon signs or fireworks

Using the PROGRAM AE Function

(1) Open the AUTO LOCK cover. (2) Press PROGRAM AE. The indicator of the selected PROGRAM AE mode appears in the viewfinder and the display window.

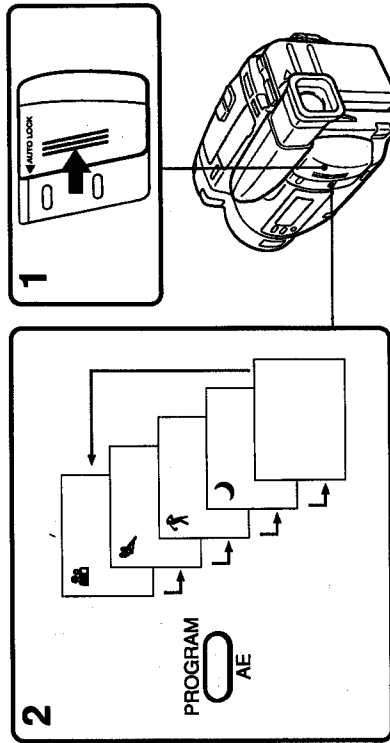

Note on shutter speed

The shutter speed in each PROGRAM AE mode is as follows:

Portrait mode — between 1/60 to 1/2000

Sports mode — between 1/60 to 1/500


High-speed shutter mode — 1/4000

Twilight mode — 1/60

Changing the Mode Settings

You can change the mode settings in the menu system to further enjoy the features and functions.

(1) Lift up the viewfinder. (2) Press MENU to display the menu in the viewfinder. [a] Menu for CAMERA mode, [b] Menu for PLAYER mode (3) Press ITEM to move the cursor and select the desired item. (4) Press SET to move the cursor or and set the desired mode. If you want to change the other modes, repeat steps 3 and 4. (5) Press MENU to erase the menu display.

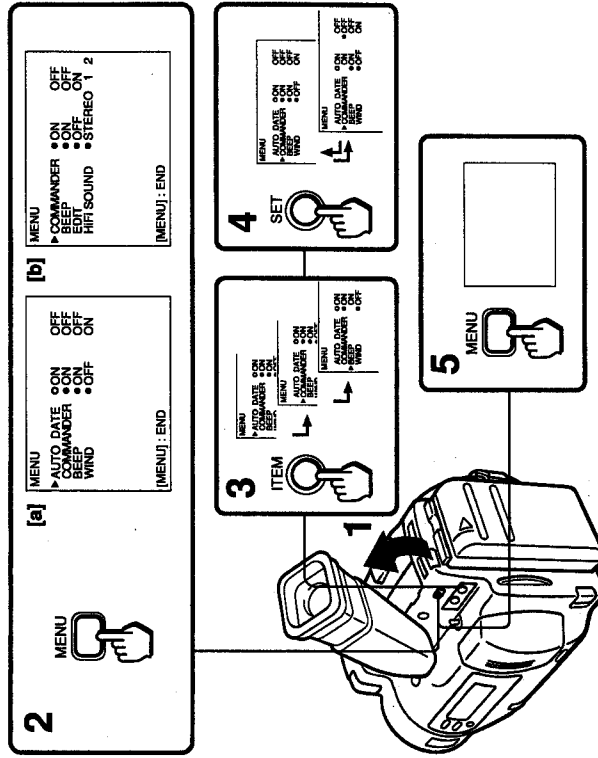


Note on the cursor ○
The settings of items marked with the cursor ○ are retained even when the battery is removed, as long as the lithium battery is in place.

Fade-in and Fade-out

You can fade a picture in or out with sound to give your recording a professional appearance. When fading in, you can make the picture gradually appear from black or mosaic while increasing the sound. When fading out, you can make the picture gradually fade to black or mosaic while decreasing the sound.

When Fading in [a]
(1) While the camcorder is in Standby mode, press FADER. (2) Press START/STOP. The fade indicator stops flashing and the recording starts fading in.

When Fading out [b]
(1) During recording, press FADER. (2) Press START/STOP. The fade indicator stops flashing and the picture fades out. Then, recording stops.

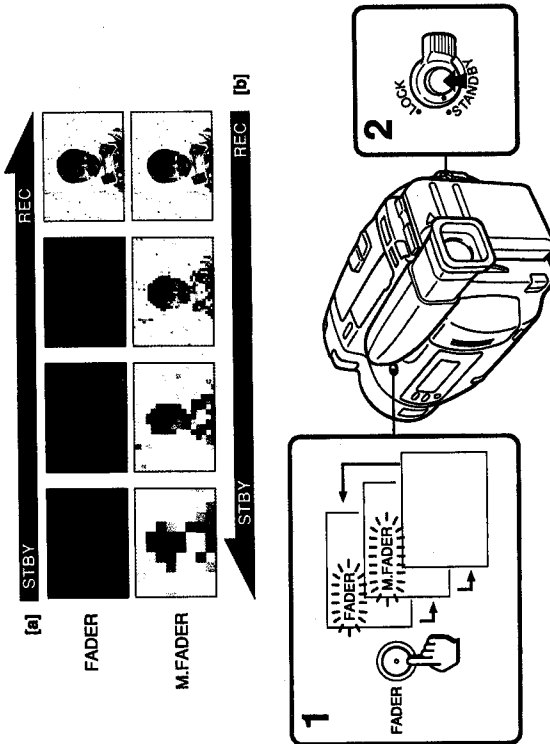

To Cancel the Fade-in/Fade-out Function
Before pressing START/STOP, press FADER until the fade indicator disappears.

Changing the Mode Settings

Selecting the Mode Setting of Each Item

- AUTO DATE <ON/OFF>**
In PLAYER mode, this option is not displayed.
- Select ON to record the date for 10 seconds after recording has started.
 - Select OFF for not recording the date.
- COMMANDER <ON/OFF>**
- Select ON when using the supplied Remote Commander for the camcorder.
 - Select OFF when not using the Remote Commander.
- BEEP <ON/OFF>**
- Select ON to hear the beep sound.
 - Select OFF otherwise.
- WIND <ON/OFF>**
In PLAYER mode, this option is not displayed.
- Select ON when recording in a strong wind.
 - Normally select OFF.
- EDIT <ON/OFF>**
In CAMERA mode, this option is not displayed.
- Select ON to minimize picture deterioration when editing.
 - Select OFF otherwise.
- HIFI SOUND <STEREO/1/2>**
In CAMERA mode, this option is not displayed.
- Normally select STEREO.
 - Select 1 or 2 to play back a dual sound track tape.


Editing onto Another Tape

You can create your own video program by editing with any other 8 mm, Hi8, Hi8 Hi8 VHS, S-VHS, Hi8 VHS, S-VHS, S-VHS, S-VHS, ED Betamax or ED Betamax VCR that has audio/video inputs.

Before Editing

Connect the camcorder to the VCR using the A/V connecting cable (supplied). (p. 21)
Set the input selector on the VCR to LINE, if available.

(1) Set the POWER switch to PLAYER. (2) Set EDIT to ON in the menu system (p. 32).

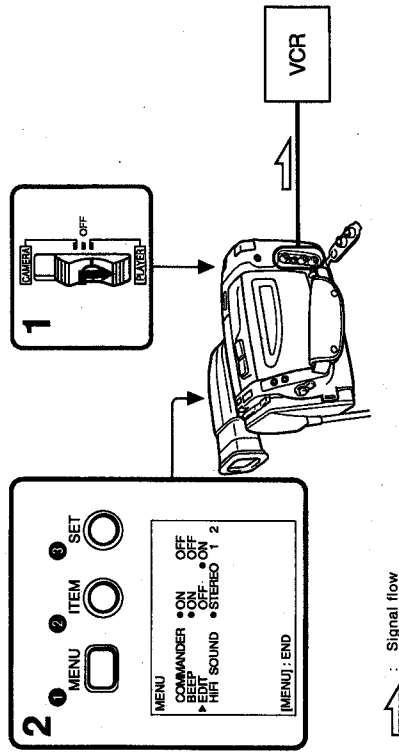

If your VCR is a monaural type, connect only the white plug for audio on both the camcorder and VCR.

Editing onto Another Tape

Starting Editing

(1) Insert a blank tape (or a tape you want to record over) into the VCR. And insert your recorded tape into the camcorder. (2) Play back the recorded tape on the camcorder until you locate the point where you want to start editing, then set the camcorder in the Playback pause mode. (3) On the VCR, locate the recording start point and set the VCR in the recording pause mode. (4) Press **II** on the camcorder and VCR simultaneously to start editing.

To Edit More Scenes

Repeat steps 2 to 4.

To Stop Editing Momentarily

Press **II** on the VCR.

To Stop Editing

Press **□** on both the camcorder and the VCR.

Use of the EDITSEARCH button

You can play back the tape in normal/reverse direction by keep pressing EDITSEARCH during Playback pause mode. You can also play back still pictures successively at specific intervals by pressing EDITSEARCH intermittently.

Note on the EDIT mode

When you set EDIT to ON in the menu system, you can keep picture deterioration resulting from editing to a minimum. However, when you edit or copy to another VCR, avoid using the edited tape for multiple generations of editing. After editing, be sure to set EDIT to OFF.

Note on the DISPLAY function

If you have displayed the viewfinder screen indicators on the TV, erase the indicators by pressing DISPLAY on the Remote Commander so that they will not be superimposed on the edited tape.

Additional Information

Playback Modes

The playback mode (SP or LP) is selected automatically according to the format in which the tape has been recorded. The quality of the recorded picture in LP mode, however, will not be as good as that in SP mode.

Note on AFM Hi-Fi stereo

When you play back a tape, the sound is in monaural if:

- You record the tape using this camcorder, then play it back on an AFM Hi-Fi monaural video recorder/player.
- You record the tape on an AFM Hi-Fi monaural video recorder, then play it back on this camcorder.

Dual sound

You can play back a dual sound track tape. Set HI-FI SOUND to "1" or "2" in the menu system. (p. 32)

LP (long play) mode

When you play back a tape recorded in LP mode, the LP indicator lights up in the viewfinder. This camcorder cannot record a tape in LP mode.

Foreign 8 mm video

You cannot play back software recorded on a different TV color system. Because the TV color systems differ from country to country, you may not be able to play back foreign pre-recorded software. Refer to page 39 to check the TV color system of foreign countries.

Maintenance Information and Precautions

Moisture Condensation


If the camcorder is brought directly from a cold place to a warm place, moisture may condense inside the camcorder, on the surface of the tape, or on the lens. In this condition, the tape may stick to the head drum and be damaged or the unit may not operate correctly. To prevent possible damage under these circumstances, the camcorder is furnished with moisture sensors. However, take the following precautions.

Inside the Camcorder

When the **☐** and **▲** indicators flash in the viewfinder, moisture has condensed inside the camcorder. If this happens, no other functions except for tape ejection will work.

Eject the tape, turn off the camcorder and leave it with the cassette holder open for at least one hour in a dry place.

The camcorder can be used again if the **☐** indicator does not appear when the power is turned on again.

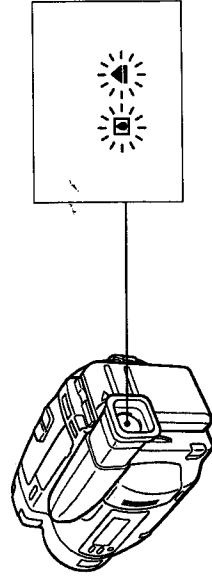

Maintenance Information and Precautions

On the Surface of the Tape

If there is moisture on the surface of the tape, when the cassette is inserted and a tape transport button is pressed, the ▲ indicator in the viewfinder flashes. In this case, no other functions except for tape ejection will work. **Eject the tape, turn off the camcorder and leave it with the cassette holder open for at least one hour in a dry place.** The camcorder can be used again if the ▲ indicator does not appear when you insert the cassette and press one of the tape transport buttons.

On the Lens

If moisture condenses on the lens, no indicator appears, but the picture becomes dim. Turn off the power and do not use the camcorder for about one hour.

How to Prevent Moisture Condensation

When bringing the camcorder from a cold place to a warm place, put the camcorder in a plastic bag and allow it to adapt to room conditions over a period of time.

- (1) Be sure to tightly seal the plastic bag containing the camcorder.
- (2) Remove the bag when the air temperature inside it has reached the temperature surrounding it (after about 1 hour).

Video Head Cleaning

To ensure clear pictures, clean the video heads periodically. When playback pictures are "noisy" or hardly visible, the video heads may be contaminated.



- [a] Slight contamination
- [b] Critical contamination

If this happens, clean the video heads with the Sony V8-25CLH cleaning cassette (not supplied). After checking the picture, if it is still "noisy", repeat the cleaning. (Do not repeat cleaning more than 5 times.)

Caution


Do not use a commercially available wet-type cleaning cassette. It may damage the video heads.

Note

If the V8-25CLH cleaning cassette is not available in your area, consult your Sony service facility.

Removing Dust from Inside the Viewfinder


- (1) While pressing down the hook, slide the viewfinder barrel in the direction of the arrow and remove it from the viewfinder. (2) Clean the surface with a commercially available blower.

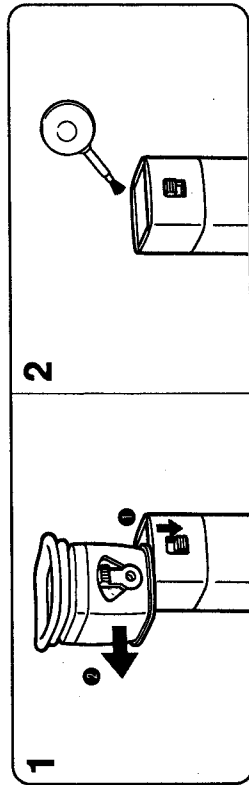

Precautions

Camcorder Operation

- Operate the camcorder on 6.0 V (battery pack) or 7.5 V (AC power adaptor).
- For DC or AC operation, use the accessories recommended in this manual.
- Should any solid object or liquid get inside the casing, unplug the camcorder and have it checked by qualified personnel before operating it any further.
- Do not pick up the camcorder by the viewfinder [a].
- Avoid rough handling or mechanical shock. Be particularly careful of the lens.
- Keep the POWER switch set to OFF when not using the camcorder.
- Do not wrap up the camcorder and operate it since heat may build up internally.
- Keep the camcorder away from strong magnetic fields or mechanical vibration.
- Do not let sand get into the camcorder. When you use the camcorder on a sandy beach or dusty place, protect it from the sand or dust. Sand or dust may cause the unit to malfunction and sometimes the malfunction cannot be repaired [b].
- Do not let the camcorder get wet. Keep the camcorder away from rain or sea water. It may cause the unit to malfunction and sometimes the malfunction cannot be repaired [c].

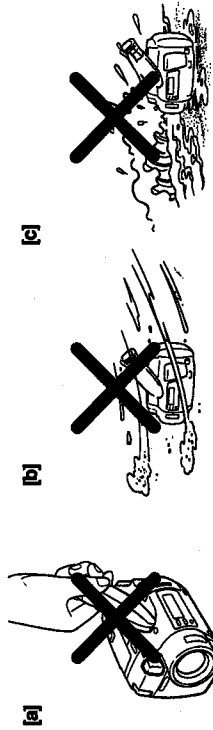

Maintenance Information and Precautions

On Handling Tapes

Do not insert anything in the small holes on the rear of the cassette. These holes are used to sense the type, thickness of tape, or if the tab is out or in, etc.

Camcorder Care

- When the camcorder is not to be used for a long time, disconnect the power source and remove the tape. Periodically turn on the power, operate the camera and player sections and play back a tape for about 3 minutes.
- Clean the lens with a soft brush to remove dust. If there are fingerprints on it, remove them with a soft cloth.
- Clean the camcorder body with a dry soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.

AC Power Adaptor

- Repeated charging while some capacity remains causes a lowering of battery capacity. However, the original battery capacity can be recovered if you use the battery completely and charge it fully again.
- Charge the battery pack on a flat place without vibration.
- The battery pack will get hot during charging. This is normal.
- Video equipment cannot be operated while charging the battery pack.
- Do not continuously recharge a charged battery pack as that will cause the battery pack efficiency to deteriorate.

Charging temperature

The temperature range for charging is 5°C to 35°C (41°F to 95°F). However, to provide maximum battery efficiency, the recommended temperature range when charging is 10°C to 30°C (50°F to 86°F).

Others

- The AC power cord should only be changed at a qualified service shop.
- The nameplate indicating operating voltage, power consumption, etc. is located on the bottom.
- A negligible amount of electric current will flow into the AC power adaptor (even with the selector in the center position) as long as the AC power adaptor is plugged into the wall outlet.
- Unplug the unit from the wall (mains) outlet when not in use for a long time. To disconnect the cord (mains lead), pull it out by the plug. Never pull the cord itself.
- Do not operate the unit with a damaged cord or if the unit has been dropped or damaged.
- Be sure that nothing metallic comes into contact with the metal parts of the connecting plate. If this happens, a short may occur and the unit may be damaged.
- Always keep the metal contacts clean.
- Do not disassemble the unit.
- Do not apply mechanical shock or drop the unit.
- While the unit is in use, particularly during charging, keep it away from AM receivers and video equipment because it will disturb AM reception and video operation.
- The unit becomes warm while in use. This is normal.
- Do not place the unit in locations that are:
 - Extremely hot or cold
 - Dusty or dirty
 - Very humid
 - Vibrating


If any difficulty should arise, unplug the unit and contact your nearest Sony dealer.

Using Your Camcorder Abroad

Each country has its own electricity and TV color systems. Before using your camcorder abroad, check the following points.

Power Sources

You can use your camcorder in any country with the supplied AC power adaptor within 110 V to 240 V AC, 50/60 Hz. Use a commercially available AC plug adaptor [a], if necessary, depending on the design of the wall outlet [b].



Difference in Color Systems

This camcorder is an NTSC system based camcorder. If you want to view the playback picture on a TV, it must be an NTSC system based TV or a PAL-M system based TV with an NTSC/PAL-M transcoder. Check the following list.

NTSC system countries

Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

PAL system countries

Australia, Austria, Belgium, China, Denmark, Finland, former West Germany, Great Britain, Holland, Hong Kong, Italy, Kuwait, Malaysia, New Zealand, Norway, Portugal, Singapore, Spain, Sweden, Switzerland, Thailand, etc.

PAL-M system country

Brazil


PAL-N system countries

Argentina, Paraguay, Uruguay

SECAM system countries


Bulgaria, France, Guiana, Hungary, Iran, Iraq, Monaco, Poland, former Soviet Union, etc.

Identifying the Parts

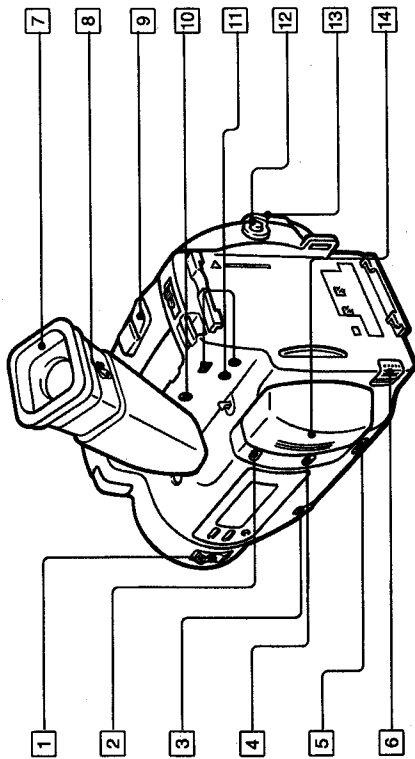

- 1 POWER switch (p. 16, 22)
- 2 FOCUS button (p. 27)
- 3 Focus dial (p. 27)
- 4 PROGRAM AE button (p. 29)
- 5 STEADY SHOT switch (p. 19)
- 6 BATT (battery eject) knob (p. 7)
- 7 Eyecup

- 8 Viewfinder lens adjustment lever (p. 14)
- 9 Power zoom button (p. 18)
- 10 REC START/STOP button (p. 15)
- 11 Menu operation buttons (p. 31)
- 12 START/STOP button (p. 16)
- 13 STANDBY switch (p. 16)
- 14 AUTO LOCK cover (p. 16, 25)

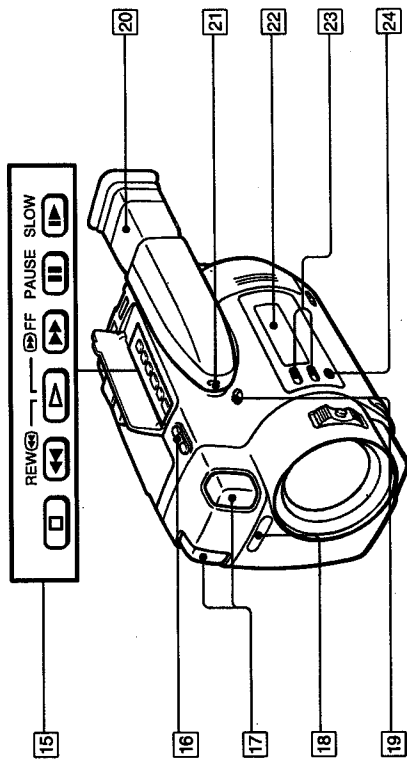


- 15 Tape transport buttons (p. 22)
 - (stop)
 - ◀ REW (rewind)
 - ▶ (playback)
 - ▶▶ FF (fastforward)
 - || PAUSE
 - ▶ SLOW (slow playback)
- 16 EDIT/SEARCH button (p. 20)
- 17 Built-in microphone (stereo)
- 18 Remote sensor (p. 45)
Aim the Remote Commander here for remote control.
- 19 FADER button
- 20 Viewfinder (p. 14, 16)
- 21 Camera recording/battery lamp
- 22 Display window (p. 43, 50)
- 23 DATE (+) and TIME (NEXT) buttons (p. 12)
- 24 RESET button (p. 17)

Identifying the Parts

Remote Commander


The buttons that have the same name on the Remote Commander and on the camcorder function identically.

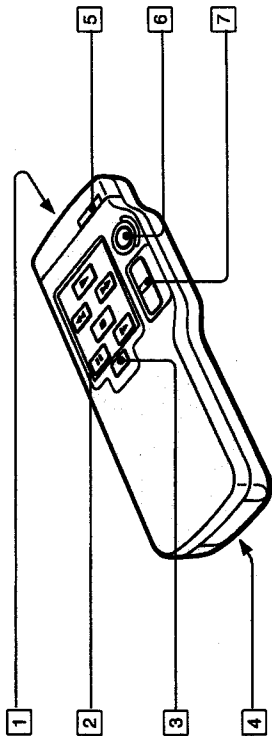


- 1 Transmitter
Point toward the remote sensor to control the camcorder after turning on the POWER switch on the camcorder.
- 2 Tape transport buttons
- 3 DISPLAY button
- 4 Size AA (R6) battery holder (p. 11)
- 5 HOLD Switch
- 6 START/STOP button
- 7 Power zoom button
The zooming speed is unchangeable in the Remote Commander.

Using the Remote Commander

Make sure that the COMMANDER mode is set to ON in the menu system on the camcorder, and that the HOLD switch on the Remote Commander is not working.

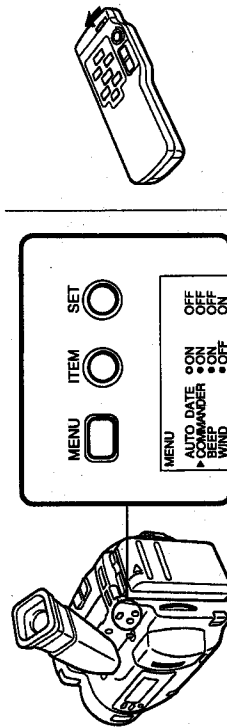

Remote Control Direction

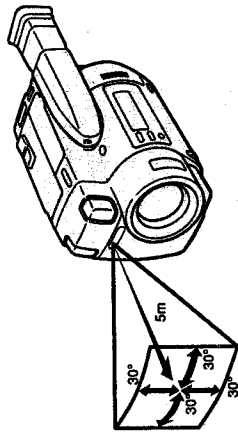


Notes on the Remote Commander

- Keep the remote sensor away from strong light sources such as direct sunlight or illumination. Otherwise, the remote control may not be effective.
- Be sure that there is no obstacle between the remote sensor and the Remote Commander.
- This camcorder works at commander mode VTR 2. The commander modes (1, 2 and 3) are used to distinguish this camcorder from other Sony VCRs to avoid remote control misoperation. If you use another Sony VCR at commander mode VTR 2, we recommend you change the commander mode or cover the remote sensor of the VCR with black paper.

Attaching the Shoulder Strap

Attach the supplied shoulder strap to the hooks for the shoulder strap (p. 42).

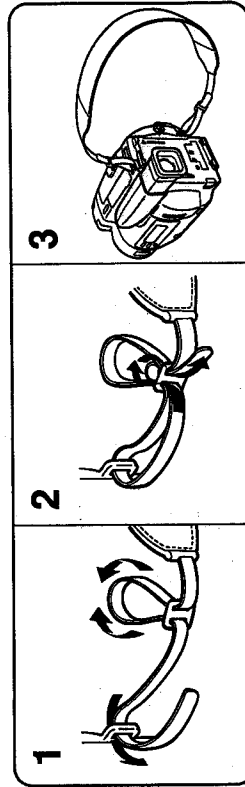


Identifying the Parts


SECTION 2 DISASSEMBLY

NOTE: Follow the disassembly procedure in the numerical order given.


2-1. REMOVAL OF FRONT PANEL ASSEMBLY

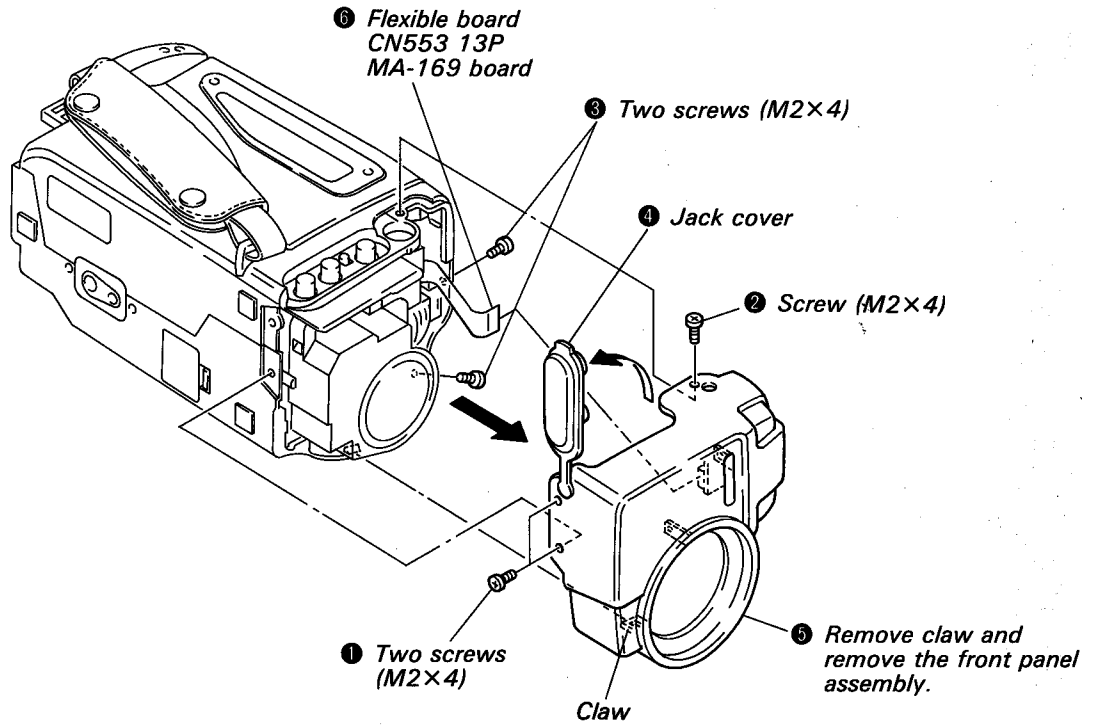


2-2. REMOVAL OF CASSETTE LID ASSEMBLY

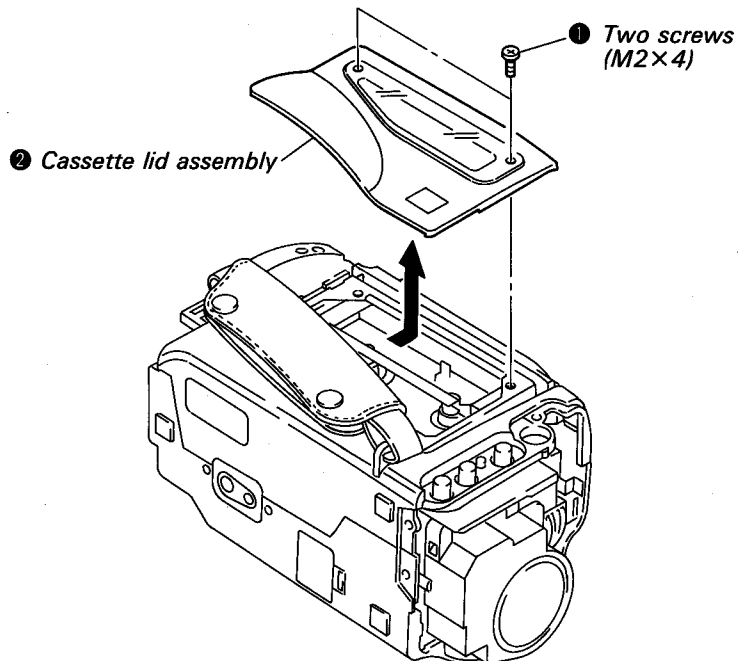


2-3. REMOVAL OF CABINET (L) ASSEMBLY

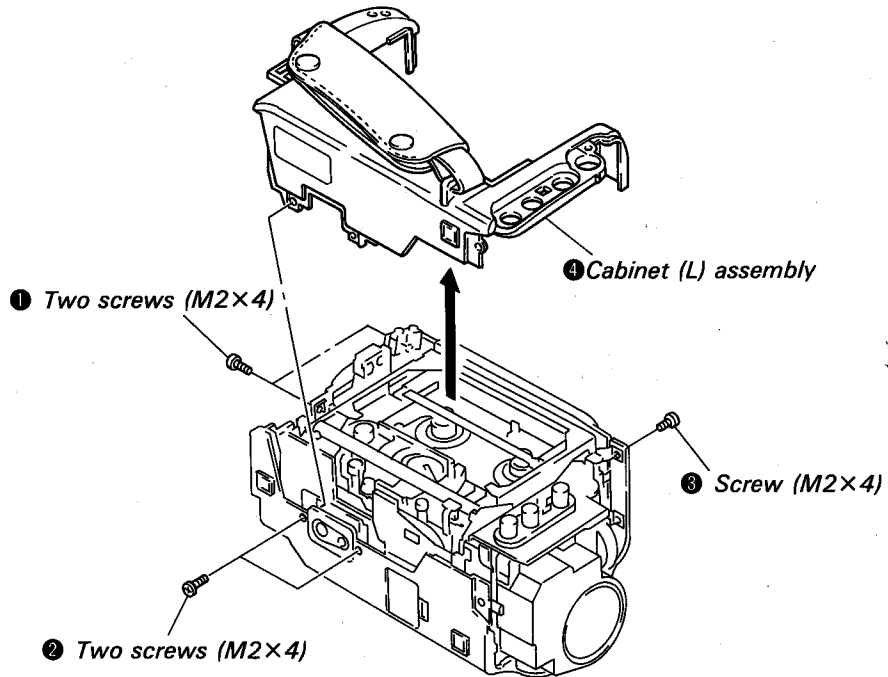


2-4. REMOVAL OF CABINET (R) ASSEMBLY

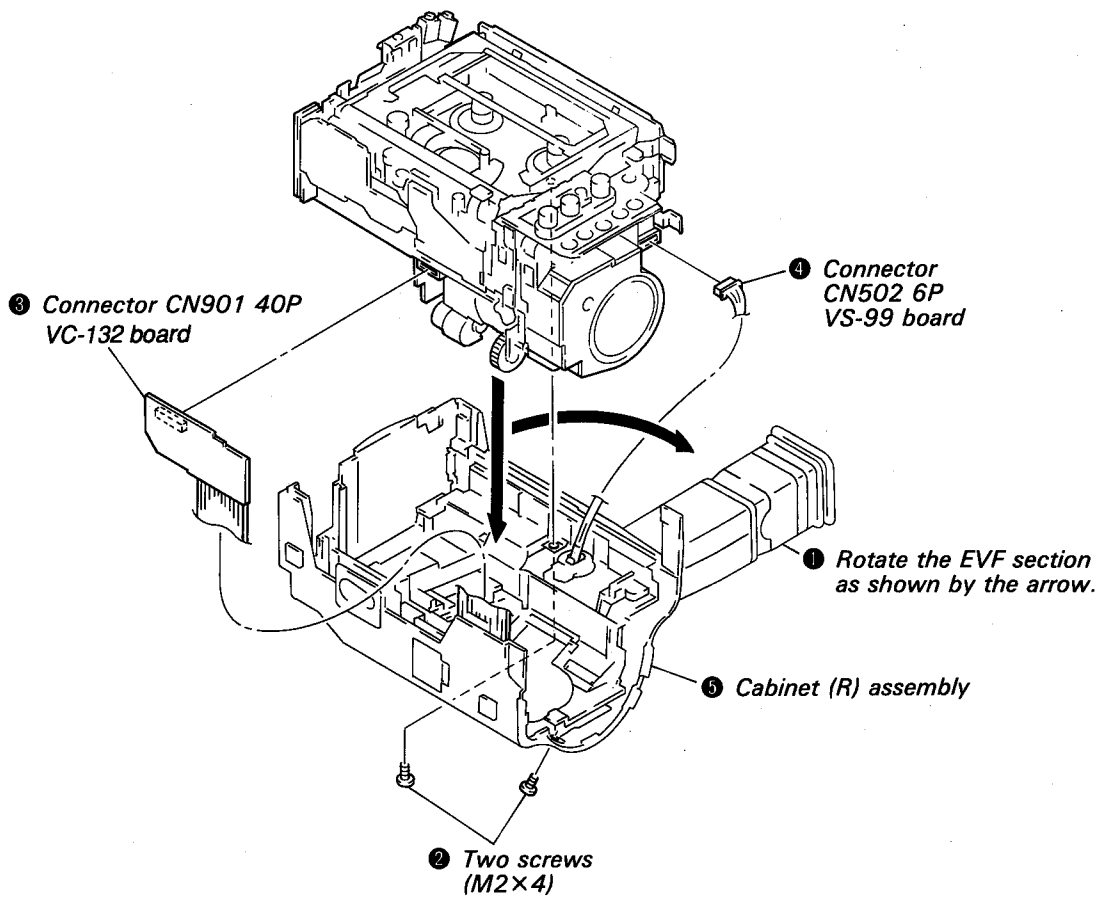


2-5. REMOVAL OF CONTROL SWITCH BLOCK

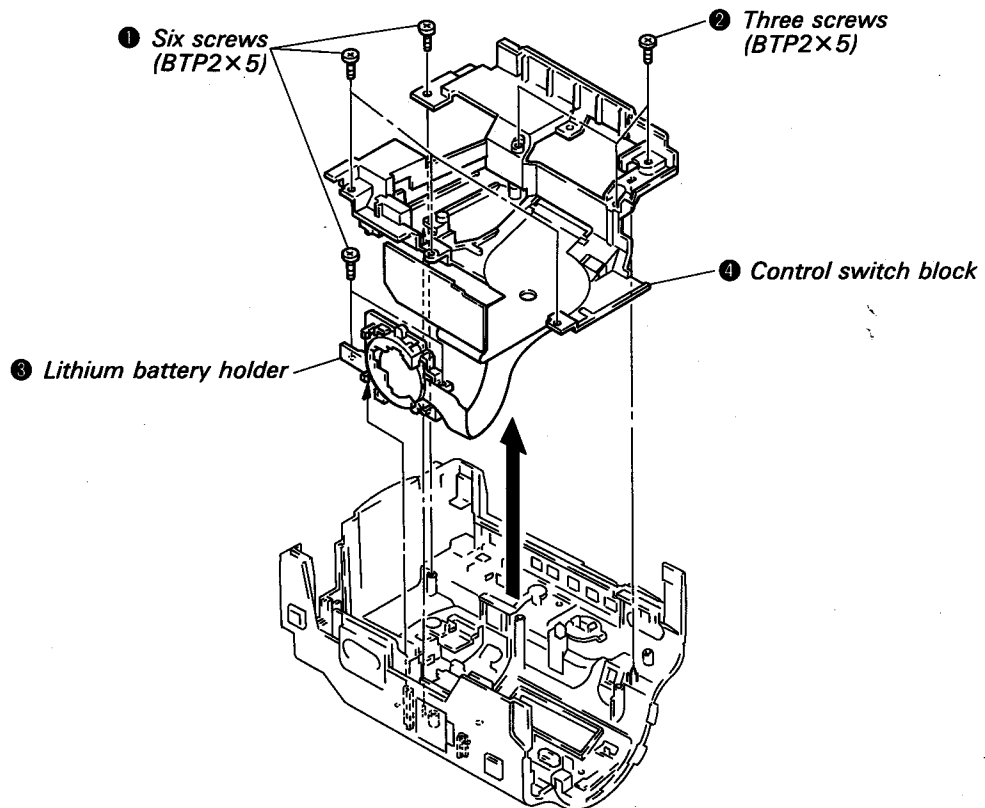


2-6. REMOVAL OF DD-55 AND SW-222 BOARDS

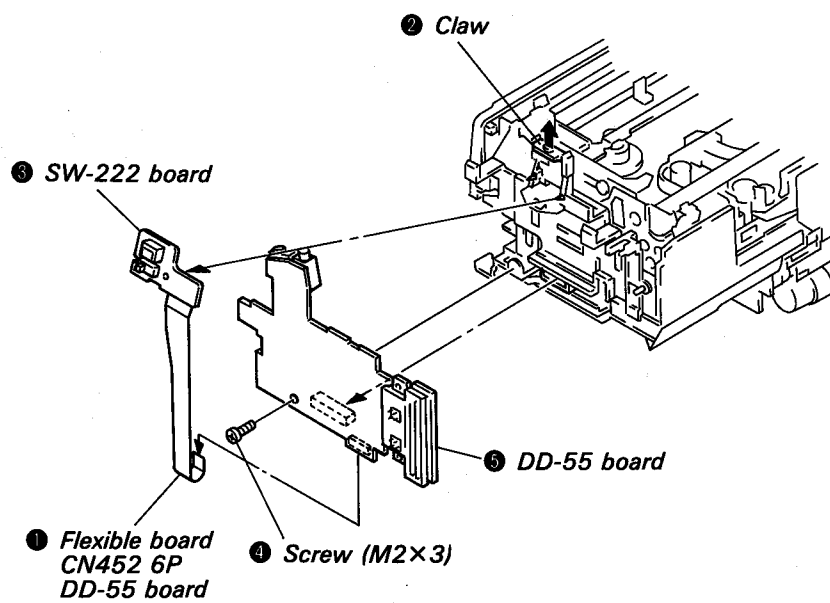


2-7. REMOVAL OF LS LID ASSEMBLY

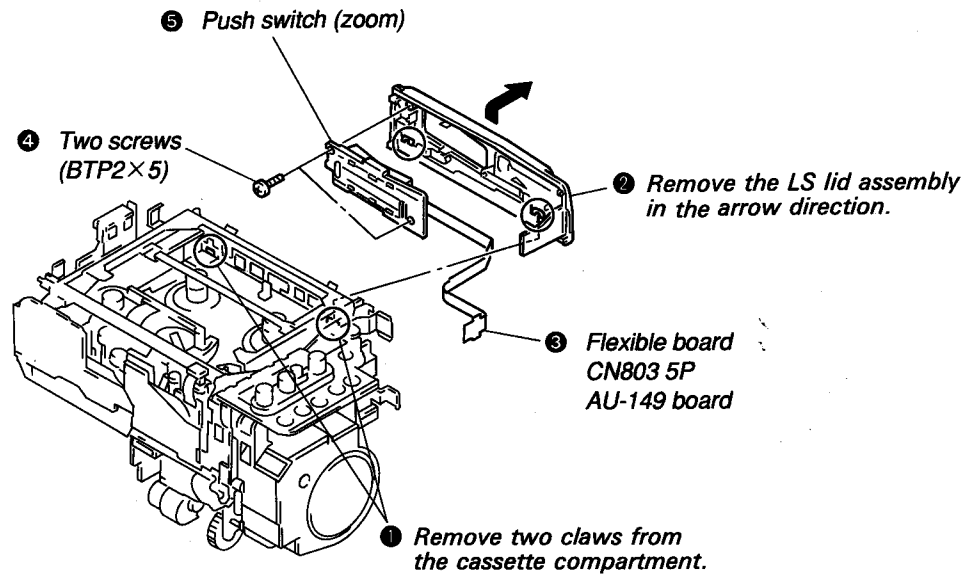


2-8. OPENING OF VC-132 BOARD

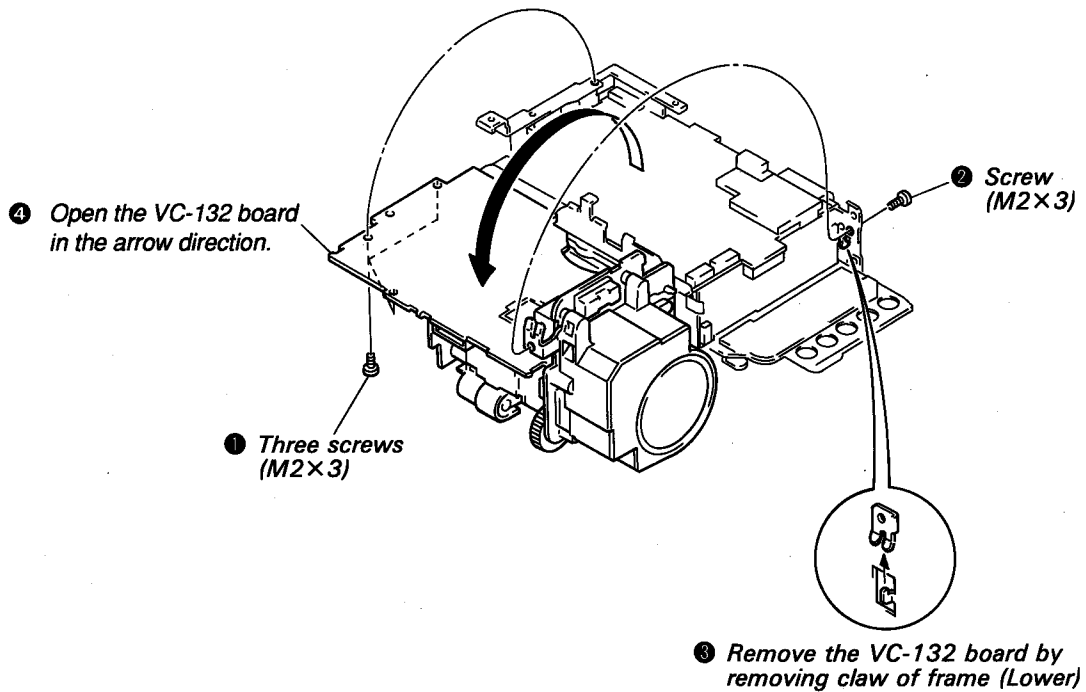


2-9. REMOVAL OF LENS ASSEMBLY (CD-105 BOARD)

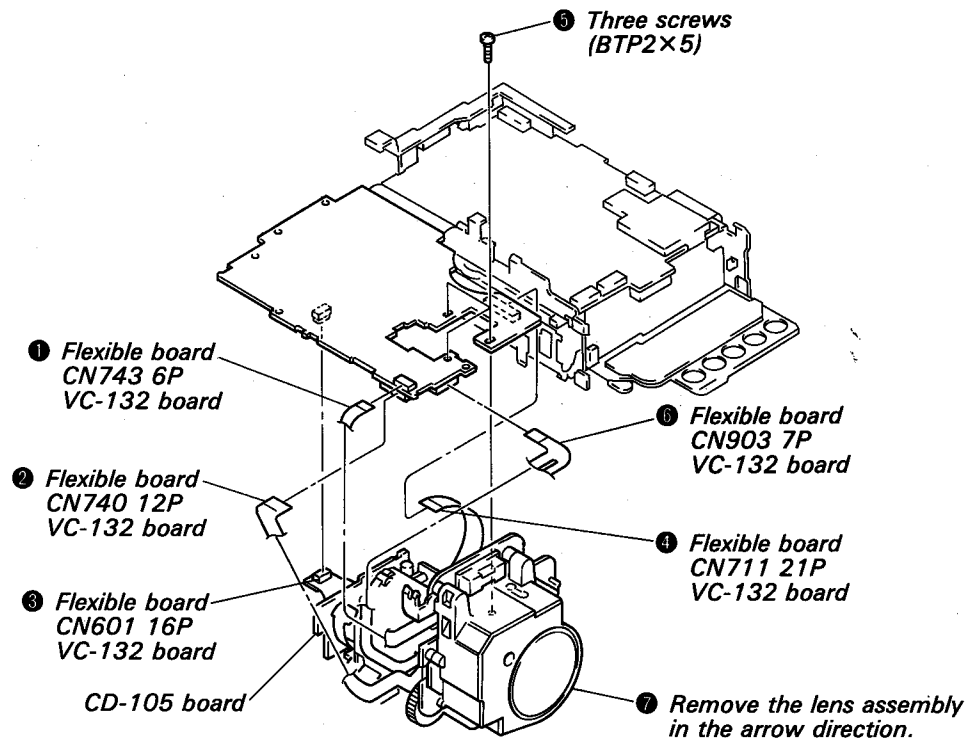


2-10. REMOVAL OF VS-99 BOARD

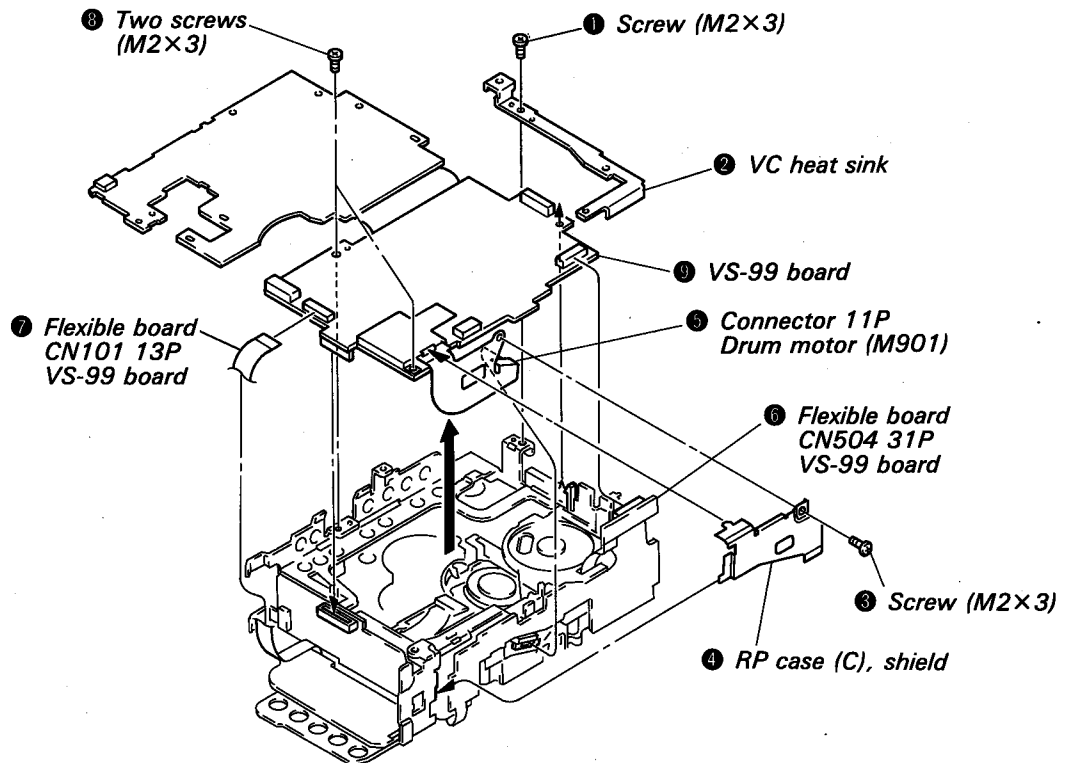


2-11. REMOVAL OF JK-98 AND AU-149 BOARDS

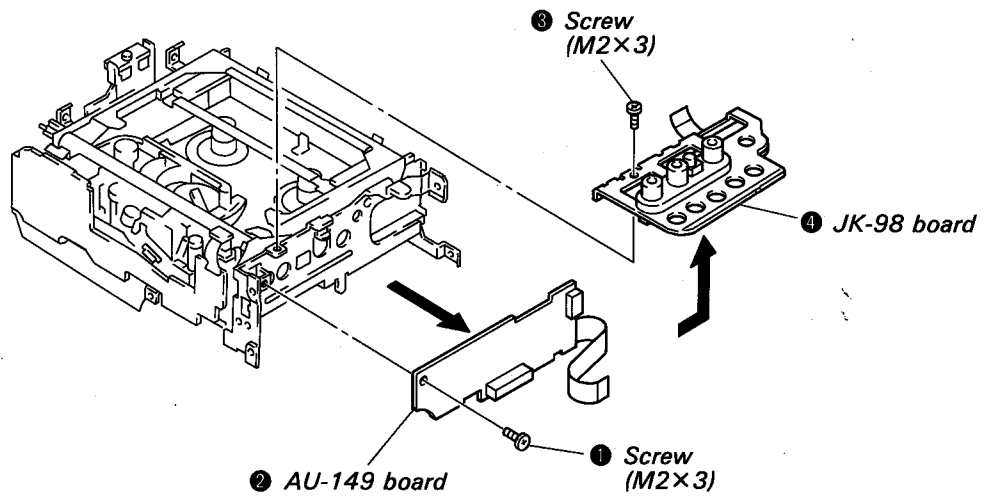

2-12. REMOVAL OF SL-32 BOARD

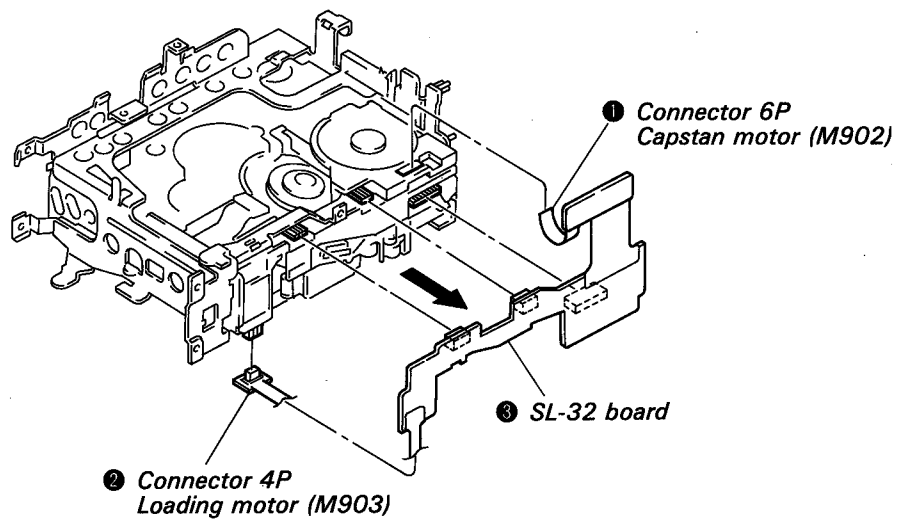

2-13. REMOVAL OF EVF ASSEMBLY

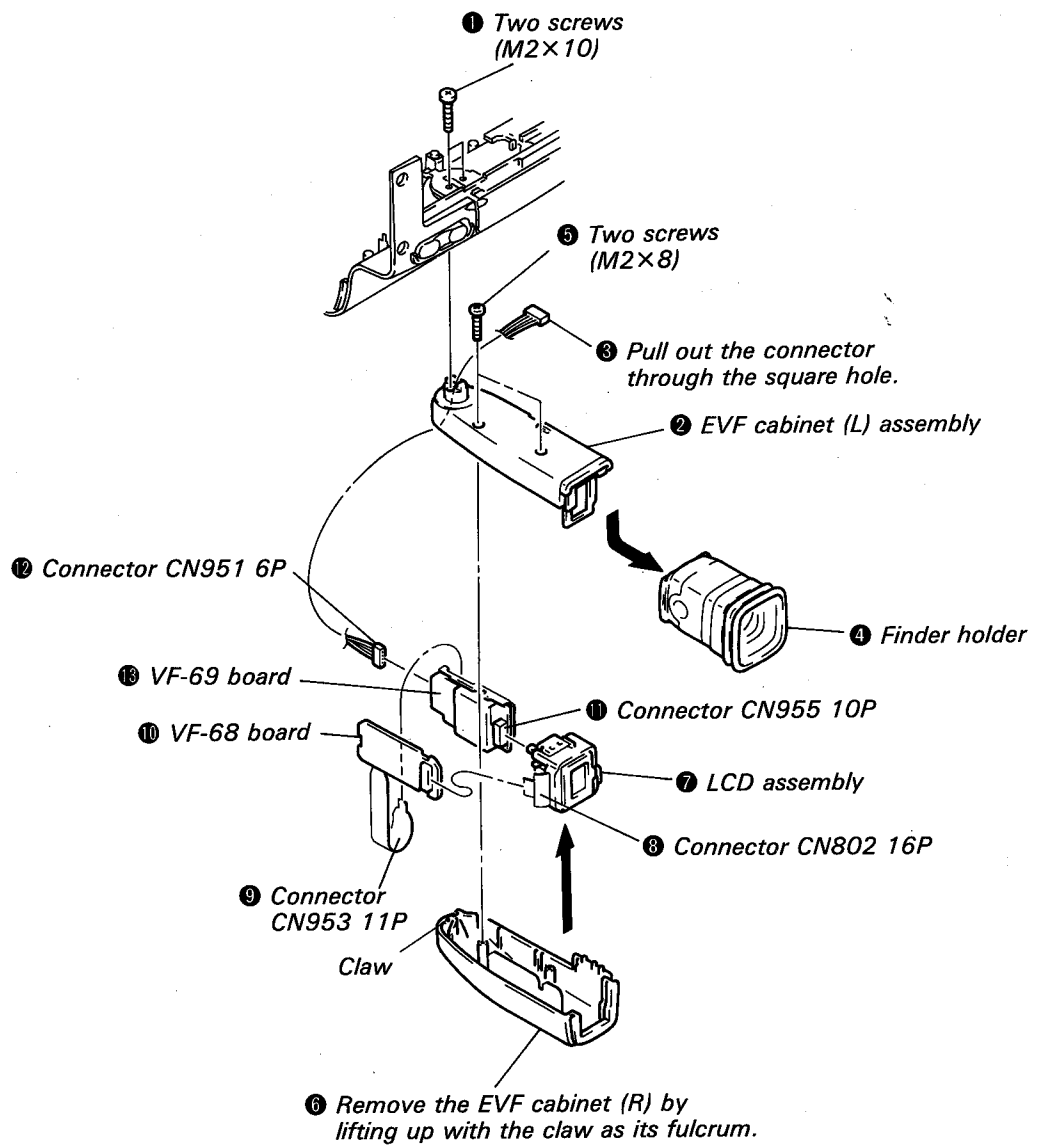

SECTION 5 EXPLODED VIEWS

NOTE:


● -xx,-x mean standardized parts, so they may have some differences from the original one.

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (#mark) list is given in the last of this parts list.

The components identified by mark Δ or dotted line with mark. Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

5-1. CABINET (L) AND FRONT PANEL ASSEMBLIES

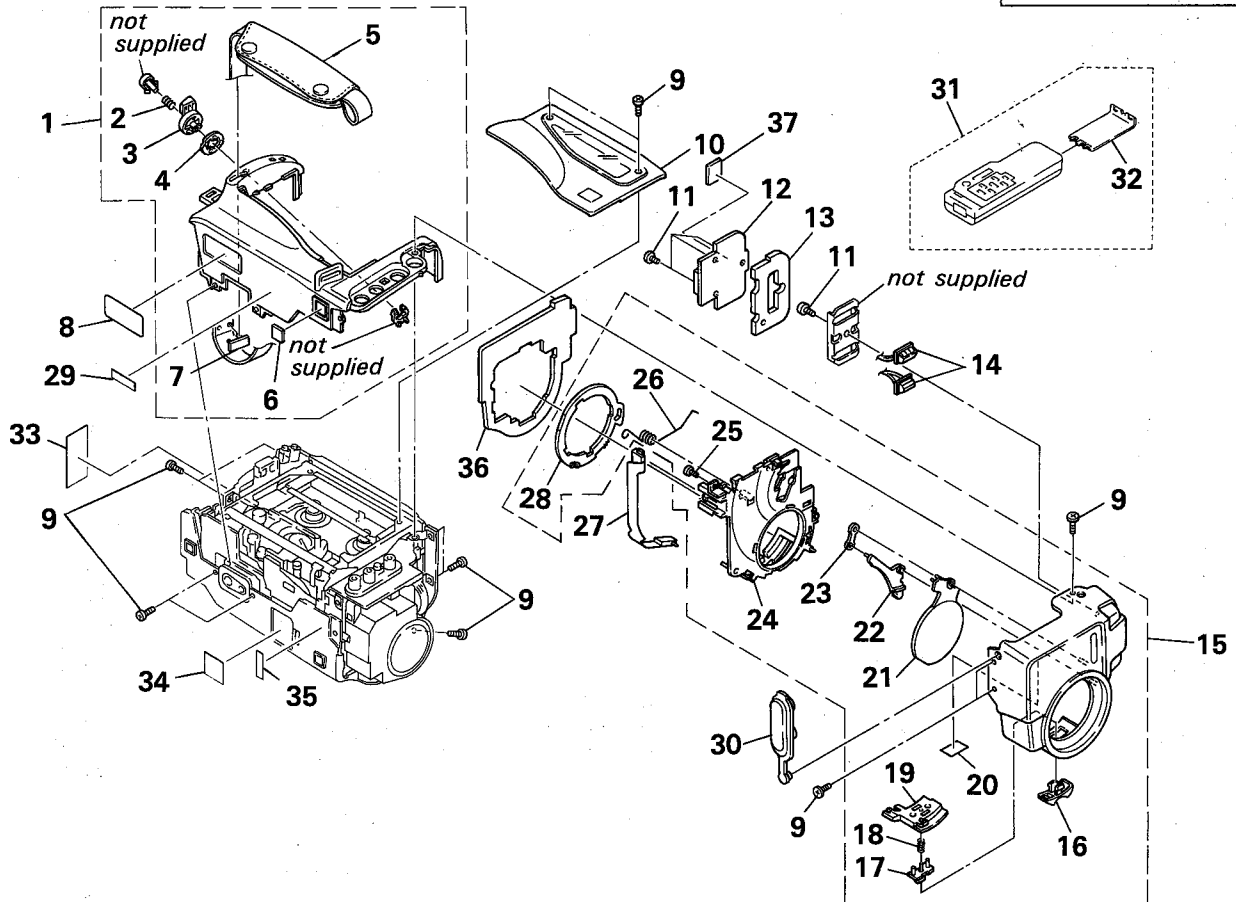


Ref. No.	Part No.	Description	Remark
1	X-3943-241-1	CABINET (L) ASSY	
2	3-578-221-00	SPRING, COMPRESSION	
3	3-942-985-01	KNOB, STAND-BY	
4	3-736-364-01	SPRING	
5	3-736-807-01	BELT, GRIP	
* 6	3-949-383-01	FOOT, RUBBER	
7	3-942-895-01	STOPPER, BELT	
* 8	3-955-163-01	LABEL, MODEL NUMBER (U/C) (TR91)	
* 8	3-956-513-01	LABEL, MODEL NUMBER (NTE) (TR636)	
9	3-719-381-01	SCREW (M2X4)	
10	X-3943-365-1	LID ASSY, CASSETTE (TR91)	
10	X-3943-442-1	LID ASSY, CASSETTE (TR636)	
11	3-719-601-01	SCREW (B2X5), TAPPING	
12	A-7063-781-A	MA-169 BOARD, COMPLETE	
* 13	3-955-754-01	CUSHION, ACOUSTIC ISOLATION	
14	1-542-162-11	MICROPHONE UNIT	
15	X-3943-243-1	PANEL ASSY, FRONT	
16	3-955-332-01	KNOB, POWER	
* 17	3-955-334-01	LOCK, POWER KNOB	

Ref. No.	Part No.	Description	Remark
18	3-303-973-01	SPRING, COMPRESSION	
* 19	3-955-333-01	SLIDER, POWER KNOB	
* 20	3-332-189-01	SPACER (A)	
21	3-955-331-01	COVER, LENS	
* 22	3-955-330-01	LEVER, CONVERSION	
23	3-955-289-01	LEVER, JOINT	
* 24	3-955-307-01	RETAINER, LENS COVER	
25	3-318-203-71	SCREW (B1.7X5), TAPPING	
26	3-955-291-01	SPRING, LENS COVER	
27	1-692-680-11	SWITCH ASSY BLOCK	
* 28	3-955-335-01	RING, CONVERSION	
* 29	3-704-367-01	LABEL (TR91:US)	
30	3-955-338-01	COVER, JACK	
31	1-467-339-11	REMOTE COMMANDER (RMT-706)	
32	3-947-500-01	LID, BATTERY CASE	
* 33	3-703-845-01	LABEL (N) (U/C), MAIN CAUTION (TR91)	
34	3-704-256-01	LABEL, CAUTION (TR91:US)	
35	3-954-355-01	LABEL (C), NI-CD RECYCLE (TR91)	
* 36	3-956-191-01	CUSHION (ISO)	
* 37	3-957-198-01	CUSHION (MAP)	


**SECTION 3
DIAGRAMS**

3-1. CIRCUIT BOARDS LOCATION

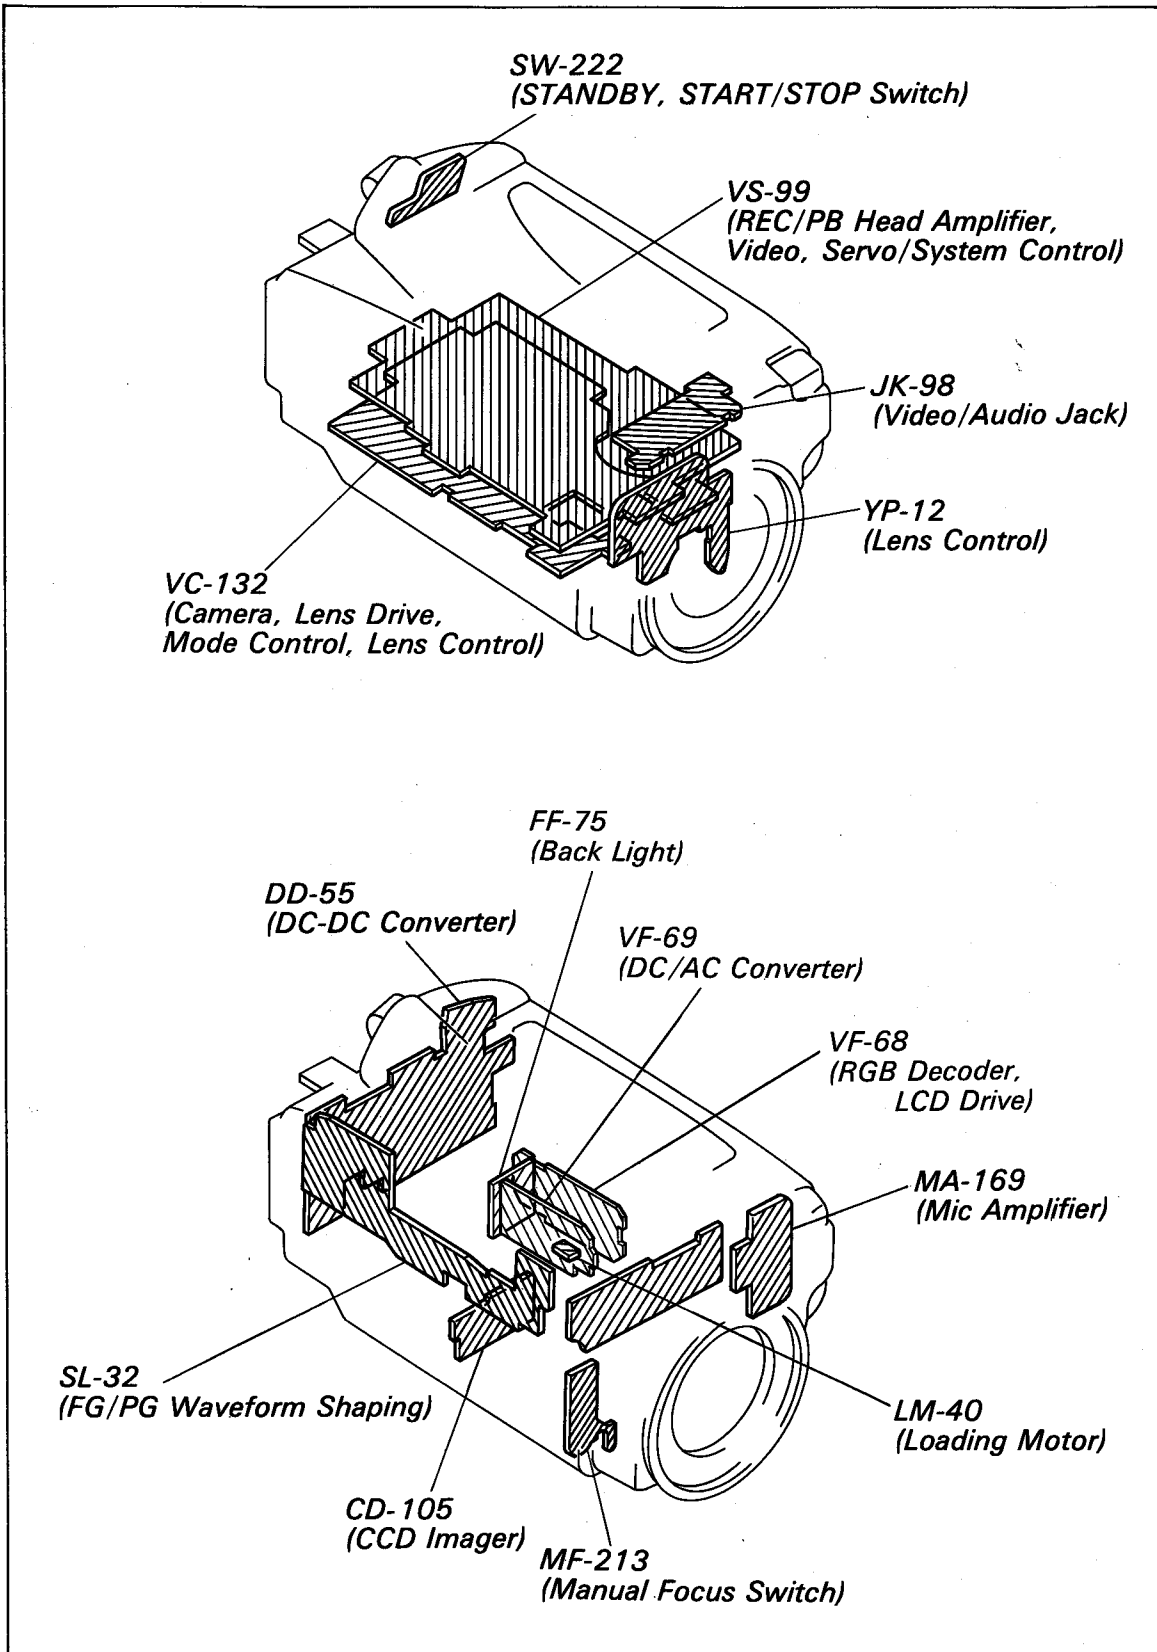


4-3. SEMICONDUCTORS

DTC143TE-TL
MSA1586-BC
MSC4116-B/C
RN1302-TE85L
UN511E
UN5113
UN5213
UN5215
UN9113
2SA1162-G
2SA1611-M5M6
2SA1865
2SB1218A-QRS
2SB1295-UL5
2SB1462-Q
2SC2223-F13
2SC4116-YG
2SC4154-F
2SC4178-F14
2SC4211-5.6.7
2SC4400-3/4/5
2SC4919
2SD1819A-R
2SD2216-Q

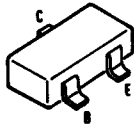


FC13

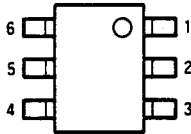


1: Gate 1
2: Drain 1
3: Source 1
4: Gate 2
5: Drain 2
6: Source 2

FP101
FP102


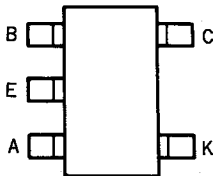


MTD9N10E





1. BASE
2. COLLECTOR
3. EMITTER
4. COLLECTOR



XN4401
XP4501

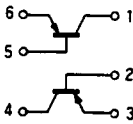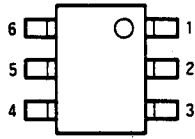


XN4601
XP4601

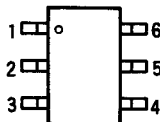


XN4113
XN4213
XN4501



2SB798-DL
2SB1122-S

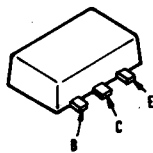


2SB1574




1. BASE
2. COLLECTOR
3. EMITTER
4. COLLECTOR


2SJ244JY

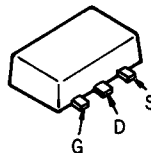



2SK1875

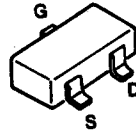



MA110
MA365(E)
1SS352

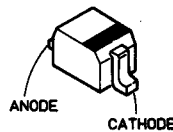



MA141WK
1SS181

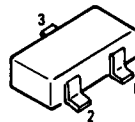


MA142WK

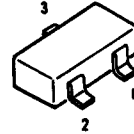



MA6S121-(TX)

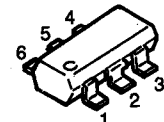


MA728
MA8082-M(TX)

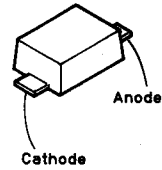



MA740
1SS226

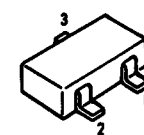



MA796

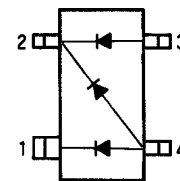


1SS250

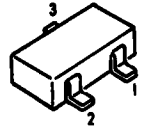

1SS302

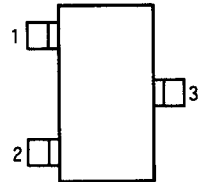

BR4371F



LN1251C



Cathode Anode

SECTION 5 EXPLODED VIEWS

NOTE:


● -xx,-x mean standardized parts, so they may have some differences from the original one.

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (#mark) list is given in the last of this parts list.

The components identified by mark Δ or dotted line with mark. Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


5-1. CABINET (L) AND FRONT PANEL ASSEMBLIES

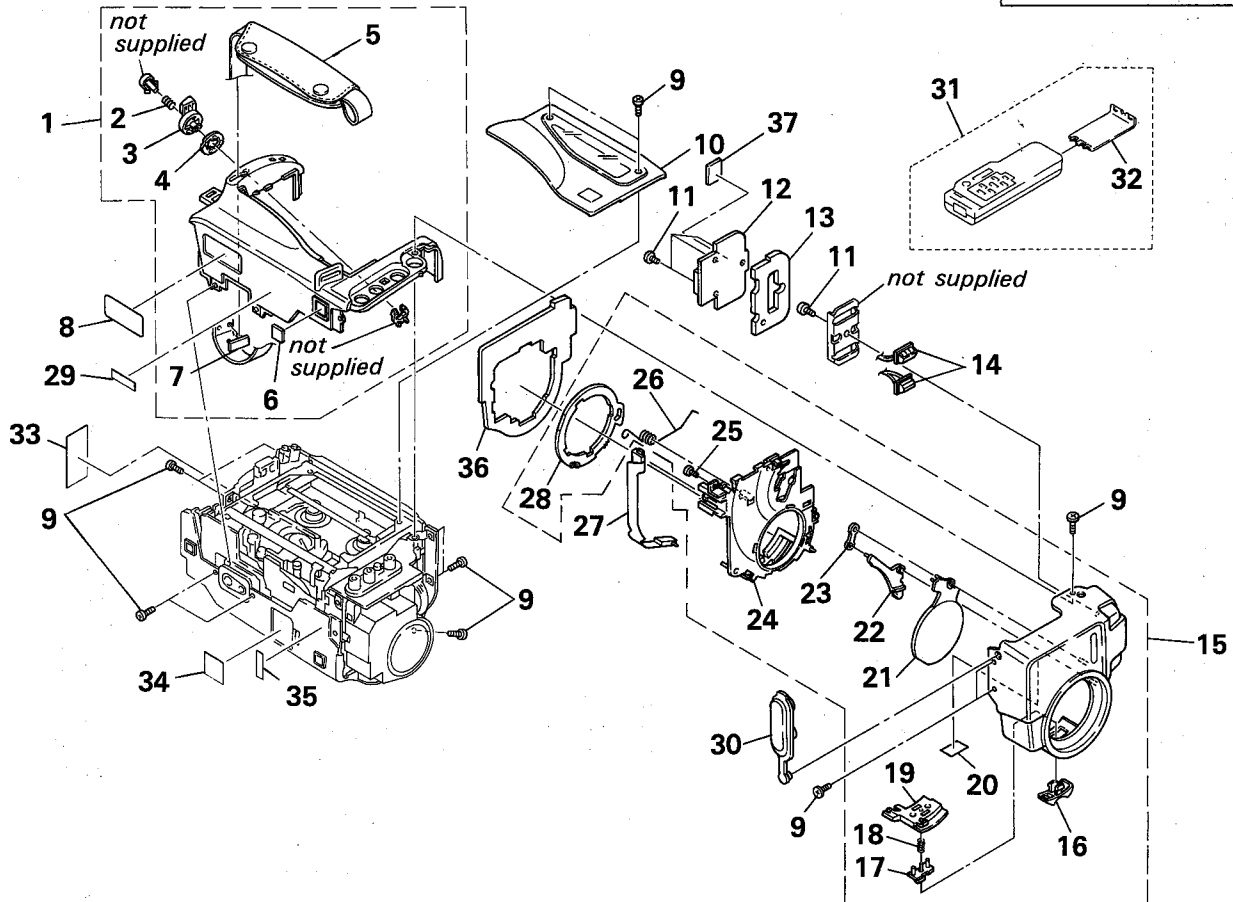

Ref. No.	Part No.	Description	Remark
1	X-3943-241-1	CABINET (L) ASSY	
2	3-578-221-00	SPRING, COMPRESSION	
3	3-942-985-01	KNOB, STAND-BY	
4	3-736-364-01	SPRING	
5	3-736-807-01	BELT, GRIP	
* 6	3-949-383-01	FOOT, RUBBER	
7	3-942-895-01	STOPPER, BELT	
* 8	3-955-163-01	LABEL, MODEL NUMBER (U/C) (TR91)	
* 8	3-956-513-01	LABEL, MODEL NUMBER (NTE) (TR636)	
9	3-719-381-01	SCREW (M2X4)	
10	X-3943-365-1	LID ASSY, CASSETTE (TR91)	
10	X-3943-442-1	LID ASSY, CASSETTE (TR636)	
11	3-719-601-01	SCREW (B2X5), TAPPING	
12	A-7063-781-A	MA-169 BOARD, COMPLETE	
* 13	3-955-754-01	CUSHION, ACOUSTIC ISOLATION	
14	1-542-162-11	MICROPHONE UNIT	
15	X-3943-243-1	PANEL ASSY, FRONT	
16	3-955-332-01	KNOB, POWER	
* 17	3-955-334-01	LOCK, POWER KNOB	

Ref. No.	Part No.	Description	Remark
18	3-303-973-01	SPRING, COMPRESSION	
* 19	3-955-333-01	SLIDER, POWER KNOB	
* 20	3-332-189-01	SPACER (A)	
21	3-955-331-01	COVER, LENS	
* 22	3-955-330-01	LEVER, CONVERSION	
23	3-955-289-01	LEVER, JOINT	
* 24	3-955-307-01	RETAINER, LENS COVER	
25	3-318-203-71	SCREW (B1.7X5), TAPPING	
26	3-955-291-01	SPRING, LENS COVER	
27	1-692-680-11	SWITCH ASSY BLOCK	
* 28	3-955-335-01	RING, CONVERSION	
* 29	3-704-367-01	LABEL (TR91:US)	
30	3-955-338-01	COVER, JACK	
31	1-467-339-11	REMOTE COMMANDER (RMT-706)	
32	3-947-500-01	LID, BATTERY CASE	
* 33	3-703-845-01	LABEL (N) (U/C), MAIN CAUTION (TR91)	
34	3-704-256-01	LABEL, CAUTION (TR91:US)	
35	3-954-355-01	LABEL (C), NI-CD RECYCLE (TR91)	
* 36	3-956-191-01	CUSHION (ISO)	
* 37	3-957-198-01	CUSHION (MAP)	


5-2. CABINET (R) AND EVF ASSEMBLIES

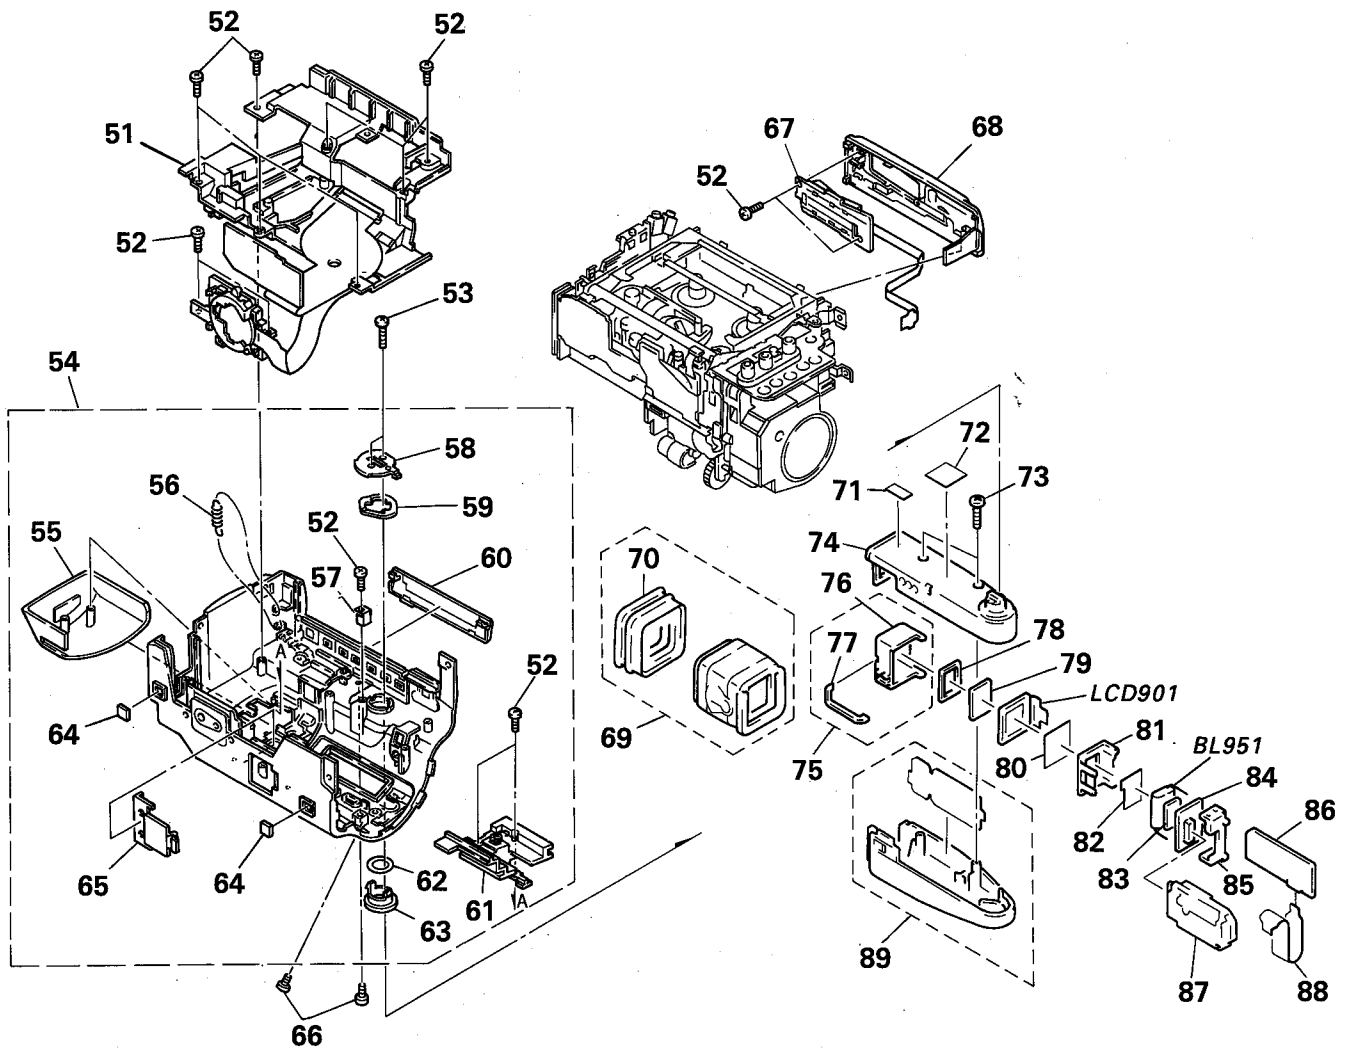

Ref. No.	Part No.	Description	Remark
51	1-467-296-11	SWITCH BLOCK, CONTROL	
52	3-719-601-01	SCREW (B2X5), TAPPING	
53	3-740-546-61	SCREW (M2X10.5)	
54	X-3943-242-1	CABINET (R) ASSY	
55	3-955-285-01	DOOR, CF	
56	3-570-896-00	SPRING, TENSION	
57	3-747-178-01	REINFORCEMENT, TILT LOCK	
58	3-747-111-01	PLATE, LOCK, TILT	
59	3-747-110-01	SPRING, LEAF, TILT	
60	X-3943-240-1	DOOR ASSY, CONTROL	
61	3-955-286-01	SLIDER, CF	
62	3-747-112-01	RING, TILT	
63	3-747-109-01	SLEEVE, EVF	
* 64	3-949-383-01	FOOT, RUBBER	
65	3-955-001-01	LID, LITHIUM BATTERY	
66	3-719-381-01	SCREW (M2X4)	
67	1-692-257-41	SWITCH, PUSH (ZOOM)	
68	X-3941-894-1	LID ASSY, LS	
69	X-3943-369-1	HOLDER ASSY, FINDER	
70	3-948-162-01	EYE CUP	
71	3-948-291-01	LABEL (3), EVF	

Ref. No.	Part No.	Description	Remark
72	3-703-848-01	LABEL (N), SUB CAUTION (TR91:US)	
73	3-713-790-31	SCREW (M2X8), TAPPING, P3	
74	X-3943-366-1	CABINET (L) ASSY, EVF	
75	X-3943-368-1	HOLDER ASSY, LCD	
76	3-947-710-21	HOLDER, LCD	
* 77	3-947-711-01	GUIDE, LIGHT, INNER TALLY	
* 78	3-957-174-01	SPACER, FILTER	
* 79	3-955-340-01	FILTER, LCD	
* 80	3-949-846-04	ILLUMINATOR, BL	
81	X-3943-227-1	HOLDER ASSY, BL	
* 82	3-955-570-01	PLATE, CONDENSE, BL	
* 83	3-955-573-01	SPACER (E), BL	
84	A-7071-913-A	FF-75 BOARD, COMPLETE	
* 85	3-947-714-01	HOLDER (R), LCD	
86	A-7063-779-A	VF-68 BOARD, COMPLETE	
87	A-7063-780-A	VF-69 BOARD, COMPLETE	
88	1-643-806-11	FP-539 FLEXIBLE BOARD	
89	X-3943-367-1	CABINET (R) ASSY, EVF	
BL951	1-519-746-22	TUBE, FLUORESCENT (Ø.71INCH)	
LCD901	8-753-011-05	LCX003BK-2	

5-3. MAIN BOARDS ASSEMBLY

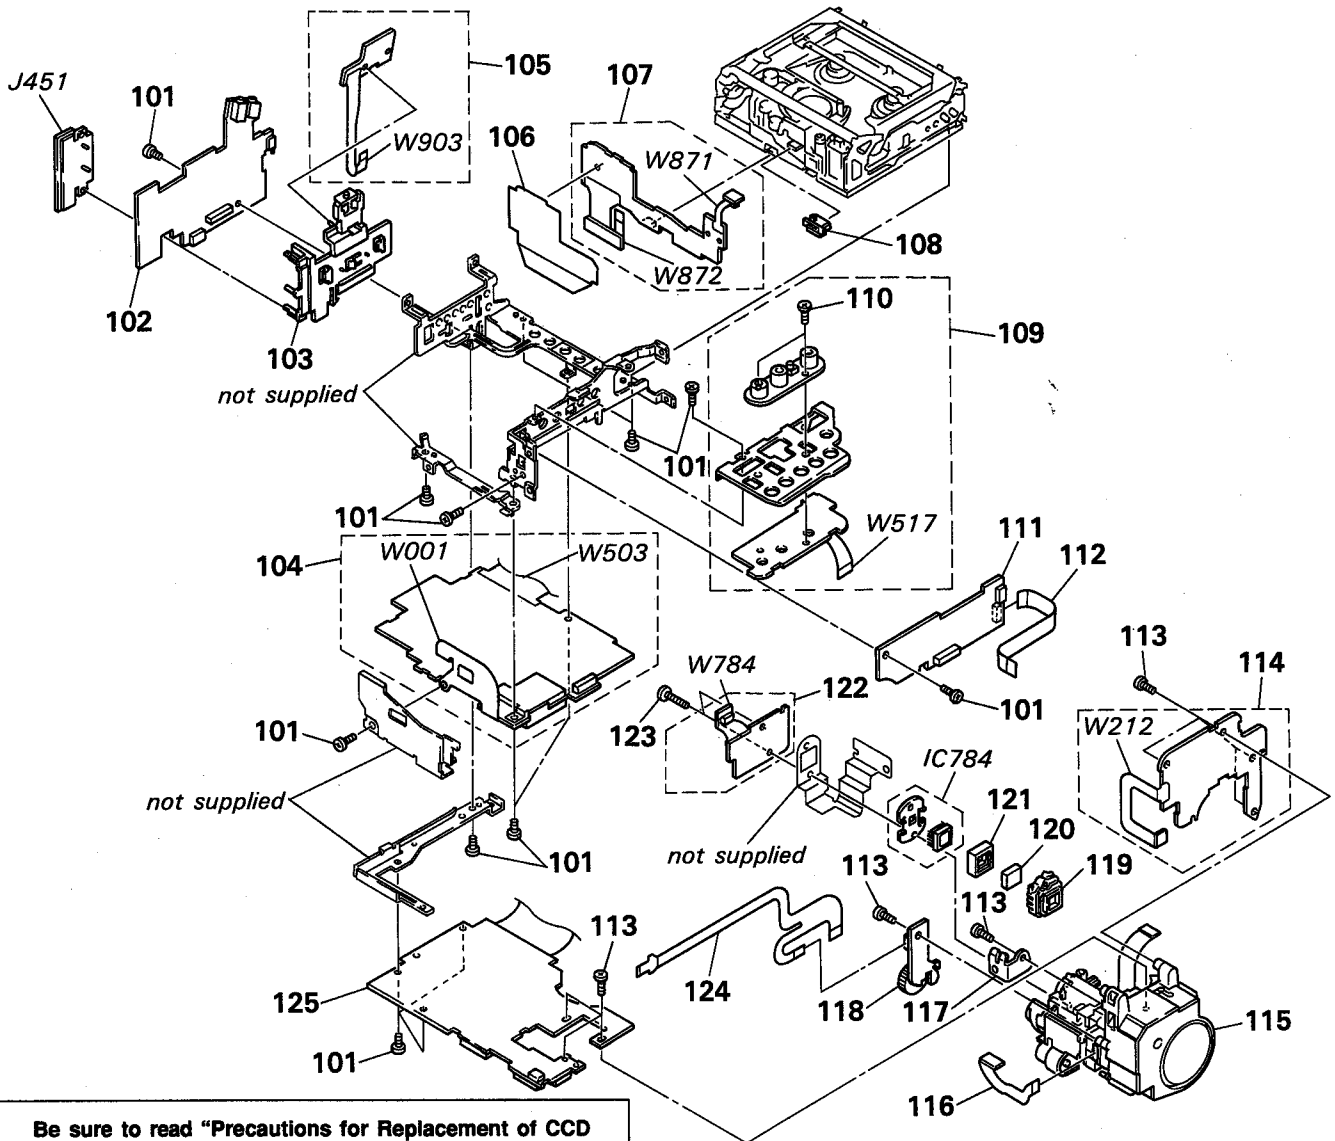


Be sure to read "Precautions for Replacement of CCD Imager" on page 83 when changing the CCD imager.

Ref. No.	Part No.	Description	Remark
101	3-713-786-51	SCREW (M2X3)	
102	A-7063-777-A	DD-55 BOARD, COMPLETE	
* 103	3-955-282-01	HOLDER, SW	
104	A-7063-771-A	VS-99 BOARD, COMPLETE	
105	A-7071-862-A	SW-222 BOARD, COMPLETE	
* 106	3-955-756-01	SHEET, INSULATED TRIPOD	
107	A-7063-776-A	SL-32 BOARD, COMPLETE	
108	1-691-471-11	CONNECTOR, TRANSLATION 11P	
109	A-7063-775-A	JK-98 BOARD, COMPLETE	
110	3-719-381-01	SCREW (M2X4)	
111	A-7063-778-A	AU-149 BOARD, COMPLETE	
112	1-751-487-11	CORD, FFC-104 FLEXIBLE FLAT	
113	3-719-601-01	SCREW (B2X5), TAPPING	
114	A-7063-774-A	YP-12 BOARD, COMPLETE	
115	1-547-635-11	LENS, ZOOM (VCL-6110WF)	
116	1-650-068-11	FP-17 FLEXIBLE BOARD	
* 117	3-955-287-01	SHEET METAL (A), FIXED	


Ref. No.	Part No.	Description	Remark
118	A-7071-912-A	MF-213 BOARD, COMPLETE	
119	3-946-856-01	ADAPTOR (H), CCD FITTING	
120	1-547-558-21	FILTER BLOCK, OPTICAL	
121	3-946-857-01	RUBBER (S), SEAL	
122	A-7063-773-A	CD-105 BOARD, COMPLETE	
123	3-947-268-01	SCREW (B TIGHT) (2), TAPPING	
124	1-650-064-11	FP-9 FLEXIBLE BOARD	
125	A-7063-772-A	VC-132 BOARD, COMPLETE	
IC784	A-7030-368-A	CCD BLOCK ASSY (054 SERVICE)	
J451	1-537-281-41	TERMINAL BOARD	
W001	1-650-067-11	FP-12 FLEXIBLE BOARD	
W212	1-650-063-11	FP-8 FLEXIBLE BOARD	
W503	1-650-066-11	FP-11 FLEXIBLE BOARD	
W517	1-650-065-11	FP-10 FLEXIBLE BOARD	
W784	1-644-944-11	FP-580 FLEXIBLE BOARD	
W871	1-642-186-11	FP-437 FLEXIBLE BOARD	
W872	1-650-069-11	FP-697 FLEXIBLE BOARD	
W903	1-650-070-11	FP-699 FLEXIBLE BOARD	

5-4. CASSETTE COMPARTMENT HOLDER ASSEMBLY

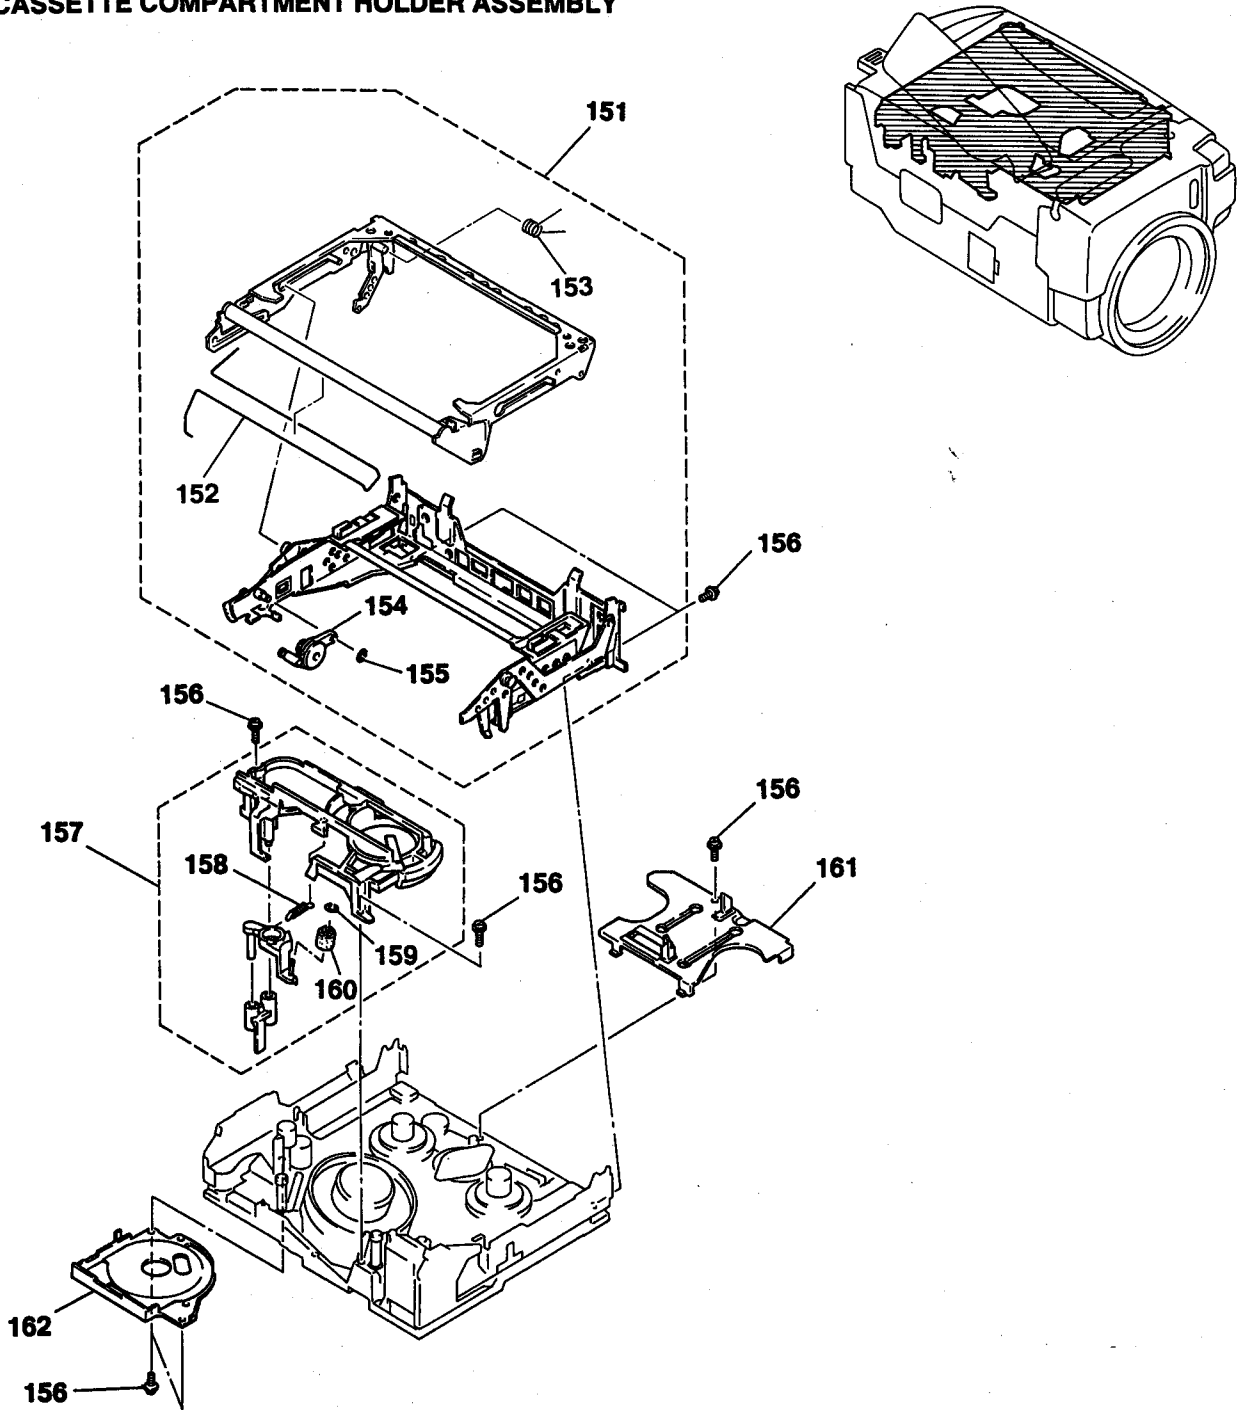

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	A-7040-312-K	CASSETTE COMPARTMENT BLOCKASSY		157	A-7040-309-A	PROTECT (BASE) BLOCK ASSY	
152	3-945-773-01	BAR, TORSION		158	3-945-760-01	SPRING, TENSION	
153	3-945-771-01	SPRING, TORSION		159	3-321-393-01	WASHER, STOPPER	
154	X-3941-287-2	DAMPER ASSY		160	X-3166-813-1	ROLLER ASSY, HC	
155	3-315-384-31	WASHER, STOPPER		161	X-3941-280-1	RETAINER ASSY, GOOSENECK	
156	3-947-503-01	SCREW (M1.4X2.5)		162	3-945-733-01	COVER, CAPSTAN	

5-5. LS CHASSIS ASSEMBLY

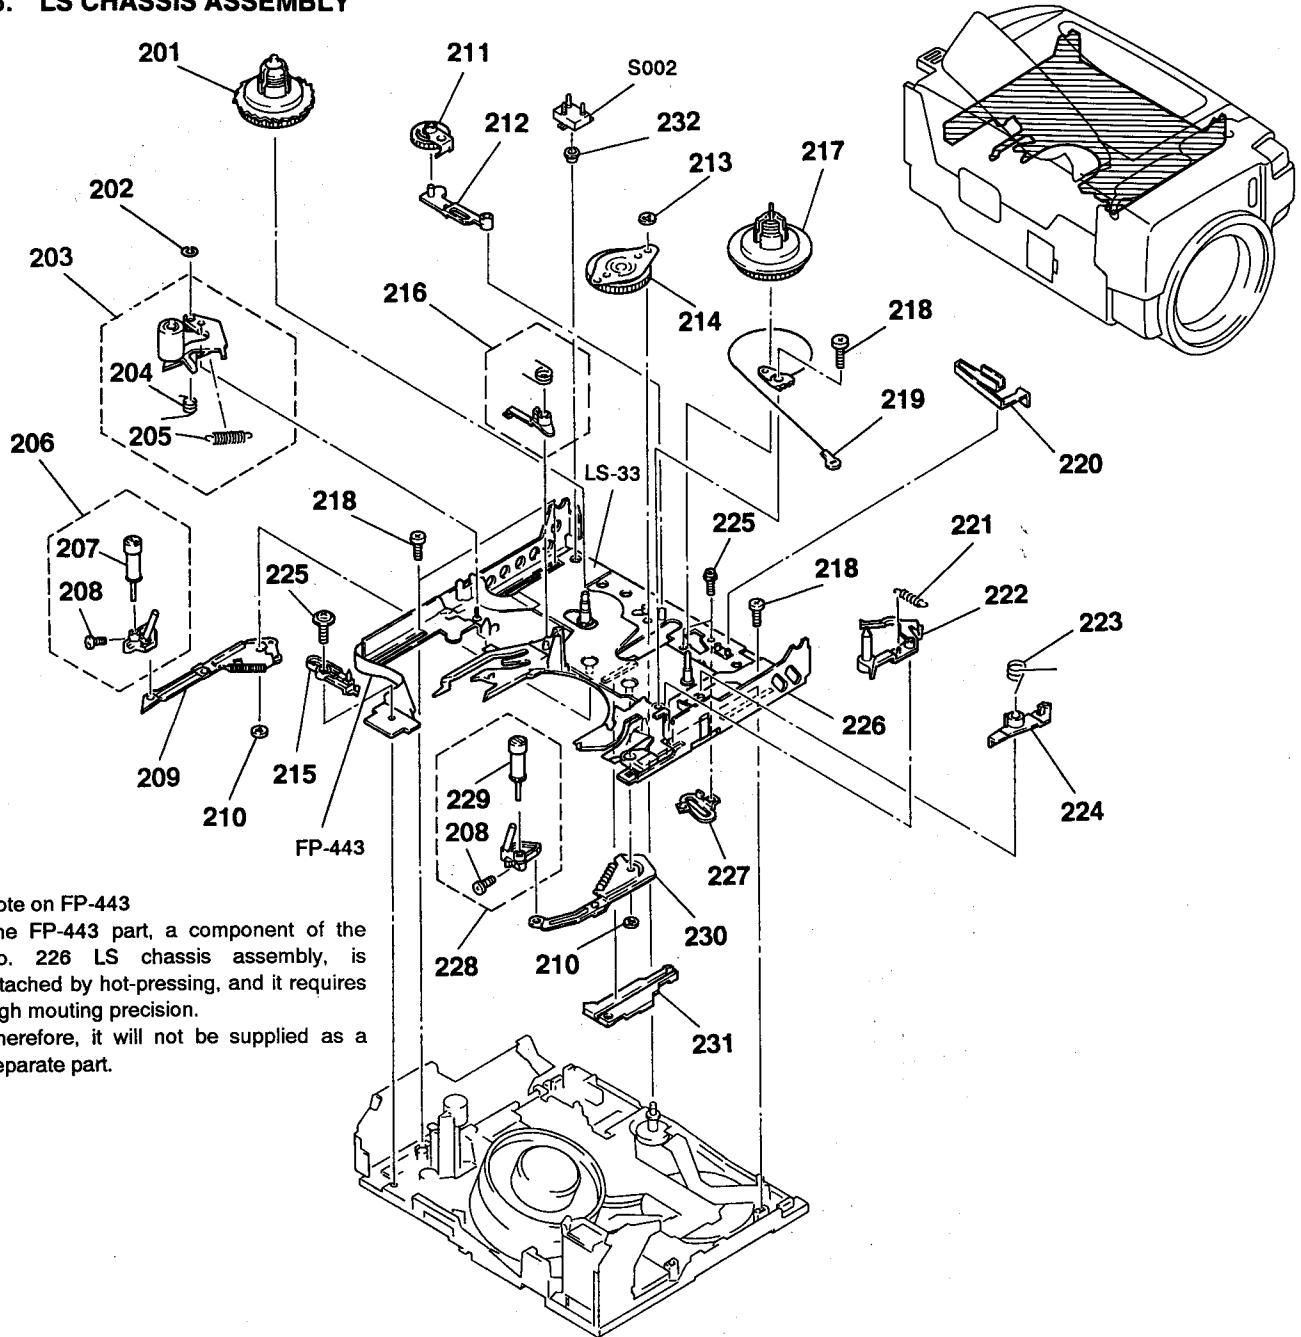


Note on FP-443

The FP-443 part, a component of the No. 226 LS chassis assembly, is attached by hot-pressing, and it requires high mounting precision. Therefore, it will not be supplied as a separate part.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	X-3941-274-1	TABLE ASSY, REEL, T		218	3-945-756-01	SCREW (M1. 4X3)	
202	3-331-007-21	WASHER		219	X-3941-277-1	STRING BLOCK ASSY	
203	X-3941-271-5	ARM ASSY, PINCH		220	3-945-801-01	BRAKE, S SOFT	
204	3-945-743-01	SPRING, TORSION		221	3-954-327-01	SPRING, TENSION	
205	3-945-783-01	SPRING, TENSION		222	X-3941-276-1	TG1 ASSY	
206	A-7040-307-A	GUIDE (BASE) (T) BLOCK ASSY		223	3-945-752-01	SPRING, TORSION	
207	X-3941-424-1	ROLLER ASSY, TG6		224	3-945-799-01	BRAKE, S HARD	
208	3-947-504-01	SCREW (M1. 2X2)		225	3-947-503-01	SCREW (M1. 4X2. 5)	
209	X-3941-267-1	ARM (T) ASSY, GUIDE		226	X-3943-307-1	CHASSIS ASSY, LS	
210	3-669-465-00	WASHER (1. 5), STOPPER		227	3-945-784-01	PLATE, CAM, LS	
211	X-3941-273-1	SOFT ASSY, T		228	A-7040-306-A	GUIDE (BASE) (S) BLOCK ASSY	
212	3-945-753-01	ARM, T SOFT		229	X-3941-269-1	ROLLER ASSY, TG3	
213	3-726-829-01	WASHER, STOPPER		230	X-3941-266-1	ARM (S) ASSY, GUIDE	
214	X-3941-279-5	GEAR ASSY, GOOSENECK		231	3-945-837-01	SLIDER, GL	
215	3-947-644-01	RETAINER, TG5 (BASE)		232	3-949-881-01	SLEEVE	
216	A-7040-321-A	CLAW BLOCK ASSY, T HARD		S002	1-572-987-11	SWITCH, PUSH (3 KEY) (REC PROOF, ME/MP, MP/MP-HG)	
217	X-3941-275-X	TABLE ASSY, REEL, S					

5-6. MECHANISM CHASSIS ASSEMBLY (1)

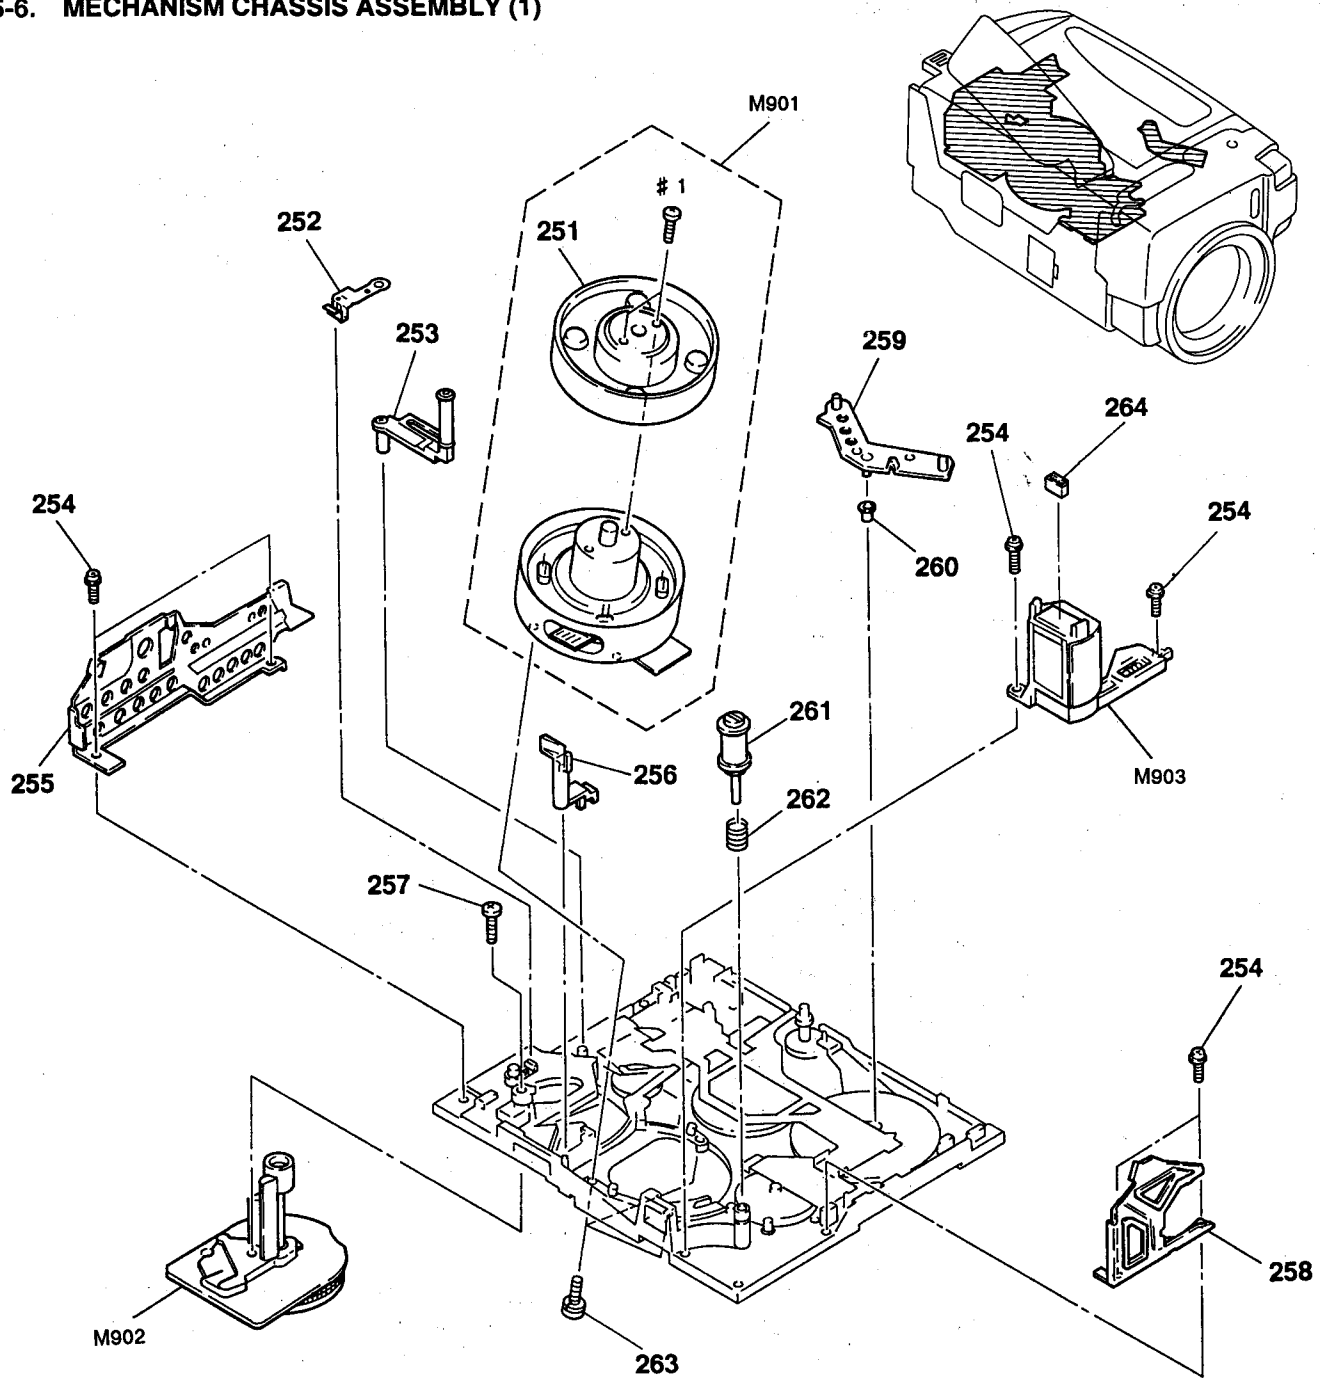

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	A-7049-501-A	DRUM ASSY, UPPER (DGR-78-R)		260	3-945-702-01	ROLLER, LS	
252	3-945-822-01	SPRING, LEAF, TG7 ARM		261	X-3941-262-1	ROLLER ASSY, TG2	
253	A-7040-305-A	ARM BLOCK ASSY, TG7		262	3-956-651-01	SPRING, COMPRESSION	
254	3-947-503-01	SCREW (M1.4X2.5)		263	3-686-493-01	SCREW (M2X5), P1	
255	X-3941-255-1	PLATE (T) ASSY, SIDE		264	1-568-323-11	CONNECTOR, BOARD TO BOARD 4P	
256	3-945-735-01	ARM, HC CONVERSION		M901	A-7048-564-A	DRUM ASSY (DGH-78A-R)	
257	3-686-493-01	SCREW (M2X5), P1		M902	8-835-477-01	MOTOR, DC SCE-0101A (CAPSTAN)	
258	3-945-691-01	PLATE (S), SIDE		M903	A-7040-304-A	MOTOR BLOCK ASSY, LM (LOADING)	
259	3-945-701-01	ARM, LS					


5-7. MECHANISM CHASSIS ASSEMBLY (2)

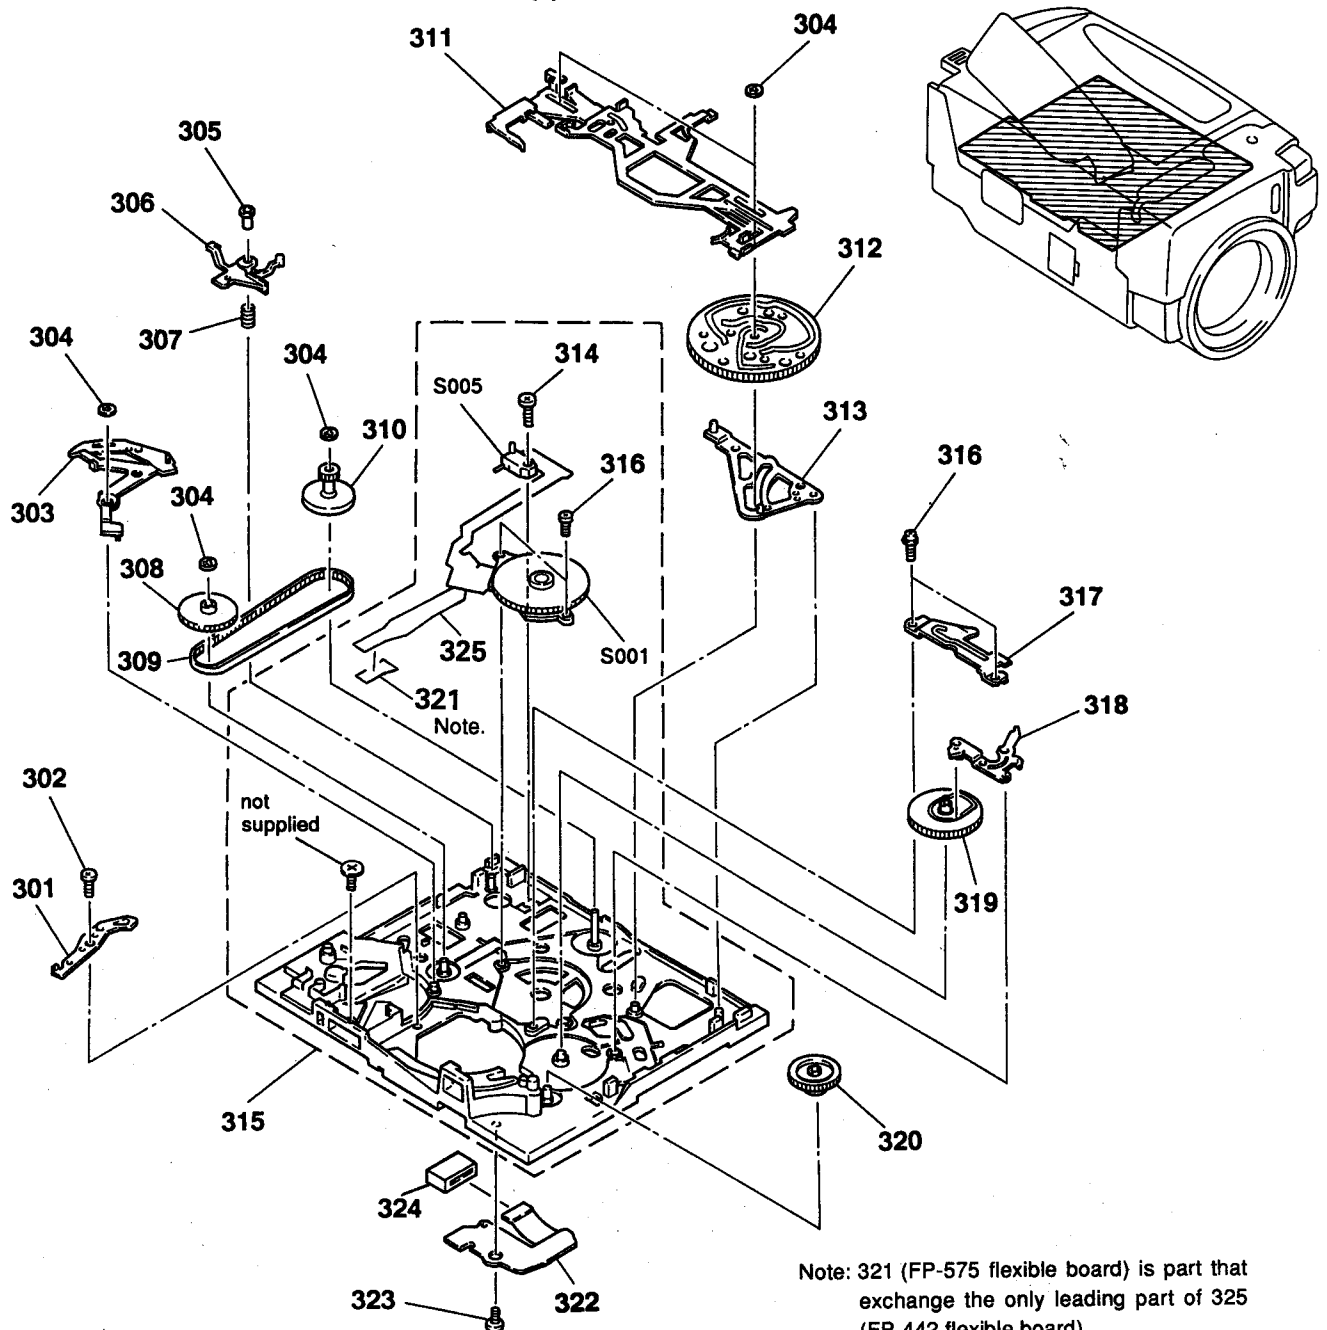

Note: 321 (FP-575 flexible board) is part that exchange the only leading part of 325 (FP-442 flexible board).

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
301	3-945-734-01	ARM, HC DRIVING		315	A-7040-303-A	CHASSIS ASSY, MECHANICAL	
302	3-728-103-11	SCREW (M1.4X1.6), SPECIAL HEAD		316	3-947-503-01	SCREW (M1.4X2.5)	
303	X-3941-259-1	ARM ASSY, PINCH PRESS		317	3-945-722-01	RETAINER, GEAR	
304	3-726-829-01	WASHER, STOPPER		318	X-3941-257-1	ARM ASSY, FF	
305	3-945-730-01	SLEEVE, EJECT		319	3-945-697-01	GEAR (B), L	
306	3-945-706-01	LEVER, EJECT		320	3-945-700-01	GEAR (A), L	
307	3-945-729-01	SPRING, COMPRESSION		321	1-645-271-11	FP-575 FLEXIBLE BOARD	
308	X-3941-256-1	GEAR ASSY, CHANGE		322	1-641-643-12	FP-444 FLEXIBLE BOARD	
309	3-944-539-01	BELT, RELAY		323	3-945-756-01	SCREW (M1.4X3)	
310	3-945-695-01	PULLEY, RELAY		324	1-691-254-13	CONNECTOR, TRANSLATION 10P	
311	X-3941-260-1	SLIDER ASSY, M		325	1-641-639-13	FP-442 FLEXIBLE BOARD	
312	3-945-696-02	CAM		S001	1-572-986-11	SWITCH, ROTARY (ENCODER)	
313	X-3941-258-1	ARM ASSY, GL		S005	1-570-771-21	SWITCH (C DOWN)	
314	3-713-786-71	SCREW (M2X5)					

5-8. ZOOM LENS ASSEMBLY (VCL-6110WF)

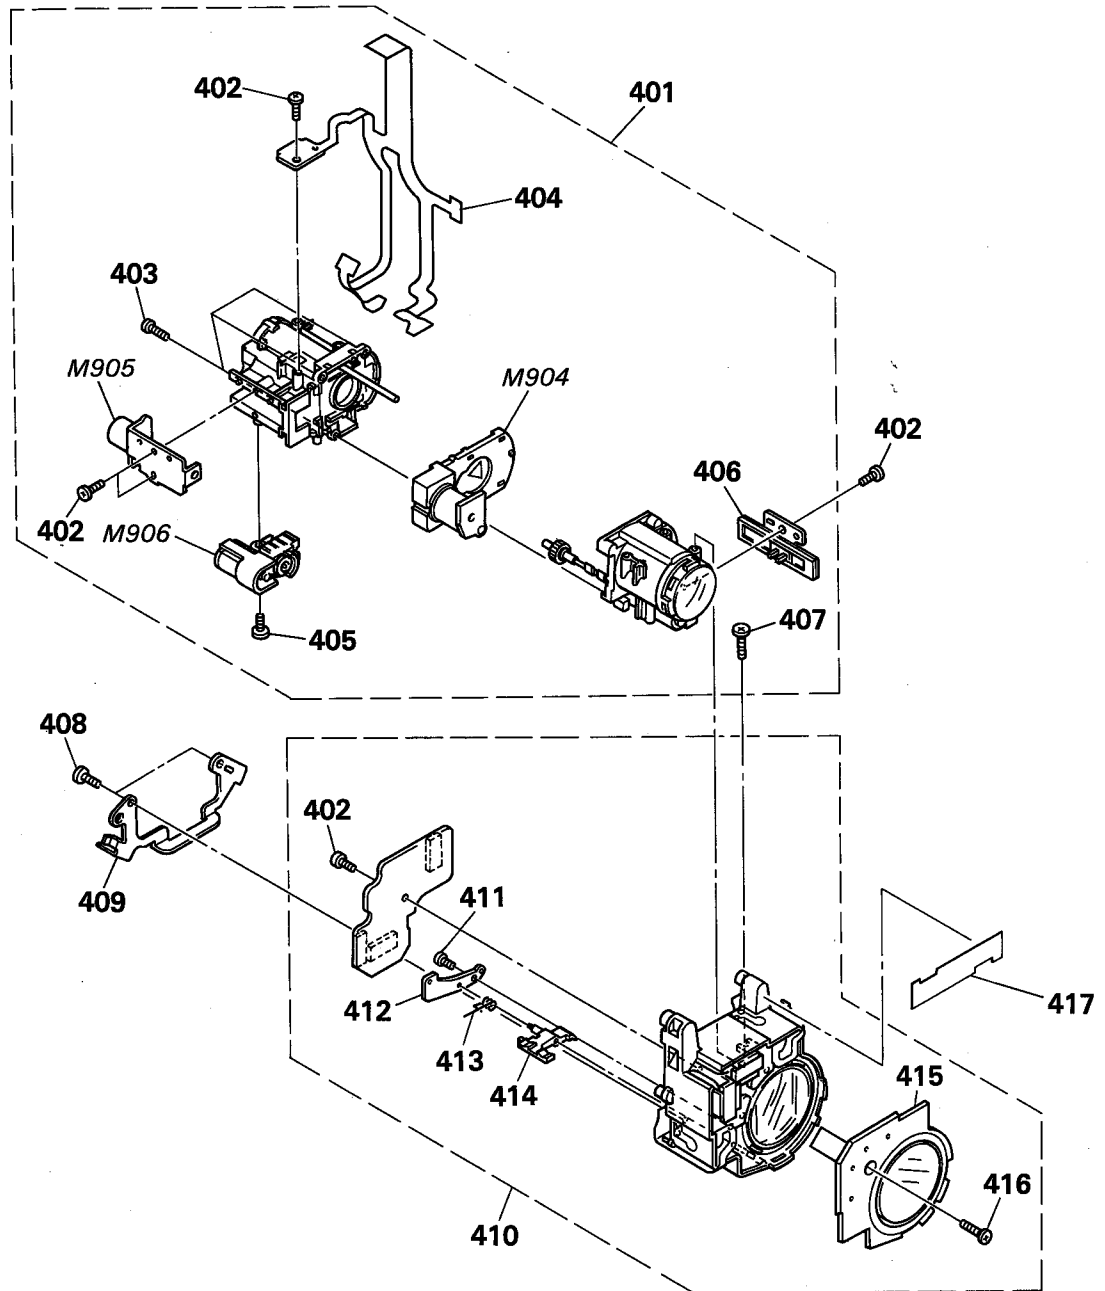

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
401	3-708-805-01	LENS BLOCK		411	3-708-804-01	SCREW P1. 7X3. 5	
402	3-708-302-01	SCREW P1. 7X4		412	3-708-803-01	PLATE, LOCK	
403	3-708-799-01	SCREW P1. 7X5. 5		413	3-708-802-01	SPRING, LOCK	
404	3-708-790-01	FPC, MAIN		414	3-708-801-01	LEVER, LOCK	
405	3-708-449-01	SCREW P1. 7X5		415	3-708-787-01	RING, F	
406	3-708-791-01	ENCORDER, ZOOM		416	3-708-795-01	SCREW P2X7	
407	3-708-798-01	SCREW P1. 7X5		* 417	3-956-359-01	COVER, SENSOR	
408	3-708-797-01	SCREW P2X4		M904	3-708-792-01	METER, IG (IRIS)	
409	3-708-789-01	BRACKET		M905	3-708-793-01	MOTOR, STEPPING (FOCUS)	
410	A-7030-482-A	VAP BLOCK		M906	3-708-794-01	MOTOR, PZ (ZOOM)	

SECTION 6
ELECTRICAL PARTS LIST

AU-149

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA ..: μ A. uPA..: μ PA.
uPB..: μ PB. uPC..: μ PC. uPD..: μ PD.
- CAPACITORS
uF: μ F
- COILS
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark
	A-7063-778-A	AU-149 BOARD, COMPLETE ***** (Ref. No. 7,000 Series)	
		< CAPACITOR >	
C801	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C802	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C803	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C804	1-104-753-11	TANTAL. CHIP 47uF	20% 6.3V
C805	1-126-205-11	ELECT CHIP 47uF	20% 6.3V
C806	1-104-753-11	TANTAL. CHIP 47uF	20% 6.3V
C807	1-126-205-11	ELECT CHIP 47uF	20% 6.3V
C808	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C809	1-126-205-11	ELECT CHIP 47uF	20% 6.3V
C811	1-126-205-11	ELECT CHIP 47uF	20% 6.3V
C812	1-164-489-11	CERAMIC CHIP 0.22uF	10% 16V
C813	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C814	1-164-489-11	CERAMIC CHIP 0.22uF	10% 16V
C820	1-124-778-00	ELECT CHIP 22uF	20% 6.3V
C821	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C822	1-164-489-11	CERAMIC CHIP 0.22uF	10% 16V
C824	1-164-489-11	CERAMIC CHIP 0.22uF	10% 16V
C825	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C826	1-135-091-00	TANTALUM CHIP 1uF	20% 16V
C827	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C828	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C829	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C830	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C831	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C832	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C833	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C834	1-164-346-11	CERAMIC CHIP 1uF	16V
C835	1-162-967-11	CERAMIC CHIP 0.0033uF	10% 50V
C838	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C840	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C841	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C842	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C843	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C844	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C845	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V

Ref. No.	Part No.	Description	Remark
C846	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C847	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C848	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C849	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C850	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C851	1-135-091-00	TANTALUM CHIP 1uF	20% 16V
C852	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C853	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C855	1-128-003-11	ELECT CHIP 22uF	20% 4V
C856	1-128-003-11	ELECT CHIP 22uF	20% 4V
C857	1-162-969-11	CERAMIC CHIP 0.0068uF	10% 25V
C858	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C859	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C860	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C864	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C865	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C870	1-164-145-11	CERAMIC CHIP 390PF	5% 50V
C891	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
		< CONNECTOR >	
CN801	1-691-492-21	CONNECTOR, FFC/FPC 13P	
* CN802	1-691-931-11	CONNECTOR, BOARD TO BOARD 38P	
CN803	1-566-537-11	CONNECTOR, FPC (NON ZIF) 5P	
		< DIODE >	
D801	8-719-404-46	DIODE MA110	
D805	8-719-404-35	DIODE MA141WK	
D806	8-719-404-35	DIODE MA141WK	
D808	8-719-420-15	DIODE MA8082-M(TX)	
D809	8-719-420-15	DIODE MA8082-M(TX)	
D810	8-719-404-46	DIODE MA110	
		< FILTER >	
FL801	1-236-837-21	FILTER, BAND PASS	
FL802	1-236-838-21	FILTER, BAND PASS	
		< IC >	
IC801	8-759-159-94	IC LA7491W-TBM	

Ref. No.	Part No.	Description	Remark
< TRANSISTOR >			
Q801	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q802	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q803	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q804	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q806	8-729-402-42	TRANSISTOR UN5213	
Q807	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q808	8-729-420-50	TRANSISTOR UN5215	
Q810	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q811	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q812	8-729-402-81	TRANSISTOR XN4501	
Q813	8-729-402-81	TRANSISTOR XN4501	
Q820	8-729-402-42	TRANSISTOR UN5213	
Q821	8-729-402-42	TRANSISTOR UN5213	
Q823	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
< RESISTOR >			
R417	1-216-817-11	METAL CHIP 470 5%	1/16W
R436	1-216-817-11	METAL CHIP 470 5%	1/16W
R437	1-216-833-11	METAL CHIP 10K 5%	1/16W
R801	1-216-824-11	METAL CHIP 1.8K 5%	1/16W
R802	1-216-842-11	METAL CHIP 56K 5%	1/16W
R803	1-216-810-11	METAL CHIP 120 5%	1/16W
R805	1-216-810-11	METAL CHIP 120 5%	1/16W
R807	1-216-817-11	METAL CHIP 470 5%	1/16W
R809	1-216-817-11	METAL CHIP 470 5%	1/16W
R811	1-216-839-11	METAL CHIP 33K 5%	1/16W
R812	1-216-824-11	METAL CHIP 1.8K 5%	1/16W
R813	1-216-842-11	METAL CHIP 56K 5%	1/16W
R814	1-216-833-11	METAL CHIP 10K 5%	1/16W
R815	1-216-839-11	METAL CHIP 33K 5%	1/16W
R816	1-216-833-11	METAL CHIP 10K 5%	1/16W
R817	1-216-823-11	METAL CHIP 1.5K 5%	1/16W
R819	1-216-821-11	METAL CHIP 1K 5%	1/16W
R820	1-216-863-11	METAL GLAZE 3.3M 5%	1/16W
R822	1-216-833-11	METAL CHIP 10K 5%	1/16W
R823	1-216-863-11	METAL GLAZE 3.3M 5%	1/16W
R824	1-216-841-11	METAL CHIP 47K 5%	1/16W
R825	1-218-732-11	METAL CHIP 47K 0.50%	1/16W
R826	1-218-722-11	METAL CHIP 18K 0.50%	1/16W
R827	1-216-839-11	METAL CHIP 33K 5%	1/16W
R828	1-216-833-11	METAL CHIP 10K 5%	1/16W
R829	1-216-841-11	METAL CHIP 47K 5%	1/16W
R831	1-216-864-11	METAL CHIP 0 5%	1/16W
R832	1-216-833-11	METAL CHIP 10K 5%	1/16W
R833	1-216-864-11	METAL CHIP 0 5%	1/16W
R834	1-216-833-11	METAL CHIP 10K 5%	1/16W
R835	1-216-821-11	METAL CHIP 1K 5%	1/16W

Ref. No.	Part No.	Description	Remark
R836	1-216-821-11	METAL CHIP 1K 5%	1/16W
R837	1-216-821-11	METAL CHIP 1K 5%	1/16W
R838	1-216-821-11	METAL CHIP 1K 5%	1/16W
R839	1-216-830-11	METAL CHIP 5.6K 5%	1/16W
R840	1-216-836-11	METAL CHIP 18K 5%	1/16W
R841	1-216-837-11	METAL CHIP 22K 5%	1/16W
R842	1-216-825-11	METAL CHIP 2.2K 5%	1/16W
R843	1-216-829-11	METAL CHIP 4.7K 5%	1/16W
R844	1-216-823-11	METAL CHIP 1.5K 5%	1/16W
R845	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
R846	1-216-822-11	METAL CHIP 1.2K 5%	1/16W
R847	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
R848	1-216-825-11	METAL CHIP 2.2K 5%	1/16W
R849	1-216-829-11	METAL CHIP 4.7K 5%	1/16W
R850	1-216-824-11	METAL CHIP 1.8K 5%	1/16W
R851	1-216-829-11	METAL CHIP 4.7K 5%	1/16W
R852	1-216-824-11	METAL CHIP 1.8K 5%	1/16W
R853	1-216-820-11	METAL CHIP 820 5%	1/16W
R859	1-216-833-11	METAL CHIP 10K 5%	1/16W
R860	1-216-831-11	METAL CHIP 6.8K 5%	1/16W
R862	1-216-829-11	METAL CHIP 4.7K 5%	1/16W
R863	1-216-838-11	METAL CHIP 27K 5%	1/16W
R864	1-216-838-11	METAL CHIP 27K 5%	1/16W
R881	1-216-864-11	METAL CHIP 0 5%	1/16W
R882	1-216-841-11	METAL CHIP 47K 5%	1/16W
R883	1-216-841-11	METAL CHIP 47K 5%	1/16W
R885	1-216-832-11	METAL CHIP 8.2K 5%	1/16W
R886	1-216-847-11	METAL CHIP 150K 5%	1/16W
R890	1-216-864-11	METAL CHIP 0 5%	1/16W
R891	1-216-821-11	METAL CHIP 1K 5%	1/16W

A-7063-773-A CD-105 BOARD, COMPLETE			

(Ref. No. 1,000 Series)			
< CAPACITOR >			
C784	1-128-004-11	ELECT CHIP 10uF	20% 16V
C785	1-128-013-11	ELECT CHIP 1uF	20% 50V
C786	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C787	1-126-607-11	ELECT CHIP 47uF	20% 4V
C788	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C789	1-162-637-11	CERAMIC CHIP 0.47uF	16V
C790	1-135-214-21	TANTAL. CHIP 4.7uF	20% 20V
< DIODE >			
D784	8-719-404-46	DIODE MA110	

Ref. No.	Part No.	Description	Remark
< COIL >			
L784	1-412-032-11	INDUCTOR CHIP 100uH	
< TRANSISTOR >			
Q784	8-729-232-86	TRANSISTOR 2SK1875	
Q785	8-729-102-07	TRANSISTOR 2SC2223-F13	
< RESISTOR >			
R784	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R785	1-216-819-11	METAL CHIP 680 5% 1/16W	
R786	1-216-849-11	METAL CHIP 220K 5% 1/16W	
R787	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R788	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R789	1-216-809-11	METAL CHIP 100 5% 1/16W	
R790	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R791	1-216-857-11	METAL CHIP 1M 5% 1/16W	
< FLEXIBLE BOARD >			
W784	1-644-944-11	FP-580 FLEXIBLE BOARD	

△	A-7063-777-A	DD-55 BOARD, COMPLETE	

(Ref. No. 9, 000 Series)			
< CAPACITOR >			
C445	1-104-913-11	TANTAL. CHIP 10uF 20% 16V	
C446	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C448	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
C449	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C450	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C451	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C452	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C453	1-135-165-11	TANTAL. CHIP 33uF 20% 16V	
C454	1-126-204-11	ELECT CHIP 47uF 20% 16V	
C455	1-126-204-11	ELECT CHIP 47uF 20% 16V	
C456	1-163-133-00	CERAMIC CHIP 470PF 5% 50V	
C457	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C458	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C459	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C460	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C461	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C462	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V	
C463	1-162-967-11	CERAMIC CHIP 0.0033uF 10% 50V	
C464	1-163-017-00	CERAMIC CHIP 0.0047uF 5% 50V	
C465	1-164-161-11	CERAMIC CHIP 0.0022uF 10% 100V	
C466	1-164-174-11	CERAMIC CHIP 0.0082uF 10% 25V	
C467	1-164-730-11	CERAMIC CHIP 0.0012uF 10% 50V	

Ref. No.	Part No.	Description	Remark
C468	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C469	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C470	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C471	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C472	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C473	1-162-958-11	CERAMIC CHIP 270PF 5% 50V	
C474	1-162-958-11	CERAMIC CHIP 270PF 5% 50V	
C475	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C476	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C477	1-162-963-11	CERAMIC CHIP 680PF 10% 50V	
C478	1-162-963-11	CERAMIC CHIP 680PF 10% 50V	
C479	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C480	1-162-963-11	CERAMIC CHIP 680PF 10% 50V	
C481	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C482	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C483	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C484	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C485	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C486	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C487	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C488	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C489	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C490	1-164-506-11	CERAMIC CHIP 4.7uF 16V	
C491	1-164-830-11	CERAMIC CHIP 1uF 22% 16V	
C492	1-164-337-11	CERAMIC CHIP 2.2uF 16V	
C493	1-164-337-11	CERAMIC CHIP 2.2uF 16V	
C494	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
C495	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
C496	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
C497	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
C498	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
C499	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
< CONNECTOR >			
CN451	1-691-521-11	CONNECTOR, BOARD TO BOARD 40P	
CN452	1-691-485-21	CONNECTOR, FFC/FPC 6P	
< DIODE >			
D450	8-719-016-74	DIODE 1SS352	
D451	8-719-420-15	DIODE MA8082-M(TX)	
D452	8-719-420-15	DIODE MA8082-M(TX)	
D453	8-719-420-15	DIODE MA8082-M(TX)	
D454	8-719-420-15	DIODE MA8082-M(TX)	
D455	8-719-027-77	DIODE MA796	
D460	8-719-016-74	DIODE 1SS352	
< FUSE >			
△F450	1-576-213-11	FUSE, CHIP (1.6A)	

<p>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
-----------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
△F451	1-576-213-11	FUSE, CHIP (1.6A)		R068	1-216-842-11	METAL CHIP	56K 5% 1/16W
△F452	1-576-213-11	FUSE, CHIP (1.6A)		R069	1-216-837-11	METAL CHIP	22K 5% 1/16W
		< IC >		R111	1-216-841-11	METAL CHIP	47K 5% 1/16W
IC450	8-759-060-94	IC MB3785APFV-G-BND-ER		R112	1-216-833-11	METAL CHIP	10K 5% 1/16W
IC451	8-759-062-00	IC MB3788PFV		R113	1-216-841-11	METAL CHIP	47K 5% 1/16W
		< JACK >		R114	1-218-721-11	METAL CHIP	16K 0.50% 1/16W
J450	1-569-809-11	JACK (SMALL TYPE) (HEADPHONES)		R115	1-216-834-11	METAL CHIP	12K 5% 1/16W
J451	1-537-281-41	TERMINAL BOARD (BATTERY TERMINAL)		R116	1-218-714-11	METAL CHIP	8.2K 0.50% 1/16W
J452	1-565-276-21	JACK, ULTRA SMALL 1P (REMOTE)		R117	1-218-736-11	METAL CHIP	68K 0.50% 1/16W
		< COIL >		R118	1-218-720-11	METAL CHIP	15K 0.50% 1/16W
L450	1-410-192-51	INDUCTOR CHIP 1uH		R119	1-216-843-11	METAL CHIP	68K 5% 1/16W
L451	1-410-192-51	INDUCTOR CHIP 1uH		R227	1-216-843-11	METAL CHIP	68K 5% 1/16W
L452	1-410-192-51	INDUCTOR CHIP 1uH		R228	1-216-804-11	METAL CHIP	39 5% 1/16W
L456	1-406-864-21	COIL, CHOKE 4.7uH		R229	1-216-832-11	METAL CHIP	8.2K 5% 1/16W
L457	1-424-643-11	COIL, CHOKE 10uH		R484	1-216-041-00	METAL CHIP	470 5% 1/10W
L458	1-424-641-11	COIL, CHOKE 22uH		R485	1-216-845-11	METAL CHIP	100K 5% 1/16W
L459	1-424-643-11	COIL, CHOKE 10uH		R486	1-216-055-00	METAL CHIP	1.8K 5% 1/10W
L460	1-424-641-11	COIL, CHOKE 22uH		R487	1-216-041-00	METAL CHIP	470 5% 1/10W
L461	1-424-642-11	COIL, CHOKE 47uH		R488	1-216-041-00	METAL CHIP	470 5% 1/10W
L462	1-424-641-11	COIL, CHOKE 22uH		R489	1-216-041-00	METAL CHIP	470 5% 1/10W
L463	1-424-641-11	COIL, CHOKE 22uH		R490	1-216-821-11	METAL CHIP	1K 5% 1/16W
L464	1-412-056-11	INDUCTOR CHIP 4.7uH		R491	1-216-009-00	METAL CHIP	22 5% 1/10W
L465	1-412-054-21	INDUCTOR CHIP 2.2uH		R492	1-216-845-11	METAL CHIP	100K 5% 1/16W
L466	1-412-054-21	INDUCTOR CHIP 2.2uH		R493	1-216-821-11	METAL CHIP	1K 5% 1/16W
L467	1-412-066-21	INDUCTOR CHIP 220uH		R494	1-216-841-11	METAL CHIP	47K 5% 1/16W
L468	1-412-066-21	INDUCTOR CHIP 220uH		R495	1-216-828-11	METAL CHIP	3.9K 5% 1/16W
L469	1-412-054-21	INDUCTOR CHIP 2.2uH		R496	1-216-296-00	METAL CHIP	0 5% 1/8W
L470	1-412-056-11	INDUCTOR CHIP 4.7uH		R497	1-216-296-00	METAL CHIP	0 5% 1/8W
L471	1-412-056-11	INDUCTOR CHIP 4.7uH		R498	1-216-296-00	METAL CHIP	0 5% 1/8W
L472	1-412-054-21	INDUCTOR CHIP 2.2uH		R862	1-216-830-11	METAL CHIP	5.6K 5% 1/16W
		< TRANSISTOR >		R863	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q450	8-729-420-24	TRANSISTOR 2SB1218A-QRS		R864	1-216-847-11	METAL CHIP	150K 5% 1/16W
Q451	8-729-823-82	TRANSISTOR FP101		R865	1-218-724-11	METAL CHIP	22K 0.50% 1/16W
Q452	8-729-823-82	TRANSISTOR FP101		R866	1-218-720-11	METAL CHIP	15K 0.50% 1/16W
Q453	8-729-804-41	TRANSISTOR 2SB1122-S		R867	1-218-873-11	METAL CHIP	12K 0.50% 1/16W
Q454	8-729-823-84	TRANSISTOR FP102		R868	1-218-727-11	METAL CHIP	30K 0.50% 1/16W
Q455	8-729-823-82	TRANSISTOR FP101		R869	1-216-843-11	METAL CHIP	68K 5% 1/16W
Q456	8-729-823-84	TRANSISTOR FP102		R870	1-216-843-11	METAL CHIP	68K 5% 1/16W
Q457	8-729-017-10	TRANSISTOR 2SJ244JY		R885	1-218-867-11	METAL CHIP	6.8K 0.50% 1/16W
Q458	8-729-403-35	TRANSISTOR UN5113		R886	1-216-832-11	METAL CHIP	8.2K 5% 1/16W
Q459	8-729-420-24	TRANSISTOR 2SB1218A-QRS		R887	1-216-832-11	METAL CHIP	8.2K 5% 1/16W
		< RESISTOR >		R888	1-216-833-11	METAL CHIP	10K 5% 1/16W
R066	1-216-837-11	METAL CHIP	22K 5% 1/16W	R889	1-218-722-11	METAL CHIP	18K 0.50% 1/16W
R067	1-218-707-11	METAL CHIP	4.3K 0.50% 1/16W	R890	1-216-833-11	METAL CHIP	10K 5% 1/16W
				R891	1-216-864-11	METAL CHIP	0 5% 1/16W
				R892	1-218-702-91	METAL CHIP	2.7K 0.50% 1/16W
				R893	1-216-041-00	METAL CHIP	470 5% 1/10W

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

DD-55

FF-75

JK-98

LS-33

MA-169

Ref. No.	Part No.	Description	Remark
		< SWITCH >	
S451	1-572-467-21	SWITCH, PUSH (1 KEY) (EJECT)	
		< TRANSFORMER >	
T450	1-423-820-21	TRANSFORMER, CONVERTER	

	A-7071-913-A	FF-75 BOARD, COMPLETE	

		(Ref. No. 8, 000 Series)	
		< CONNECTOR >	
CN954	1-580-248-31	CONNECTOR, BOARD TO BOARD 20P	

	A-7063-775-A	JK-98 BOARD, COMPLETE	

		(Ref. No. 4, 000 Series)	
	3-719-381-01	SCREW (M2X4)	
		< CAPACITOR >	
C517	1-164-361-11	CERAMIC CHIP 0.047uF	16V
		< DIODE >	
D517	8-719-420-15	DIODE MA8082-M(TX)	
D518	8-719-420-15	DIODE MA8082-M(TX)	
D519	8-719-420-15	DIODE MA8082-M(TX)	
D520	8-719-420-15	DIODE MA8082-M(TX)	
D521	8-719-420-15	DIODE MA8082-M(TX)	
D522	8-719-420-15	DIODE MA8082-M(TX)	
D523	8-719-420-15	DIODE MA8082-M(TX)	
D524	8-719-404-46	DIODE MA110	
D525	8-719-404-46	DIODE MA110	
D526	8-719-404-46	DIODE MA110	
		< JACK >	
J517	1-537-415-11	TERMINAL BOAD (VIDEO, AUDIO L/R, RFU DC OUT)	
		< TRANSISTOR >	
Q517	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
		< RESISTOR >	
R518	1-216-853-11	METAL CHIP 470K 5%	1/16W
R519	1-216-841-11	METAL CHIP 47K 5%	1/16W
R520	1-216-853-11	METAL CHIP 470K 5%	1/16W
R521	1-216-864-11	METAL CHIP 0 5%	1/16W
R522	1-216-864-11	METAL CHIP 0 5%	1/16W

Ref. No.	Part No.	Description	Remark
R523	1-216-296-00	METAL CHIP 0 5%	1/8W
		< FLEXIBLE BOARD >	
W517	1-650-065-11	FP-10 FLEXIBLE BOARD	

		LS-33 BOARD (Ref. No. 5, 000 Series)	

		< DIODE >	
D001	8-719-989-52	DIODE GL4600S	
		< HOLE ELEMENT >	
H001	8-719-987-62	DIODE LT140SAZ	
H002	8-719-987-62	DIODE LT140SAZ	
		< TRANSISTOR >	
Q001	8-729-012-46	TRANSISTOR PT4600FS	
Q002	8-729-012-46	TRANSISTOR PT4600FS	
		< RESISTOR >	
R003	1-216-033-00	METAL CHIP 220 5%	1/10W
R004	1-216-033-00	METAL CHIP 220 5%	1/10W
R010	1-216-033-00	METAL CHIP 220 5%	1/10W
R011	1-216-033-00	METAL CHIP 220 5%	1/10W
		< SWITCH >	
S002	1-572-987-11	SWITCH, PUSH (3 KEY) (REC PROOF, ME/MP, MP/MP-HG)	

	A-7063-781-A	MA-169 BOARD, COMPLETE	

		(Ref. No. 7, 000 Series)	
		< CAPACITOR >	
C553	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C554	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C560	1-135-148-21	TANTAL. CHIP 1.5uF	20% 10V
C563	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C564	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C566	1-126-205-11	ELECT CHIP 47uF	20% 6.3V
C567	1-164-633-11	CERAMIC CHIP 0.1uF	10% 25V
C568	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C569	1-135-091-00	TANTALUM CHIP 1uF	20% 16V
C570	1-164-343-11	CERAMIC CHIP 0.056uF	10% 25V
C571	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C572	1-163-023-00	CERAMIC CHIP 0.015uF	5% 50V
C573	1-164-232-11	CERAMIC CHIP 0.01uF	50V

Ref. No.	Part No.	Description	Remark		
C574	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C575	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C577	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C578	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V
C579	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C580	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C581	1-164-343-11	CERAMIC CHIP	0.056uF	10%	25V
C582	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C583	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C584	1-163-023-00	CERAMIC CHIP	0.015uF	5%	50V
C585	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C586	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V

< CONNECTOR >

CN551	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD) 4P			
CN552	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD) 4P			
CN553	1-691-492-21	CONNECTOR, FFC/FPC 13P			

< DIODE >

D551	8-719-016-74	DIODE 1SS352			
------	--------------	--------------	--	--	--

< IC >

IC551	8-759-084-53	IC CXA1618AN			
IC552	8-749-923-29	IC RS-20E-T			

< JACK >

J551	1-691-737-11	JACK (SMALL TYPE) (MIC)			
------	--------------	-------------------------	--	--	--

< COIL >

L551	1-410-369-11	INDUCTOR CHIP 1uH			
L552	1-410-369-11	INDUCTOR CHIP 1uH			
L553	1-410-369-11	INDUCTOR CHIP 1uH			

< TRANSISTOR >

Q551	8-729-010-80	TRANSISTOR	FC13		
Q555	8-729-822-97	TRANSISTOR	2SC4211-5. 6. 7		

< RESISTOR >

R551	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R552	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R553	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R554	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R562	1-216-864-11	METAL CHIP	0	5%	1/16W
R566	1-216-841-11	METAL CHIP	47K	5%	1/16W
R568	1-216-857-11	METAL CHIP	1M	5%	1/16W
R569	1-216-857-11	METAL CHIP	1M	5%	1/16W
R570	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R571	1-216-833-11	METAL CHIP	10K	5%	1/16W

Ref. No.	Part No.	Description	Remark		
R572	1-216-833-11	METAL CHIP	10K	5%	1/16W
R573	1-216-834-11	METAL CHIP	12K	5%	1/16W
R574	1-216-821-11	METAL CHIP	1K	5%	1/16W
R575	1-216-835-11	METAL CHIP	15K	5%	1/16W
R576	1-216-839-11	METAL CHIP	33K	5%	1/16W
R577	1-216-834-11	METAL CHIP	12K	5%	1/16W
R580	1-216-833-11	METAL CHIP	10K	5%	1/16W
R581	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R582	1-216-833-11	METAL CHIP	10K	5%	1/16W
R583	1-216-821-11	METAL CHIP	1K	5%	1/16W
R584	1-216-834-11	METAL CHIP	12K	5%	1/16W
R585	1-216-833-11	METAL CHIP	10K	5%	1/16W
R586	1-216-835-11	METAL CHIP	15K	5%	1/16W
R587	1-216-839-11	METAL CHIP	33K	5%	1/16W
R588	1-216-834-11	METAL CHIP	12K	5%	1/16W
R590	1-216-841-11	METAL CHIP	47K	5%	1/16W
R593	1-216-820-11	METAL CHIP	820	5%	1/16W
R594	1-216-820-11	METAL CHIP	820	5%	1/16W

A-7071-912-A MF-213 BOARD, COMPLETE

(Ref. No. 6, 000 Series)

< CAPACITOR >

C971	1-163-038-00	CERAMIC CHIP	0.1uF		25V
------	--------------	--------------	-------	--	-----

< CONNECTOR >

CN971	1-691-483-21	CONNECTOR, FFC/FPC 4P			
-------	--------------	-----------------------	--	--	--

< RESISTOR >

R971	1-216-864-11	METAL CHIP	0	5%	1/16W
------	--------------	------------	---	----	-------

< SWITCH >

S972	1-241-865-11	RES, VAR, CARBON 10K/10K (FOCUS)			
------	--------------	----------------------------------	--	--	--

A-7063-776-A SL-32 BOARD, COMPLETE

(Ref. No. 4, 000 Series)

< CAPACITOR >

C871	1-128-004-11	ELECT CHIP	10uF	20%	16V
C872	1-128-004-11	ELECT CHIP	10uF	20%	16V
C874	1-128-013-11	ELECT CHIP	1uF	20%	50V
C875	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C876	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C877	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V

SL-32

SW-222

VC-132

Ref. No.	Part No.	Description	Remark
< CONNECTOR >			
CN871	1-691-473-21	CONNECTOR, FFC/FPC 7P	
CN872	1-691-472-21	CONNECTOR, FFC/FPC 6P	
CN873	1-691-482-21	CONNECTOR, FFC/FPC 15P	
< IC >			
IC871	8-759-059-09	IC LB8111V	
< TRANSISTOR >			
Q871	8-729-402-81	TRANSISTOR XN4501	
< RESISTOR >			
R872	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R873	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R877	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R878	1-216-840-11	METAL CHIP 39K 5% 1/16W	
R879	1-216-174-00	METAL GLAZE 100 5% 1/8W	
R881	1-216-864-11	METAL CHIP 0 5% 1/16W	
R883	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R884	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R895	1-216-864-11	METAL CHIP 0 5% 1/16W	
< RES NETWORK >			
RB871	1-236-424-11	NETWORK, RES 10K x 2	
RB872	1-236-424-11	NETWORK, RES 10K x 2	
< FLEXIBLE BOARD >			
W871	1-642-186-11	FP-437 FLEXIBLE BOARD	
W872	1-650-069-11	FP-697 FLEXIBLE BOARD	

A-7071-862-A SW-222 BOARD, COMPLETE			

(Ref. No. 5, 000 Series)			
< SWITCH >			
S903	1-553-977-11	SWITCH, SLIDE (STANDBY)	
S904	1-692-682-11	SWITCH, TACTIL (RUBBER) (REC START/STOP)	
< FLEXIBLE BOARD >			
W903	1-650-070-11	FP-699 FLEXIBLE BOARD	

Ref. No.	Part No.	Description	Remark
A-7063-772-A VC-132 BOARD, COMPLETE			

(Ref. No. 2, 000 Series)			
< CAPACITOR >			
C600	1-135-145-11	TANTALUM CHIP 0.47uF	10% 35V
C601	1-135-145-11	TANTALUM CHIP 0.47uF	10% 35V
C602	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C603	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C604	1-135-214-21	TANTAL. CHIP 4.7uF	20% 20V
C605	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C607	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C608	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C609	1-162-949-11	CERAMIC CHIP 47PF	5% 50V
C612	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C613	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C614	1-162-918-11	CERAMIC CHIP 18PF	5% 50V
C616	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C617	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C618	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C619	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C620	1-135-091-00	TANTALUM CHIP 1uF	20% 16V
C621	1-135-091-00	TANTALUM CHIP 1uF	20% 16V
C622	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C623	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C624	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C625	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C626	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C627	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C628	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C629	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C632	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C633	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C634	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C641	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C642	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C643	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C644	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C645	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C646	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C647	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C648	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C649	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C650	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C651	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C652	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C653	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C657	1-135-149-21	TANTALUM CHIP 2.2uF	20% 10V
C658	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V

Ref. No.	Part No.	Description		Remark	
C659	1-128-003-11	ELECT CHIP	22uF	20%	4V
C660	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C661	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C662	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C663	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C664	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V
C665	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V
C667	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C668	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C669	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C670	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C673	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C674	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C675	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C676	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C677	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C678	1-162-946-11	CERAMIC CHIP	27PF	5%	50V
C679	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C680	1-162-947-11	CERAMIC CHIP	33PF	5%	50V
C711	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V
C712	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C713	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C714	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C715	1-162-638-11	CERAMIC CHIP	1uF		16V
C716	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C717	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C718	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C719	1-164-173-11	CERAMIC CHIP	0.0039uF	10%	50V
C720	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C721	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C722	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C723	1-162-638-11	CERAMIC CHIP	1uF		16V
C724	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C726	1-128-004-11	ELECT CHIP	10uF	20%	16V
C727	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C728	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C729	1-162-638-11	CERAMIC CHIP	1uF		16V
C740	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C741	1-135-211-11	TANTAL. CHIP	6.8uF	20%	6.3V
C742	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C743	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C744	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C745	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C746	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C747	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C748	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C749	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C750	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C751	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V

Ref. No.	Part No.	Description		Remark	
C752	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C753	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C754	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C755	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C756	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C757	1-135-211-11	TANTAL. CHIP	6.8uF	20%	6.3V
C758	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C761	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V
C765	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C766	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C767	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C768	1-165-128-11	CERAMIC CHIP	0.22uF		16V
C771	1-135-210-11	TANTALUM CHIP	4.7uF	20%	10V
C772	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C773	1-135-211-11	TANTAL. CHIP	6.8uF	20%	6.3V
C901	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C902	1-164-361-11	CERAMIC CHIP	0.047uF		16V
C903	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C905	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C906	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C907	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C908	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C909	1-164-346-11	CERAMIC CHIP	1uF		16V
C910	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
C911	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C912	1-164-346-11	CERAMIC CHIP	1uF		16V
C913	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C915	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C916	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C917	1-135-156-21	TANTALUM CHIP	6.8uF	10%	10V
C918	1-164-361-11	CERAMIC CHIP	0.047uF		16V
C919	1-164-361-11	CERAMIC CHIP	0.047uF		16V
C920	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C921	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C922	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C923	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C924	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C931	1-164-471-11	CERAMIC CHIP	680PF	5%	50V
< CONNECTOR >					
CN601	1-695-409-11	CONNECTOR, BOARD TO BOARD	16P		
CN641	1-691-487-21	CONNECTOR, FFC/FPC	8P		
CN711	1-573-361-11	CONNECTOR, FFC/FPC	21P		
CN740	1-691-491-21	CONNECTOR, FFC/FPC	12P		
CN743	1-691-485-21	CONNECTOR, FFC/FPC	6P		
* CN901	1-750-982-21	CONNECTOR, BOARD TO BOARD	40P		
CN903	1-691-486-11	CONNECTOR, FFC/FPC	7P		

VC-132

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		< TRIMMER >					
CT601	1-141-356-11	CAP, ADJ 6PF (28MHz OSC)		L642	1-412-058-11	INDUCTOR CHIP 10uH	
		< DIODE >		L643	1-412-058-11	INDUCTOR CHIP 10uH	
D601	8-719-404-46	DIODE MA110		L644	1-412-058-11	INDUCTOR CHIP 10uH	
D602	8-719-404-35	DIODE MA141WK		L645	1-412-006-31	INDUCTOR CHIP 10uH	
△D901	8-719-421-27	DIODE MA728		L646	1-410-391-11	INDUCTOR CHIP 68uH	
		< FILTER >		L647	1-412-006-31	INDUCTOR CHIP 10uH	
FL641	1-236-834-21	FILTER, LOW PASS		L648	1-412-052-21	INDUCTOR CHIP 1uH	
FL642	1-415-751-21	DELAY LINE, LC (YH)		L649	1-412-052-21	INDUCTOR CHIP 1uH	
FL901	1-406-452-11	COIL, OSC		L650	1-412-979-21	INDUCTOR 1uH	
		< IC >		L651	1-412-979-21	INDUCTOR 1uH	
IC601	8-752-355-07	IC CXD1267N-T4		L652	1-412-052-21	INDUCTOR CHIP 1uH	
IC602	8-752-350-16	IC CXD1257AR		L653	1-412-052-21	INDUCTOR CHIP 1uH	
IC603	8-752-053-26	IC CXA1399Q		L711	1-412-062-11	INDUCTOR CHIP 47uH	
IC604	8-752-060-50	IC CXA1577R		L712	1-412-058-11	INDUCTOR CHIP 10uH	
IC641	8-759-044-78	IC AK6420F		L740	1-412-058-11	INDUCTOR CHIP 10uH	
IC653	8-759-195-71	SC424605FUV (68HC11)		L741	1-412-006-31	INDUCTOR CHIP 10uH	
IC654	8-759-064-36	IC MB88346BPFV		L742	1-412-058-11	INDUCTOR CHIP 10uH	
IC655	8-752-355-56	IC CXD2104BN		L743	1-412-058-11	INDUCTOR CHIP 10uH	
IC656	8-759-180-77	IC CXD2133AR-T6		L744	1-410-993-11	INDUCTOR CHIP 1uH	
IC659	8-752-350-13	IC CXD2130R		L901	1-410-389-31	INDUCTOR CHIP 47uH	
IC660	8-752-358-10	IC CXD2101BR		L902	1-412-026-11	INDUCTOR CHIP 1uH	
IC662	8-759-710-29	IC NJM2235M		L903	1-410-389-31	INDUCTOR CHIP 47uH	
IC711	8-759-701-24	IC NJM3414M		L904	1-412-026-11	INDUCTOR CHIP 1uH	
IC712	8-759-998-98	IC LM358D		L905	1-410-389-31	INDUCTOR CHIP 47uH	
IC713	8-759-058-47	IC MPC1724VM				< IC LINK >	
IC714	8-759-998-96	IC LM324D		△PS901	1-576-123-21	LINK, IC (0.8A)	
IC715	8-759-823-51	IC LB1830M				< TRANSISTOR >	
IC740	8-759-701-24	IC NJM3414M		Q601	8-729-403-27	TRANSISTOR XN4401	
IC741	8-759-998-96	IC LM324D		Q602	8-729-402-84	TRANSISTOR XN4601	
IC742	8-759-981-75	IC RC3403AM		Q642	8-729-010-60	TRANSISTOR MSA1586-BC	
IC743	8-759-701-24	IC NJM3414M		Q643	8-729-010-75	TRANSISTOR MSC4116-B/C	
IC744	8-759-058-98	IC SC370605D		Q644	8-729-010-75	TRANSISTOR MSC4116-B/C	
IC745	8-752-842-54	IC CXP80620A-020R		Q645	8-729-010-60	TRANSISTOR MSA1586-BC	
IC901	8-759-044-78	IC AK6420F		Q711	8-729-602-21	TRANSISTOR 2SC4154-F	
IC902	8-759-166-14	IC MB89092PFV-G-128		Q712	8-729-403-27	TRANSISTOR XN4401	
IC903	8-759-056-84	IC S-8420AF		Q713	8-729-013-88	TRANSISTOR RN1302-TE85L	
IC904	8-759-059-05	IC TL1596CPW				< RESISTOR >	
IC905	8-759-168-42	IC uPD6461GS-606-GLG		R601	1-216-833-11	METAL CHIP 10K 5% 1/16W	
		< COIL >		R602	1-216-833-11	METAL CHIP 10K 5% 1/16W	
L602	1-412-058-11	INDUCTOR CHIP 10uH		R604	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
L603	1-412-058-11	INDUCTOR CHIP 10uH		R605	1-218-721-11	METAL CHIP 16K 0.50% 1/16W	
L604	1-412-058-11	INDUCTOR CHIP 10uH		R606	1-216-821-11	METAL CHIP 1K 5% 1/16W	
L641	1-412-006-31	INDUCTOR CHIP 10uH		R607	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
				R608	1-216-833-11	METAL CHIP 10K 5% 1/16W	
				R609	1-216-837-11	METAL CHIP 22K 5% 1/16W	
				R610	1-216-805-11	METAL CHIP 47 5% 1/16W	

<p>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
-----------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R611	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	R697	1-216-817-11	METAL CHIP	470	5%	1/16W
R612	1-216-801-11	METAL CHIP	22	5%	1/16W	R698	1-216-834-11	METAL CHIP	12K	5%	1/16W
R613	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R699	1-216-834-11	METAL CHIP	12K	5%	1/16W
R614	1-216-816-11	METAL CHIP	390	5%	1/16W	R701	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R615	1-216-864-11	METAL CHIP	0	5%	1/16W	R702	1-216-841-11	METAL CHIP	47K	5%	1/16W
R616	1-216-864-11	METAL CHIP	0	5%	1/16W	R703	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R636	1-216-864-11	METAL CHIP	0	5%	1/16W	R704	1-216-841-11	METAL CHIP	47K	5%	1/16W
R637	1-216-833-11	METAL CHIP	10K	5%	1/16W	R705	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R638	1-216-864-11	METAL CHIP	0	5%	1/16W	R706	1-216-821-11	METAL CHIP	1K	5%	1/16W
R639	1-216-864-11	METAL CHIP	0	5%	1/16W	R707	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R641	1-216-833-11	METAL CHIP	10K	5%	1/16W	R708	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R642	1-216-833-11	METAL CHIP	10K	5%	1/16W	R709	1-216-864-11	METAL CHIP	0	5%	1/16W
R643	1-216-821-11	METAL CHIP	1K	5%	1/16W	R710	1-216-821-11	METAL CHIP	1K	5%	1/16W
R644	1-216-821-11	METAL CHIP	1K	5%	1/16W	R711	1-216-815-11	METAL CHIP	330	5%	1/16W
R645	1-216-821-11	METAL CHIP	1K	5%	1/16W	R712	1-216-821-11	METAL CHIP	1K	5%	1/16W
R646	1-216-821-11	METAL CHIP	1K	5%	1/16W	R713	1-216-845-11	METAL CHIP	100K	5%	1/16W
R647	1-216-857-11	METAL CHIP	1M	5%	1/16W	R714	1-216-855-11	METAL CHIP	680K	5%	1/16W
R648	1-216-833-11	METAL CHIP	10K	5%	1/16W	R715	1-216-848-11	METAL CHIP	180K	5%	1/16W
R649	1-216-864-11	METAL CHIP	0	5%	1/16W	R716	1-216-848-11	METAL CHIP	180K	5%	1/16W
R650	1-216-833-11	METAL CHIP	10K	5%	1/16W	R717	1-216-833-11	METAL CHIP	10K	5%	1/16W
R651	1-216-821-11	METAL CHIP	1K	5%	1/16W	R718	1-216-837-11	METAL CHIP	22K	5%	1/16W
R652	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R719	1-216-837-11	METAL CHIP	22K	5%	1/16W
R653	1-216-833-11	METAL CHIP	10K	5%	1/16W	R720	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R654	1-216-833-11	METAL CHIP	10K	5%	1/16W	R721	1-216-842-11	METAL CHIP	56K	5%	1/16W
R655	1-216-833-11	METAL CHIP	10K	5%	1/16W	R722	1-218-871-11	METAL CHIP	10K	0.50%	1/16W
R656	1-216-857-11	METAL CHIP	1M	5%	1/16W	R723	1-218-744-11	METAL CHIP	150K	0.50%	1/16W
R657	1-216-857-11	METAL CHIP	1M	5%	1/16W	R724	1-216-833-11	METAL CHIP	10K	5%	1/16W
R661	1-216-864-11	METAL CHIP	0	5%	1/16W	R725	1-216-833-11	METAL CHIP	10K	5%	1/16W
R662	1-216-805-11	METAL CHIP	47	5%	1/16W	R726	1-216-833-11	METAL CHIP	10K	5%	1/16W
R665	1-216-864-11	METAL CHIP	0	5%	1/16W	R727	1-216-820-11	METAL CHIP	820	5%	1/16W
R666	1-216-864-11	METAL CHIP	0	5%	1/16W	R728	1-216-841-11	METAL CHIP	47K	5%	1/16W
R667	1-216-864-11	METAL CHIP	0	5%	1/16W	R729	1-216-837-11	METAL CHIP	22K	5%	1/16W
R671	1-216-821-11	METAL CHIP	1K	5%	1/16W	R730	1-216-851-11	METAL CHIP	330K	5%	1/16W
R672	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R731	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R673	1-216-845-11	METAL CHIP	100K	5%	1/16W	R732	1-216-837-11	METAL CHIP	22K	5%	1/16W
R674	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R733	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R675	1-216-838-11	METAL CHIP	27K	5%	1/16W	R734	1-218-881-11	METAL CHIP	27K	0.50%	1/16W
R676	1-216-839-11	METAL CHIP	33K	5%	1/16W	R735	1-216-134-00	METAL CHIP	2.2	5%	1/8W
R677	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R736	1-216-833-11	METAL CHIP	10K	5%	1/16W
R678	1-216-837-11	METAL CHIP	22K	5%	1/16W	R737	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R679	1-216-847-11	METAL CHIP	150K	5%	1/16W	R738	1-218-879-11	METAL CHIP	22K	0.50%	1/16W
R680	1-216-839-11	METAL CHIP	33K	5%	1/16W	R739	1-216-857-11	METAL CHIP	1M	5%	1/16W
R681	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	R740	1-218-688-11	METAL CHIP	680	0.50%	1/16W
R682	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	R741	1-218-716-11	METAL CHIP	10K	0.50%	1/16W
R683	1-216-837-11	METAL CHIP	22K	5%	1/16W	R742	1-218-716-11	METAL CHIP	10K	0.50%	1/16W
R684	1-216-839-11	METAL CHIP	33K	5%	1/16W	R743	1-218-740-11	METAL CHIP	100K	0.50%	1/16W
R694	1-216-815-11	METAL CHIP	330	5%	1/16W	R744	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R695	1-216-833-11	METAL CHIP	10K	5%	1/16W	R745	1-218-708-11	METAL CHIP	4.7K	0.50%	1/16W
R696	1-216-817-11	METAL CHIP	470	5%	1/16W						

VC-132

Ref. No.	Part No.	Description	Remark
R746	1-218-688-11	METAL CHIP	680 0.50% 1/16W
R747	1-216-837-11	METAL CHIP	22K 5% 1/16W
R748	1-216-837-11	METAL CHIP	22K 5% 1/16W
R749	1-216-837-11	METAL CHIP	22K 5% 1/16W
R750	1-216-837-11	METAL CHIP	22K 5% 1/16W
R751	1-218-716-11	METAL CHIP	10K 0.50% 1/16W
R752	1-218-716-11	METAL CHIP	10K 0.50% 1/16W
R753	1-218-740-11	METAL CHIP	100K 0.50% 1/16W
R754	1-216-823-11	METAL CHIP	1.5K 5% 1/16W
R755	1-218-740-11	METAL CHIP	100K 0.50% 1/16W
R756	1-218-740-11	METAL CHIP	100K 0.50% 1/16W
R757	1-218-708-11	METAL CHIP	4.7K 0.50% 1/16W
R758	1-216-840-11	METAL CHIP	39K 5% 1/16W
R759	1-218-740-11	METAL CHIP	100K 0.50% 1/16W
R760	1-218-748-11	METAL CHIP	220K 0.50% 1/16W
R761	1-218-748-11	METAL CHIP	220K 0.50% 1/16W
R762	1-218-740-11	METAL CHIP	100K 0.50% 1/16W
R763	1-216-840-11	METAL CHIP	39K 5% 1/16W
R764	1-218-887-11	METAL CHIP	47K 0.50% 1/16W
R765	1-218-887-11	METAL CHIP	47K 0.50% 1/16W
R766	1-216-821-11	METAL CHIP	1K 5% 1/16W
R768	1-216-837-11	METAL CHIP	22K 5% 1/16W
R769	1-216-837-11	METAL CHIP	22K 5% 1/16W
R770	1-216-864-11	METAL CHIP	0 5% 1/16W
R771	1-216-864-11	METAL CHIP	0 5% 1/16W
R772	1-216-864-11	METAL CHIP	0 5% 1/16W
R773	1-216-864-11	METAL CHIP	0 5% 1/16W
R778	1-216-814-11	METAL CHIP	270 5% 1/16W
R779	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R780	1-216-857-11	METAL CHIP	1M 5% 1/16W
R900	1-216-809-11	METAL CHIP	100 5% 1/16W
R902	1-216-821-11	METAL CHIP	1K 5% 1/16W
R903	1-216-864-11	METAL CHIP	0 5% 1/16W
R904	1-216-864-11	METAL CHIP	0 5% 1/16W
R906	1-216-853-11	METAL CHIP	470K 5% 1/16W
R907	1-216-853-11	METAL CHIP	470K 5% 1/16W
R908	1-216-817-11	METAL CHIP	470 5% 1/16W
R909	1-216-817-11	METAL CHIP	470 5% 1/16W
R910	1-216-853-11	METAL CHIP	470K 5% 1/16W
R911	1-216-853-11	METAL CHIP	470K 5% 1/16W
R912	1-216-817-11	METAL CHIP	470 5% 1/16W
R913	1-216-845-11	METAL CHIP	100K 5% 1/16W
R914	1-216-845-11	METAL CHIP	100K 5% 1/16W
R915	1-216-817-11	METAL CHIP	470 5% 1/16W
R916	1-216-845-11	METAL CHIP	100K 5% 1/16W
R917	1-216-853-11	METAL CHIP	470K 5% 1/16W
R918	1-216-841-11	METAL CHIP	47K 5% 1/16W
R919	1-216-845-11	METAL CHIP	100K 5% 1/16W
R920	1-216-864-11	METAL CHIP	0 5% 1/16W

Ref. No.	Part No.	Description	Remark
R921	1-216-845-11	METAL CHIP	100K 5% 1/16W
R922	1-216-845-11	METAL CHIP	100K 5% 1/16W
R923	1-216-821-11	METAL CHIP	1K 5% 1/16W
R925	1-216-821-11	METAL CHIP	1K 5% 1/16W
R926	1-216-809-11	METAL CHIP	100 5% 1/16W
R927	1-216-809-11	METAL CHIP	100 5% 1/16W
R929	1-216-817-11	METAL CHIP	470 5% 1/16W
R930	1-216-821-11	METAL CHIP	1K 5% 1/16W
R932	1-216-851-11	METAL CHIP	330K 5% 1/16W
R933	1-216-864-11	METAL CHIP	0 5% 1/16W
R935	1-216-841-11	METAL CHIP	47K 5% 1/16W
R936	1-216-841-11	METAL CHIP	47K 5% 1/16W
R937	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R938	1-216-845-11	METAL CHIP	100K 5% 1/16W
R939	1-216-821-11	METAL CHIP	1K 5% 1/16W
R940	1-216-821-11	METAL CHIP	1K 5% 1/16W
R941	1-216-817-11	METAL CHIP	470 5% 1/16W
R942	1-216-817-11	METAL CHIP	470 5% 1/16W
R943	1-216-864-11	METAL CHIP	0 5% 1/16W
R944	1-216-841-11	METAL CHIP	47K 5% 1/16W
R945	1-216-841-11	METAL CHIP	47K 5% 1/16W
R946	1-216-817-11	METAL CHIP	470 5% 1/16W
R947	1-216-841-11	METAL CHIP	47K 5% 1/16W
R948	1-216-809-11	METAL CHIP	100 5% 1/16W
R949	1-218-702-91	METAL CHIP	2.7K 0.50% 1/16W
R950	1-216-809-11	METAL CHIP	100 5% 1/16W
R951	1-216-841-11	METAL CHIP	47K 5% 1/16W
R952	1-216-841-11	METAL CHIP	47K 5% 1/16W
R953	1-216-841-11	METAL CHIP	47K 5% 1/16W
R954	1-216-864-11	METAL CHIP	0 5% 1/16W
R955	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R956	1-216-864-11	METAL CHIP	0 5% 1/16W
R957	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R958	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R959	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R960	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R962	1-216-845-11	METAL CHIP	100K 5% 1/16W
R963	1-216-845-11	METAL CHIP	100K 5% 1/16W
R966	1-216-864-11	METAL CHIP	0 5% 1/16W
R967	1-216-864-11	METAL CHIP	0 5% 1/16W
R968	1-216-809-11	METAL CHIP	100 5% 1/16W
R969	1-216-809-11	METAL CHIP	100 5% 1/16W
R970	1-216-809-11	METAL CHIP	100 5% 1/16W
< RES NETWORK >			
RB903	1-236-412-11	NETWORK, RES 1.0K x 2	
RB904	1-236-412-11	NETWORK, RES 1.0K x 2	
RB905	1-236-412-11	NETWORK, RES 1.0K x 2	
RB906	1-236-412-11	NETWORK, RES 1.0K x 2	

Ref. No.	Part No.	Description	Remark
RB907	1-236-412-11	NETWORK, RES 1.0K x 2	
RB908	1-236-412-11	NETWORK, RES 1.0K x 2	
RB909	1-236-412-11	NETWORK, RES 1.0K x 2	
RB910	1-236-412-11	NETWORK, RES 1.0K x 2	
RB911	1-236-412-11	NETWORK, RES 1.0K x 2	
RB912	1-236-412-11	NETWORK, RES 1.0K x 2	
< VIBRATOR >			
X601	1-579-619-11	VIBRATOR, CRYSTAL (28.6363MHz)	
X641	1-760-150-21	VIBRATOR, CERAMIC (20MHz)	
X740	1-579-553-11	VIBRATOR (12MHz)	
X901	1-579-049-21	VIBRATOR, CRYSTAL (32KHz)	
XTL901	1-579-369-21	VIBRATOR (10MHz)	

A-7063-779-A VF-68 BOARD, COMPLETE			

(Ref. No. 8, 000 Series)			
3-942-888-01 HOLDER, LED			
< CAPACITOR >			
C804	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C805	1-135-091-00	TANTALUM CHIP 1uF	20% 16V
C806	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C807	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C808	1-135-145-11	TANTALUM CHIP 0.47uF	10% 35V
C809	1-135-337-11	TANTALUM CHIP 1uF	20% 6.3V
C810	1-135-337-11	TANTALUM CHIP 1uF	20% 6.3V
C811	1-164-346-11	CERAMIC CHIP 1uF	16V
C812	1-135-179-21	TANTAL. CHIP 2.2uF	20% 16V
C813	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C814	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C815	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C816	1-164-699-11	CERAMIC CHIP 0.0033uF	5% 50V
C817	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C818	1-162-919-11	CERAMIC CHIP 22PF	5% 50V
C819	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
C820	1-164-357-11	CERAMIC CHIP 1000PF	5% 50V
C821	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C822	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C823	1-164-346-11	CERAMIC CHIP 1uF	16V
C824	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C825	1-162-919-11	CERAMIC CHIP 22PF	5% 50V
C828	1-162-919-11	CERAMIC CHIP 22PF	5% 50V
C829	1-162-919-11	CERAMIC CHIP 22PF	5% 50V
C830	1-162-919-11	CERAMIC CHIP 22PF	5% 50V
C832	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C833	1-164-361-11	CERAMIC CHIP 0.047uF	16V
C834	1-164-361-11	CERAMIC CHIP 0.047uF	16V

Ref. No.	Part No.	Description	Remark
C835	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C838	1-162-919-11	CERAMIC CHIP 22PF	5% 50V
C839	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C840	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C842	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C844	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C845	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C846	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C847	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C848	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C849	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C850	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C851	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C852	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C853	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C861	1-164-346-11	CERAMIC CHIP 1uF	16V
C862	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C863	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C864	1-135-179-21	TANTAL. CHIP 2.2uF	20% 16V
C865	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C866	1-162-921-11	CERAMIC CHIP 33PF	5% 50V
C867	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C872	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C873	1-164-005-11	CERAMIC CHIP 0.47uF	25V
< CONNECTOR >			
CN801	1-573-990-21	CONNECTOR, BOARD TO BOARD 10P	
* CN802	1-573-356-11	CONNECTOR, FFC/FPC 16P	
* CN803	1-573-351-11	CONNECTOR, FFC/FPC 11P	
< DIODE >			
D801	8-719-025-91	DIODE MA365(E)	
D802	8-719-984-02	LED BR4371F	
< IC >			
IC801	8-752-058-96	IC CXA1585Q	
IC802	8-752-058-95	IC CXA1515Q	
IC803	8-752-362-78	IC CXD2403R	
< COIL >			
L801	1-414-078-11	INDUCTOR 10uH	
L803	1-414-078-11	INDUCTOR 10uH	
L805	1-412-962-11	INDUCTOR 82uH	
L806	1-412-962-11	INDUCTOR 82uH	
L807	1-412-962-11	INDUCTOR 82uH	
L808	1-412-950-11	INDUCTOR 8.2uH	
L809	1-412-962-11	INDUCTOR 82uH	
L810	1-410-192-51	INDUCTOR 1uH	

Ref. No.	Part No.	Description	Remark
< TRANSISTOR >			
Q801	8-729-427-74	TRANSISTOR XP4601	
Q802	8-729-425-64	TRANSISTOR 2SD2216Q	
< RESISTOR >			
R801	1-218-958-11	METAL GLAZE 2.7K 5%	1/16W
R802	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R803	1-218-955-11	METAL GLAZE 1.5K 5%	1/16W
R805	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R806	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R807	1-218-970-11	METAL GLAZE 27K 5%	1/16W
R808	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R809	1-218-953-11	METAL GLAZE 1K 5%	1/16W
R810	1-218-953-11	METAL GLAZE 1K 5%	1/16W
R811	1-218-953-11	METAL GLAZE 1K 5%	1/16W
R812	1-218-966-11	METAL GLAZE 12K 5%	1/16W
R813	1-218-973-11	METAL GLAZE 47K 5%	1/16W
R814	1-218-989-11	METAL GLAZE 1M 5%	1/16W
R815	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R816	1-218-971-11	METAL GLAZE 33K 5%	1/16W
R817	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R818	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R819	1-218-980-11	METAL GLAZE 180K 5%	1/16W
R820	1-218-970-11	METAL GLAZE 27K 5%	1/16W
R821	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R822	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R823	1-218-971-11	METAL GLAZE 33K 5%	1/16W
R824	1-218-990-11	METAL GLAZE 0 5%	1/16W
R825	1-218-989-11	METAL GLAZE 1M 5%	1/16W
R826	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R827	1-218-971-11	METAL GLAZE 33K 5%	1/16W
R828	1-218-984-11	METAL GLAZE 390K 5%	1/16W
R829	1-218-984-11	METAL GLAZE 390K 5%	1/16W
R830	1-218-984-11	METAL GLAZE 390K 5%	1/16W
R831	1-218-944-11	METAL GLAZE 180 5%	1/16W
R833	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R834	1-218-971-11	METAL GLAZE 33K 5%	1/16W
R835	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R836	1-218-976-11	METAL GLAZE 82K 5%	1/16W
R837	1-218-990-11	METAL GLAZE 0 5%	1/16W
R838	1-218-973-11	METAL GLAZE 47K 5%	1/16W
R839	1-218-990-11	METAL GLAZE 0 5%	1/16W
R840	1-218-973-11	METAL GLAZE 47K 5%	1/16W
R841	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R842	1-218-953-11	METAL GLAZE 1K 5%	1/16W
R843	1-218-971-11	METAL GLAZE 33K 5%	1/16W
R849	1-218-965-11	METAL GLAZE 10K 5%	1/16W

Ref. No.	Part No.	Description	Remark
R856	1-218-990-11	METAL GLAZE 0 5%	1/16W
R861	1-218-875-11	METAL CHIP 15K 0.50%	1/16W
R862	1-218-905-11	METAL CHIP 270K 0.50%	1/16W
R863	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R864	1-218-981-11	METAL GLAZE 220K 5%	1/16W
R865	1-218-953-11	METAL GLAZE 1K 5%	1/16W
R866	1-218-952-11	METAL GLAZE 820 5%	1/16W
R867	1-218-967-11	METAL GLAZE 15K 5%	1/16W
R868	1-218-966-11	METAL GLAZE 12K 5%	1/16W
< VARIABLE RESISTOR >			
RV802	1-241-480-11	RES, ADJ, CERMET 47K	
RV803	1-241-480-11	RES, ADJ, CERMET 47K	
RV804	1-241-480-11	RES, ADJ, CERMET 47K	
< VIBRATOR >			
X801	1-579-466-11	VIBRATOR, CRYSTAL (3.58MHz)	

△	A-7063-780-A	VF-69 BOARD, COMPLETE	

(Ref. No. 8,000 Series)			
< CAPACITOR >			
C951	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C954	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C955	1-164-676-11	CERAMIC CHIP 2200PF 5%	16V
C957	1-162-967-11	CERAMIC CHIP 0.0033uF 10%	50V
C958	1-135-215-21	TANTAL. CHIP 6.8uF 20%	16V
C959	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V
C960	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V
C961	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C963	1-104-913-11	TANTAL. CHIP 10uF 20%	16V
C964	1-164-836-11	CERAMIC CHIP 6.8uF	16V
C966	1-165-128-11	CERAMIC CHIP 0.22uF	16V
C969	1-163-018-00	CERAMIC CHIP 0.0056uF 5%	50V
C970	1-163-018-00	CERAMIC CHIP 0.0056uF 5%	50V
C971	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V
C972	1-135-177-21	TANTALUM CHIP 1uF 20%	20V
C973	1-162-921-11	CERAMIC CHIP 33PF 5%	50V
C974	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C975	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C976	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C977	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C978	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C979	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C980	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C981	1-162-923-11	CERAMIC CHIP 47PF 5%	50V

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
< CONNECTOR >			
CN951	1-580-789-21	PIN, CONNECTOR (SMD) 6P	
* CN953	1-573-351-11	CONNECTOR, FFC/FPC 11P	
* CN955	1-580-267-11	CONNECTOR, BOARD TO BOARD 20P	
< DIODE >			
D951	8-719-043-70	DIODE MA6S121-(TX)	
D952	8-719-404-19	DIODE LN1251C	
D954	8-719-802-36	DIODE 1SS250	
D955	8-719-820-41	DIODE 1SS302	
D956	8-719-027-45	DIODE MA740	
D957	8-719-027-45	DIODE MA740	
D958	8-719-420-14	DIODE MA8082-M	
D959	8-719-420-14	DIODE MA8082-M	
D960	8-719-420-14	DIODE MA8082-M	
< IC >			
IC951	8-759-097-75	IC MB3789PFV-G-BND	
IC952	8-759-070-51	IC SN74HCU04ADB	
IC954	8-759-998-98	IC LM358D	
< COIL >			
L951	1-414-080-11	INDUCTOR 22uH	
L952	1-412-029-11	INDUCTOR CHIP 10uH	
L953	1-412-030-11	INDUCTOR CHIP 22uH	
< TRANSISTOR >			
Q951	8-729-929-24	TRANSISTOR DTC143TE-TL	
Q953	8-729-015-64	TRANSISTOR MTD9N10E	
Q954	8-729-928-55	TRANSISTOR DTA123JE	
< RESISTOR >			
R951	1-218-971-11	METAL GLAZE 33K 5% 1/16W	
R953	1-218-981-11	METAL GLAZE 220K 5% 1/16W	
R954	1-218-975-11	METAL GLAZE 68K 5% 1/16W	
R957	1-218-973-11	METAL GLAZE 47K 5% 1/16W	
R958	1-218-965-11	METAL GLAZE 10K 5% 1/16W	
R959	1-218-744-11	METAL CHIP 150K 0.50% 1/16W	
R960	1-216-848-11	METAL CHIP 180K 5% 1/16W	
R961	1-218-982-11	METAL GLAZE 270K 5% 1/16W	
R962	1-218-973-11	METAL GLAZE 47K 5% 1/16W	
R963	1-218-970-11	METAL GLAZE 27K 5% 1/16W	
R965	1-218-975-11	METAL GLAZE 68K 5% 1/16W	
R966	1-218-973-11	METAL GLAZE 47K 5% 1/16W	
R967	1-218-903-11	METAL CHIP 220K 0.50% 1/16W	
R968	1-218-744-11	METAL CHIP 150K 0.50% 1/16W	
R970	1-218-980-11	METAL GLAZE 180K 5% 1/16W	
R971	1-218-970-11	METAL GLAZE 27K 5% 1/16W	

Ref. No.	Part No.	Description	Remark
R973	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R974	1-216-849-11	METAL CHIP 220K 5% 1/16W	
R975	1-216-846-11	METAL CHIP 120K 5% 1/16W	
R978	1-218-969-11	METAL GLAZE 22K 5% 1/16W	
R979	1-218-961-11	METAL GLAZE 4.7K 5% 1/16W	
R980	1-218-936-11	METAL GLAZE 39 5% 1/16W	
R981	1-218-962-11	METAL GLAZE 5.6K 5% 1/16W	
R982	1-218-966-11	METAL GLAZE 12K 5% 1/16W	
R983	1-218-972-11	METAL GLAZE 39K 5% 1/16W	
R984	1-218-960-11	METAL GLAZE 3.9K 5% 1/16W	
R985	1-218-965-11	METAL GLAZE 10K 5% 1/16W	
R986	1-218-962-11	METAL GLAZE 5.6K 5% 1/16W	
R991	1-216-296-00	METAL CHIP 0 5% 1/8W	
R997	1-218-973-11	METAL GLAZE 47K 5% 1/16W	
R998	1-218-977-11	METAL GLAZE 100K 5% 1/16W	
< VARIABLE RESISTOR >			
RV951	1-241-480-11	RES, ADJ, CERMET 47K	
RV953	1-230-523-11	RES, ADJ, METAL 10K (BRIGHTNESS)	
RV954	1-230-523-11	RES, ADJ, METAL 10K (COLOR)	
RV955	1-230-523-11	RES, ADJ, METAL 10K (HUE)	
< TRANSFORMER >			
T951	1-450-900-11	TRANSFORMER, INVERTER	

A-7063-771-A VS-99 BOARD, COMPLETE			

(Ref. No. 3,000 Series)			
1-809-358-11 THERMISTOR, NTC (2125)			
< CAPACITOR >			
C002	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C003	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C004	1-162-926-11	CERAMIC CHIP 82PF 5% 50V	
C005	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C006	1-164-217-11	CERAMIC CHIP 150PF 5% 50V	
C020	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C021	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C022	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C023	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C024	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
C025	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
C026	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C027	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C029	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C030	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C038	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C039	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	

Ref. No.	Part No.	Description	Remark
C040	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C041	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C043	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C044	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C046	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C047	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C048	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C049	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C050	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C051	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C052	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C053	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C054	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C055	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C056	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C057	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C058	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C059	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C060	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C061	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C062	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C064	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C072	1-165-112-11	CERAMIC CHIP	0.33uF 16V
C073	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C074	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C075	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C095	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C096	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C103	1-162-962-11	CERAMIC CHIP	470PF 10% 50V
C104	1-165-128-11	CERAMIC CHIP	0.22uF 16V
C121	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C122	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C123	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C125	1-162-951-11	CERAMIC CHIP	68PF 5% 50V
C129	1-162-952-11	CERAMIC CHIP	82PF 5% 50V
C130	1-162-942-11	CERAMIC CHIP	12PF 5% 50V
C131	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C132	1-162-956-11	CERAMIC CHIP	180PF 5% 50V
C133	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C134	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C137	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C139	1-162-947-11	CERAMIC CHIP	33PF 5% 50V
C140	1-162-958-11	CERAMIC CHIP	270PF 5% 50V
C141	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C143	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C146	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C156	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C160	1-162-947-11	CERAMIC CHIP	33PF 5% 50V

Ref. No.	Part No.	Description	Remark
C164	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C170	1-162-958-11	CERAMIC CHIP	270PF 5% 50V
C195	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C200	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C201	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C231	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C233	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C234	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C235	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C236	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C237	1-126-246-11	ELECT CHIP	220uF 20% 4V
C238	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C239	1-135-192-21	TANTAL. CHIP	0.47uF 20% 20V
C240	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C241	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C242	1-135-180-21	TANTALUM CHIP	3.3uF 20% 6.3V
C244	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C246	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C247	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
C248	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C249	1-162-953-11	CERAMIC CHIP	100PF 5% 50V
C250	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C251	1-164-471-11	CERAMIC CHIP	680PF 5% 50V
C253	1-164-346-11	CERAMIC CHIP	1uF 16V
C254	1-126-205-11	ELECT CHIP	47uF 20% 6.3V
C255	1-135-181-21	TANTALUM CHIP	4.7uF 20% 6.3V
C256	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C257	1-135-180-21	TANTALUM CHIP	3.3uF 20% 6.3V
C258	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C259	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C260	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C261	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C262	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C263	1-162-948-11	CERAMIC CHIP	39PF 5% 50V
C264	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C267	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C268	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C272	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C275	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C276	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C277	1-162-949-11	CERAMIC CHIP	47PF 5% 50V
C278	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C279	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C280	1-162-959-11	CERAMIC CHIP	330PF 5% 50V
C281	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C282	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C284	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C285	1-162-953-11	CERAMIC CHIP	100PF 5% 50V
C286	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C287	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C376	1-128-004-11	ELECT CHIP	10uF 20% 16V
C288	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C378	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C290	1-164-005-11	CERAMIC CHIP	0.47uF 25V	C379	1-126-205-11	ELECT CHIP	47uF 20% 6.3V
C291	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C380	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C292	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C381	1-162-926-11	CERAMIC CHIP	82PF 5% 50V
C293	1-162-957-11	CERAMIC CHIP	220PF 5% 50V	C382	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C294	1-164-392-11	CERAMIC CHIP	390PF 5% 50V	C389	1-128-004-11	ELECT CHIP	10uF 20% 16V
C295	1-162-959-11	CERAMIC CHIP	330PF 5% 50V	C390	1-128-013-11	ELECT CHIP	1uF 20% 50V
C296	1-135-180-21	TANTALUM CHIP	3.3uF 20% 6.3V	C391	1-162-950-11	CERAMIC CHIP	56PF 5% 50V
C297	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C392	1-162-959-11	CERAMIC CHIP	330PF 5% 50V
C298	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C393	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C299	1-135-180-21	TANTALUM CHIP	3.3uF 20% 6.3V	C394	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C300	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C395	1-135-176-21	TANTALUM CHIP	0.68uF 10% 20V
C301	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C396	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C302	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C397	1-128-013-11	ELECT CHIP	1uF 20% 50V
C303	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C502	1-128-530-11	ELECT CHIP	33uF 20% 10V
C304	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C503	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C305	1-162-959-11	CERAMIC CHIP	330PF 5% 50V	C504	1-128-004-11	ELECT CHIP	10uF 20% 16V
C307	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C506	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C312	1-162-947-11	CERAMIC CHIP	33PF 5% 50V	C507	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C316	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C508	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C323	1-162-915-11	CERAMIC CHIP	10PF 0.5PF 50V	C509	1-162-937-11	CERAMIC CHIP	6PF 0.5PF 50V
C325	1-164-149-11	CERAMIC CHIP	36PF 5% 50V	C511	1-162-909-11	CERAMIC CHIP	4PF 0.25PF 50V
C328	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C512	1-163-077-00	CERAMIC CHIP	0.1uF 10% 25V
C330	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C513	1-164-298-11	CERAMIC CHIP	0.15uF 10% 25V
C332	1-162-955-11	CERAMIC CHIP	150PF 5% 50V	C514	1-164-298-11	CERAMIC CHIP	0.15uF 10% 25V
C333	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C515	1-162-942-11	CERAMIC CHIP	12PF 5% 50V
C334	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C516	1-163-037-11	CERAMIC CHIP	0.022uF 10% 25V
C335	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C517	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C336	1-162-957-11	CERAMIC CHIP	220PF 5% 50V	C518	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C338	1-162-957-11	CERAMIC CHIP	220PF 5% 50V	C519	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C340	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C520	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C344	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C521	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C346	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C522	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
C347	1-162-958-11	CERAMIC CHIP	270PF 5% 50V	C523	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
C349	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C524	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
C350	1-162-954-11	CERAMIC CHIP	120PF 5% 50V	C525	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C351	1-164-217-11	CERAMIC CHIP	150PF 5% 50V	C526	1-162-969-11	CERAMIC CHIP	0.0068uF 10% 25V
C352	1-162-957-11	CERAMIC CHIP	220PF 5% 50V	C527	1-162-969-11	CERAMIC CHIP	0.0068uF 10% 25V
C354	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C528	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C358	1-162-953-11	CERAMIC CHIP	100PF 5% 50V	C529	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C361	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	C530	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C362	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C532	1-162-965-11	CERAMIC CHIP	0.0015uF 10% 50V
C365	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C533	1-164-361-11	CERAMIC CHIP	0.047uF 16V
C366	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	C534	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C370	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C535	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C371	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C536	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C372	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V	C537	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C373	1-162-952-11	CERAMIC CHIP	82PF 5% 50V				

Ref. No.	Part No.	Description	Remark
C538	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C539	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C540	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C541	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C542	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C543	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C544	1-164-471-11	CERAMIC CHIP	680PF 5% 50V
C545	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C546	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C548	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C549	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C550	1-165-128-11	CERAMIC CHIP	0.22uF 16V
C551	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C552	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C553	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C554	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C555	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C556	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C557	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C558	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C559	1-164-173-11	CERAMIC CHIP	0.0039uF 10% 50V
C560	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C561	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C563	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C564	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C565	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C566	1-162-953-11	CERAMIC CHIP	100PF 5% 50V

< CONNECTOR >

CN002	1-580-789-21	PIN, CONNECTOR (SMD) 6P
CN101	1-691-492-21	CONNECTOR, FFC/FPC 13P
CN501	1-691-540-11	CONNECTOR, BOARD TO BOARD 40P
CN502	1-580-789-21	PIN, CONNECTOR (SMD) 6P
CN504	1-691-928-11	CONNECTOR, BOARD TO BOARD 32P
* CN505	1-691-935-11	CONNECTOR, BOARD TO BOARD 38P

< DIODE >

D073	8-719-404-46	DIODE MA110
D120	8-719-800-76	DIODE 1SS226
D232	8-719-404-35	DIODE MA141WK
D235	8-719-404-35	DIODE MA141WK
D236	8-719-404-35	DIODE MA141WK
D237	8-719-820-05	DIODE 1SS181
D239	8-719-820-05	DIODE 1SS181
D504	8-719-404-46	DIODE MA110
D505	8-719-027-50	DIODE MA142WK

Ref. No.	Part No.	Description	Remark
		< FILTER >	
FL161	1-236-757-21	FILTER, LOW PASS (C)	
FL201	1-239-113-21	FILTER, LOW PASS (REC Y)	
FL301	1-239-109-21	FILTER, BAND PASS	
FL302	1-236-146-11	FILTER, BAND PASS	
FL303	1-579-370-11	FILTER, CERAMIC	
		< IC >	
IC001	8-759-173-71	IC CXA1555CR-E2	
IC003	8-759-064-36	IC MB88346BPFV	
IC004	8-759-710-29	IC NJM2235M	
IC005	8-759-064-36	IC MB88346BPFV	
IC201	8-752-065-54	IC CXA1207AR	
IC202	8-759-636-33	IC CXA1452	
IC203	8-752-053-21	IC CXA1211M	
IC301	8-752-051-40	IC CXA1208R	
IC302	8-752-053-21	IC CXA1211M	
IC501	8-752-842-49	IC CXP80624A-025R	
IC502	8-759-169-11	IC CXA1575M-E2	
IC503	8-759-062-02	IC MPC1720VM	
IC504	8-759-059-42	IC CXA1481AR	
IC551	8-752-351-22	IC CXL5502N	
		< COIL >	
L001	1-412-033-11	INDUCTOR CHIP 220uH	
L002	1-410-381-11	INDUCTOR CHIP 10uH	
L004	1-410-385-41	INDUCTOR CHIP 22uH	
L006	1-412-032-11	INDUCTOR CHIP 100uH	
L007	1-412-032-11	INDUCTOR CHIP 100uH	
L008	1-410-385-41	INDUCTOR CHIP 22uH	
L012	1-412-029-11	INDUCTOR CHIP 10uH	
L024	1-412-029-11	INDUCTOR CHIP 10uH	
L025	1-412-029-11	INDUCTOR CHIP 10uH	
L101	1-412-282-41	INDUCTOR 470uH	
L102	1-410-657-21	INDUCTOR CHIP 180uH	
L105	1-412-029-11	INDUCTOR CHIP 10uH	
L116	1-412-029-11	INDUCTOR CHIP 10uH	
L120	1-412-280-31	INDUCTOR 330uH	
L121	1-410-387-11	INDUCTOR CHIP 33uH	
L164	1-412-959-11	INDUCTOR 47uH	
L202	1-412-029-11	INDUCTOR CHIP 10uH	
L204	1-410-379-31	INDUCTOR CHIP 6.8uH	
L205	1-410-655-31	INDUCTOR CHIP 120uH	
L207	1-410-384-31	INDUCTOR CHIP 18uH	
L210	1-410-388-31	INDUCTOR CHIP 39uH	
L212	1-412-963-11	INDUCTOR 100uH	
L214	1-410-390-11	INDUCTOR CHIP 56uH	
L301	1-412-029-11	INDUCTOR CHIP 10uH	
L302	1-410-393-11	INDUCTOR CHIP 100uH	

Ref. No.	Part No.	Description	Remark
L303	1-410-656-11	INDUCTOR CHIP 150uH	
L304	1-410-656-11	INDUCTOR CHIP 150uH	
L305	1-410-391-11	INDUCTOR CHIP 68uH	
L306	1-410-385-41	INDUCTOR CHIP 22uH	
L307	1-410-385-41	INDUCTOR CHIP 22uH	
L308	1-410-393-11	INDUCTOR CHIP 100uH	
L403	1-410-655-31	INDUCTOR CHIP 120uH	
L404	1-412-280-31	INDUCTOR 330uH	
L406	1-410-657-21	INDUCTOR CHIP 180uH	
L407	1-410-387-11	INDUCTOR CHIP 33uH	
L409	1-410-381-11	INDUCTOR CHIP 10uH	
L502	1-412-029-11	INDUCTOR CHIP 10uH	
L503	1-410-381-11	INDUCTOR CHIP 10uH	
L504	1-410-381-11	INDUCTOR CHIP 10uH	
L505	1-410-381-11	INDUCTOR CHIP 10uH	
L990	1-412-026-11	INDUCTOR CHIP 1UH	
< IC LINK >			
△PS501	1-576-123-21	LINK, IC (0.8A)	
< TRANSISTOR >			
Q001	8-729-140-63	TRANSISTOR 2SA1611-M5M6	
Q002	8-729-140-63	TRANSISTOR 2SA1611-M5M6	
Q003	8-729-216-22	TRANSISTOR 2SA1162-G	
Q007	8-729-015-66	TRANSISTOR 2SC4919	
Q008	8-729-015-66	TRANSISTOR 2SC4919	
Q012	8-729-428-88	TRANSISTOR UN9113	
Q013	8-729-428-88	TRANSISTOR UN9113	
Q017	8-729-402-42	TRANSISTOR UN5213	
Q022	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
Q023	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q025	8-729-402-42	TRANSISTOR UN5213	
Q072	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
Q073	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
Q074	8-729-402-42	TRANSISTOR UN5213	
Q075	8-729-420-56	TRANSISTOR UN511E	
Q076	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q078	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
Q079	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q080	8-729-101-07	TRANSISTOR 2SB798-DL	
Q120	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q121	8-729-420-12	TRANSISTOR XN4213	
Q124	8-729-102-07	TRANSISTOR 2SC2223-F13	
Q125	8-729-428-88	TRANSISTOR UN9113	
Q126	8-729-012-50	TRANSISTOR 2SC4400-3/4/5	
Q127	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q128	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q129	8-729-420-24	TRANSISTOR 2SB1218A-QRS	

Ref. No.	Part No.	Description	Remark
Q131	8-729-428-88	TRANSISTOR UN9113	
Q132	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q138	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q143	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q232	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
Q233	8-729-402-42	TRANSISTOR UN5213	
Q236	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
Q241	8-729-402-42	TRANSISTOR UN5213	
Q242	8-729-402-42	TRANSISTOR UN5213	
Q244	8-729-807-86	TRANSISTOR 2SB1295-UL5	
Q245	8-729-402-42	TRANSISTOR UN5213	
Q246	8-729-425-64	TRANSISTOR 2SD2216Q	
Q247	8-729-402-81	TRANSISTOR XN4501	
Q250	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q252	8-729-428-88	TRANSISTOR UN9113	
Q254	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
Q255	8-729-425-64	TRANSISTOR 2SD2216Q	
Q256	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q257	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q258	8-729-425-50	TRANSISTOR 2SB1462Q	
Q265	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q267	8-729-402-42	TRANSISTOR UN5213	
Q270	8-729-015-70	TRANSISTOR 2SA1865	
Q273	8-729-402-42	TRANSISTOR UN5213	
Q275	8-729-427-72	TRANSISTOR XP4501	
Q276	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q281	8-729-421-90	TRANSISTOR XN4113	
Q282	8-729-402-42	TRANSISTOR UN5213	
Q283	8-729-117-73	TRANSISTOR 2SC4178-F14	
Q287	8-729-402-42	TRANSISTOR UN5213	
Q288	8-729-402-42	TRANSISTOR UN5213	
Q289	8-729-402-42	TRANSISTOR UN5213	
Q291	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
Q292	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q294	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q295	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
Q299	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q301	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q501	8-729-420-12	TRANSISTOR XN4213	
Q502	8-729-421-90	TRANSISTOR XN4113	
Q503	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q511	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q513	8-729-017-67	TRANSISTOR 2SB1574	
Q514	8-729-403-35	TRANSISTOR UN5113	
Q905	8-729-230-63	TRANSISTOR 2SC4116-YG	
< RESISTOR >			
RO01	1-216-837-11	METAL CHIP 22K 5% 1/16W	

<p>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
-----------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------

Ref. No.	Part No.	Description	Remark		
R002	1-216-839-11	METAL CHIP	33K	5%	1/16W
R003	1-216-814-11	METAL CHIP	270	5%	1/16W
R004	1-216-813-11	METAL CHIP	220	5%	1/16W
R005	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R006	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R007	1-216-805-11	METAL CHIP	47	5%	1/16W
R008	1-216-804-11	METAL CHIP	39	5%	1/16W
R009	1-216-818-11	METAL CHIP	560	5%	1/16W
R011	1-216-864-11	METAL CHIP	0	5%	1/16W
R012	1-216-833-11	METAL CHIP	10K	5%	1/16W
R013	1-216-833-11	METAL CHIP	10K	5%	1/16W
R020	1-216-809-11	METAL CHIP	100	5%	1/16W
R022	1-216-820-11	METAL CHIP	820	5%	1/16W
R023	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R025	1-216-821-11	METAL CHIP	1K	5%	1/16W
R026	1-216-821-11	METAL CHIP	1K	5%	1/16W
R027	1-216-809-11	METAL CHIP	100	5%	1/16W
R028	1-216-837-11	METAL CHIP	22K	5%	1/16W
R029	1-216-837-11	METAL CHIP	22K	5%	1/16W
R030	1-216-837-11	METAL CHIP	22K	5%	1/16W
R031	1-216-821-11	METAL CHIP	1K	5%	1/16W
R032	1-216-821-11	METAL CHIP	1K	5%	1/16W
R035	1-216-815-11	METAL CHIP	330	5%	1/16W
R036	1-216-815-11	METAL CHIP	330	5%	1/16W
R037	1-216-864-11	METAL CHIP	0	5%	1/16W
R039	1-216-836-11	METAL CHIP	18K	5%	1/16W
R040	1-216-833-11	METAL CHIP	10K	5%	1/16W
R041	1-216-836-11	METAL CHIP	18K	5%	1/16W
R042	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R050	1-216-833-11	METAL CHIP	10K	5%	1/16W
R051	1-216-833-11	METAL CHIP	10K	5%	1/16W
R053	1-216-819-11	METAL CHIP	680	5%	1/16W
R054	1-216-809-11	METAL CHIP	100	5%	1/16W
R055	1-216-837-11	METAL CHIP	22K	5%	1/16W
R056	1-216-864-11	METAL CHIP	0	5%	1/16W
R057	1-216-837-11	METAL CHIP	22K	5%	1/16W
R062	1-216-864-11	METAL CHIP	0	5%	1/16W
R063	1-216-864-11	METAL CHIP	0	5%	1/16W
R066	1-216-864-11	METAL CHIP	0	5%	1/16W
R067	1-216-864-11	METAL CHIP	0	5%	1/16W
R068	1-216-864-11	METAL CHIP	0	5%	1/16W
R071	1-216-837-11	METAL CHIP	22K	5%	1/16W
R082	1-216-864-11	METAL CHIP	0	5%	1/16W
R083	1-216-864-11	METAL CHIP	0	5%	1/16W
R094	1-216-821-11	METAL CHIP	1K	5%	1/16W
R095	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R096	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R097	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R098	1-216-829-11	METAL CHIP	4.7K	5%	1/16W

Ref. No.	Part No.	Description	Remark		
R099	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R100	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R101	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R102	1-216-817-11	METAL CHIP	470	5%	1/16W
R103	1-216-843-11	METAL CHIP	68K	5%	1/16W
R105	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R106	1-216-820-11	METAL CHIP	820	5%	1/16W
R107	1-216-836-11	METAL CHIP	18K	5%	1/16W
R108	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R109	1-216-304-11	METAL CHIP	3.3	5%	1/10W
R110	1-216-296-00	METAL CHIP	0	5%	1/8W
R113	1-216-840-11	METAL CHIP	39K	5%	1/16W
R114	1-216-839-11	METAL CHIP	33K	5%	1/16W
R115	1-216-841-11	METAL CHIP	47K	5%	1/16W
R116	1-216-839-11	METAL CHIP	33K	5%	1/16W
R120	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R122	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R123	1-216-864-11	METAL CHIP	0	5%	1/16W
R124	1-216-834-11	METAL CHIP	12K	5%	1/16W
R125	1-216-833-11	METAL CHIP	10K	5%	1/16W
R126	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R127	1-216-815-11	METAL CHIP	330	5%	1/16W
R128	1-216-819-11	METAL CHIP	680	5%	1/16W
R129	1-216-811-11	METAL CHIP	150	5%	1/16W
R130	1-216-817-11	METAL CHIP	470	5%	1/16W
R131	1-216-808-11	METAL CHIP	82	5%	1/16W
R132	1-216-864-11	METAL CHIP	0	5%	1/16W
R133	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R134	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R135	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R137	1-216-837-11	METAL CHIP	22K	5%	1/16W
R138	1-216-837-11	METAL CHIP	22K	5%	1/16W
R139	1-216-821-11	METAL CHIP	1K	5%	1/16W
R140	1-216-864-11	METAL CHIP	0	5%	1/16W
R141	1-216-817-11	METAL CHIP	470	5%	1/16W
R143	1-216-817-11	METAL CHIP	470	5%	1/16W
R145	1-216-836-11	METAL CHIP	18K	5%	1/16W
R146	1-216-836-11	METAL CHIP	18K	5%	1/16W
R147	1-216-864-11	METAL CHIP	0	5%	1/16W
R148	1-216-821-11	METAL CHIP	1K	5%	1/16W
R149	1-216-864-11	METAL CHIP	0	5%	1/16W
R151	1-216-820-11	METAL CHIP	820	5%	1/16W
R152	1-216-819-11	METAL CHIP	680	5%	1/16W
R153	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R154	1-216-847-11	METAL CHIP	150K	5%	1/16W
R156	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R163	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R164	1-216-835-11	METAL CHIP	15K	5%	1/16W
R165	1-216-839-11	METAL CHIP	33K	5%	1/16W

Ref. No.	Part No.	Description	Remark		
R170	1-216-813-11	METAL CHIP	220	5%	1/16W
R176	1-216-818-11	METAL CHIP	560	5%	1/16W
R197	1-216-864-11	METAL CHIP	0	5%	1/16W
R214	1-216-820-11	METAL CHIP	820	5%	1/16W
R218	1-216-812-11	METAL CHIP	180	5%	1/16W
R220	1-216-864-11	METAL CHIP	0	5%	1/16W
R225	1-216-864-11	METAL CHIP	0	5%	1/16W
R230	1-216-864-11	METAL CHIP	0	5%	1/16W
R231	1-216-864-11	METAL CHIP	0	5%	1/16W
R234	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R236	1-216-296-00	METAL CHIP	0	5%	1/8W
R237	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R241	1-216-804-11	METAL CHIP	39	5%	1/16W
R242	1-216-864-11	METAL CHIP	0	5%	1/16W
R243	1-216-864-11	METAL CHIP	0	5%	1/16W
R244	1-216-820-11	METAL CHIP	820	5%	1/16W
R245	1-216-841-11	METAL CHIP	47K	5%	1/16W
R246	1-216-803-11	METAL CHIP	33	5%	1/16W
R249	1-216-833-11	METAL CHIP	10K	5%	1/16W
R250	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R252	1-216-864-11	METAL CHIP	0	5%	1/16W
R254	1-216-818-11	METAL CHIP	560	5%	1/16W
R255	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R256	1-216-821-11	METAL CHIP	1K	5%	1/16W
R257	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R258	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R259	1-216-845-11	METAL CHIP	100K	5%	1/16W
R261	1-216-864-11	METAL CHIP	0	5%	1/16W
R262	1-216-821-11	METAL CHIP	1K	5%	1/16W
R264	1-216-839-11	METAL CHIP	33K	5%	1/16W
R265	1-216-820-11	METAL CHIP	820	5%	1/16W
R266	1-216-819-11	METAL CHIP	680	5%	1/16W
R267	1-216-845-11	METAL CHIP	100K	5%	1/16W
R268	1-216-853-11	METAL CHIP	470K	5%	1/16W
R269	1-216-821-11	METAL CHIP	1K	5%	1/16W
R270	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R273	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R274	1-216-821-11	METAL CHIP	1K	5%	1/16W
R277	1-216-836-11	METAL CHIP	18K	5%	1/16W
R278	1-216-842-11	METAL CHIP	56K	5%	1/16W
R279	1-216-841-11	METAL CHIP	47K	5%	1/16W
R280	1-216-833-11	METAL CHIP	10K	5%	1/16W
R282	1-216-857-11	METAL CHIP	1M	5%	1/16W
R283	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R288	1-216-821-11	METAL CHIP	1K	5%	1/16W
R289	1-216-844-11	METAL CHIP	82K	5%	1/16W
R290	1-216-837-11	METAL CHIP	22K	5%	1/16W
R291	1-216-864-11	METAL CHIP	0	5%	1/16W
R294	1-216-830-11	METAL CHIP	5.6K	5%	1/16W

Ref. No.	Part No.	Description	Remark		
R296	1-216-833-11	METAL CHIP	10K	5%	1/16W
R297	1-216-813-11	METAL CHIP	220	5%	1/16W
R298	1-216-813-11	METAL CHIP	220	5%	1/16W
R299	1-216-814-11	METAL CHIP	270	5%	1/16W
R300	1-216-864-11	METAL CHIP	0	5%	1/16W
R301	1-216-816-11	METAL CHIP	390	5%	1/16W
R302	1-216-841-11	METAL CHIP	47K	5%	1/16W
R303	1-216-833-11	METAL CHIP	10K	5%	1/16W
R304	1-216-864-11	METAL CHIP	0	5%	1/16W
R306	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R308	1-216-864-11	METAL CHIP	0	5%	1/16W
R309	1-216-833-11	METAL CHIP	10K	5%	1/16W
R310	1-216-839-11	METAL CHIP	33K	5%	1/16W
R311	1-216-842-11	METAL CHIP	56K	5%	1/16W
R312	1-218-694-91	METAL CHIP	1.2K	0.50%	1/16W
R314	1-216-817-11	METAL CHIP	470	5%	1/16W
R315	1-216-821-11	METAL CHIP	1K	5%	1/16W
R316	1-216-821-11	METAL CHIP	1K	5%	1/16W
R317	1-216-833-11	METAL CHIP	10K	5%	1/16W
R318	1-216-804-11	METAL CHIP	39	5%	1/16W
R319	1-216-819-11	METAL CHIP	680	5%	1/16W
R320	1-216-815-11	METAL CHIP	330	5%	1/16W
R321	1-216-841-11	METAL CHIP	47K	5%	1/16W
R322	1-216-864-11	METAL CHIP	0	5%	1/16W
R323	1-216-835-11	METAL CHIP	15K	5%	1/16W
R324	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R325	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R327	1-218-704-11	METAL CHIP	3.3K	0.50%	1/16W
R328	1-216-821-11	METAL CHIP	1K	5%	1/16W
R329	1-216-821-11	METAL CHIP	1K	5%	1/16W
R330	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R331	1-216-819-11	METAL CHIP	680	5%	1/16W
R333	1-216-820-11	METAL CHIP	820	5%	1/16W
R335	1-216-820-11	METAL CHIP	820	5%	1/16W
R336	1-216-837-11	METAL CHIP	22K	5%	1/16W
R339	1-216-817-11	METAL CHIP	470	5%	1/16W
R342	1-216-817-11	METAL CHIP	470	5%	1/16W
R343	1-216-864-11	METAL CHIP	0	5%	1/16W
R351	1-216-833-11	METAL CHIP	10K	5%	1/16W
R354	1-216-819-11	METAL CHIP	680	5%	1/16W
R355	1-216-816-11	METAL CHIP	390	5%	1/16W
R362	1-216-833-11	METAL CHIP	10K	5%	1/16W
R365	1-216-864-11	METAL CHIP	0	5%	1/16W
R370	1-216-821-11	METAL CHIP	1K	5%	1/16W
R376	1-216-809-11	METAL CHIP	100	5%	1/16W
R377	1-216-817-11	METAL CHIP	470	5%	1/16W
R378	1-216-821-11	METAL CHIP	1K	5%	1/16W
R380	1-216-833-11	METAL CHIP	10K	5%	1/16W

VS-99

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R382	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R516	1-216-841-11	METAL CHIP	47K	5%	1/16W
R383	1-216-814-11	METAL CHIP	270	5%	1/16W	R517	1-216-841-11	METAL CHIP	47K	5%	1/16W
R384	1-216-813-11	METAL CHIP	220	5%	1/16W	R518	1-216-841-11	METAL CHIP	47K	5%	1/16W
R385	1-216-864-11	METAL CHIP	0	5%	1/16W	R519	1-216-841-11	METAL CHIP	47K	5%	1/16W
R386	1-216-813-11	METAL CHIP	220	5%	1/16W	R520	1-216-864-11	METAL CHIP	0	5%	1/16W
R395	1-216-864-11	METAL CHIP	0	5%	1/16W	R521	1-216-821-11	METAL CHIP	1K	5%	1/16W
R396	1-216-833-11	METAL CHIP	10K	5%	1/16W	R522	1-216-864-11	METAL CHIP	0	5%	1/16W
R397	1-216-840-11	METAL CHIP	39K	5%	1/16W	R523	1-216-833-11	METAL CHIP	10K	5%	1/16W
R400	1-216-864-11	METAL CHIP	0	5%	1/16W	R524	1-216-821-11	METAL CHIP	1K	5%	1/16W
R401	1-216-841-11	METAL CHIP	47K	5%	1/16W	R525	1-216-809-11	METAL CHIP	100	5%	1/16W
R403	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R526	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R407	1-216-821-11	METAL CHIP	1K	5%	1/16W	R528	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R408	1-216-821-11	METAL CHIP	1K	5%	1/16W	R529	1-216-864-11	METAL CHIP	0	5%	1/16W
R411	1-216-864-11	METAL CHIP	0	5%	1/16W	R530	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R412	1-216-864-11	METAL CHIP	0	5%	1/16W	R531	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R414	1-216-820-11	METAL CHIP	820	5%	1/16W	R532	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R419	1-216-817-11	METAL CHIP	470	5%	1/16W	R533	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R421	1-216-864-11	METAL CHIP	0	5%	1/16W	R534	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R422	1-216-833-11	METAL CHIP	10K	5%	1/16W	R535	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R423	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R536	1-216-821-11	METAL CHIP	1K	5%	1/16W
R424	1-216-821-11	METAL CHIP	1K	5%	1/16W	R537	1-216-821-11	METAL CHIP	1K	5%	1/16W
R429	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R538	1-216-821-11	METAL CHIP	1K	5%	1/16W
R432	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	R539	1-216-817-11	METAL CHIP	470	5%	1/16W
R434	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R540	1-216-821-11	METAL CHIP	1K	5%	1/16W
R439	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R541	1-216-817-11	METAL CHIP	470	5%	1/16W
R440	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	R542	1-216-841-11	METAL CHIP	47K	5%	1/16W
R441	1-216-818-11	METAL CHIP	560	5%	1/16W	R546	1-216-817-11	METAL CHIP	470	5%	1/16W
R445	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	R547	1-216-845-11	METAL CHIP	100K	5%	1/16W
R446	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R548	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R450	1-216-818-11	METAL CHIP	560	5%	1/16W	R552	1-216-833-11	METAL CHIP	10K	5%	1/16W
R452	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R553	1-216-845-11	METAL CHIP	100K	5%	1/16W
R453	1-216-845-11	METAL CHIP	100K	5%	1/16W	R554	1-216-857-11	METAL CHIP	1M	5%	1/16W
R463	1-216-821-11	METAL CHIP	1K	5%	1/16W	R555	1-216-852-11	METAL CHIP	390K	5%	1/16W
R464	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R556	1-216-019-00	METAL CHIP	56	5%	1/10W
R465	1-216-864-11	METAL CHIP	0	5%	1/16W	R557	1-216-817-11	METAL CHIP	470	5%	1/16W
R467	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R558	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R475	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	R559	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R476	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	R560	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R477	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	R561	1-216-849-11	METAL CHIP	220K	5%	1/16W
R478	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	R562	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R479	1-216-817-11	METAL CHIP	470	5%	1/16W	R563	1-216-837-11	METAL CHIP	22K	5%	1/16W
R480	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	R564	1-216-809-11	METAL CHIP	100	5%	1/16W
R481	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R566	1-217-671-11	METAL CHIP	1	5%	1/10W
R489	1-216-809-11	METAL CHIP	100	5%	1/16W	R567	1-217-671-11	METAL CHIP	1	5%	1/10W
R490	1-216-809-11	METAL CHIP	100	5%	1/16W	R568	1-217-671-11	METAL CHIP	1	5%	1/10W
R512	1-216-821-11	METAL CHIP	1K	5%	1/16W	R569	1-217-671-11	METAL CHIP	1	5%	1/10W
R513	1-216-841-11	METAL CHIP	47K	5%	1/16W	R570	1-216-833-11	METAL CHIP	10K	5%	1/16W
R514	1-216-841-11	METAL CHIP	47K	5%	1/16W	R571	1-216-821-11	METAL CHIP	1K	5%	1/16W
R515	1-216-841-11	METAL CHIP	47K	5%	1/16W	R573	1-216-845-11	METAL CHIP	100K	5%	1/16W

Ref. No.	Part No.	Description	Remark
R574	1-216-845-11	METAL CHIP	100K 5% 1/16W
R577	1-216-817-11	METAL CHIP	470 5% 1/16W
R578	1-216-837-11	METAL CHIP	22K 5% 1/16W
R580	1-216-821-11	METAL CHIP	1K 5% 1/16W
R581	1-216-821-11	METAL CHIP	1K 5% 1/16W
R583	1-216-833-11	METAL CHIP	10K 5% 1/16W
R585	1-216-851-11	METAL CHIP	330K 5% 1/16W
R586	1-216-833-11	METAL CHIP	10K 5% 1/16W
R587	1-216-837-11	METAL CHIP	22K 5% 1/16W
R589	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R590	1-216-841-11	METAL CHIP	47K 5% 1/16W
R591	1-216-841-11	METAL CHIP	47K 5% 1/16W
R592	1-216-833-11	METAL CHIP	10K 5% 1/16W
R594	1-216-841-11	METAL CHIP	47K 5% 1/16W
R595	1-216-845-11	METAL CHIP	100K 5% 1/16W
R596	1-216-845-11	METAL CHIP	100K 5% 1/16W
R598	1-216-845-11	METAL CHIP	100K 5% 1/16W
R599	1-216-831-11	METAL CHIP	6.8K 5% 1/16W
R796	1-216-833-11	METAL CHIP	10K 5% 1/16W
R797	1-216-837-11	METAL CHIP	22K 5% 1/16W
R799	1-216-833-11	METAL CHIP	10K 5% 1/16W
R971	1-216-821-11	METAL CHIP	1K 5% 1/16W
R973	1-216-817-11	METAL CHIP	470 5% 1/16W
R974	1-216-817-11	METAL CHIP	470 5% 1/16W
R975	1-216-849-11	METAL CHIP	220K 5% 1/16W
R976	1-216-845-11	METAL CHIP	100K 5% 1/16W
R977	1-216-849-11	METAL CHIP	220K 5% 1/16W
R978	1-216-864-11	METAL CHIP	0 5% 1/16W
R979	1-216-833-11	METAL CHIP	10K 5% 1/16W
R980	1-216-821-11	METAL CHIP	1K 5% 1/16W
R981	1-216-809-11	METAL CHIP	100 5% 1/16W
R982	1-216-841-11	METAL CHIP	47K 5% 1/16W
R983	1-216-833-11	METAL CHIP	10K 5% 1/16W
R984	1-216-833-11	METAL CHIP	10K 5% 1/16W
R989	1-216-809-11	METAL CHIP	100 5% 1/16W
R991	1-216-295-00	METAL CHIP	0 5% 1/10W
R994	1-216-836-11	METAL CHIP	18K 5% 1/16W
R995	1-216-840-11	METAL CHIP	39K 5% 1/16W
R996	1-216-835-11	METAL CHIP	15K 5% 1/16W
< RES NETWORK >			
RB501	1-236-412-11	NETWORK, RES 1.0K x 2	
RB502	1-236-412-11	NETWORK, RES 1.0K x 2	
RB503	1-236-412-11	NETWORK, RES 1.0K x 2	
RB504	1-236-400-11	NETWORK, RES 100 x 2	
RB507	1-236-400-11	NETWORK, RES 100 x 2	
RB508	1-236-412-11	NETWORK, RES 1.0K x 2	
RB509	1-236-412-11	NETWORK, RES 1.0K x 2	
RB510	1-236-412-11	NETWORK, RES 1.0K x 2	

Ref. No.	Part No.	Description	Remark
RB511	1-236-412-11	NETWORK, RES 1.0K x 2	
RB512	1-236-424-11	NETWORK, RES 10K x 2	
RB513	1-236-424-11	NETWORK, RES 10K x 2	
RB514	1-236-424-11	NETWORK, RES 10K x 2	
RB517	1-236-400-11	NETWORK, RES 100 x 2	
< VARIABLE RESISTOR >			
RV161	1-238-852-11	RES, ADJ, CERMET 470 (Y/C SEP.)	
< THERMISTOR >			
TH202	1-809-354-11	THERMISTOR, NTC (2125) 3.3K	
< FLEXIBLE BOARD >			
W001	1-650-067-11	FP-12 FLEXIBLE BOARD	
W503	1-650-066-11	FP-11 FLEXIBLE BOARD	
< VIBRATOR >			
X301	1-579-240-11	VIBRATOR, CRYSTAL (3.58MHz)	
X501	1-579-367-21	VIBRATOR, CRYSTAL (11.89MHz)	

A-7063-774-A YP-12 BOARD, COMPLETE			

(Ref. No. 2,000 Series)			
< CAPACITOR >			
C201	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C202	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C203	1-135-161-21	TANTALUM CHIP 22uF	10% 10V
C204	1-164-633-11	CERAMIC CHIP 0.1uF	10% 25V
C205	1-164-299-11	CERAMIC CHIP 0.22uF	10% 25V
C206	1-164-245-11	CERAMIC CHIP 0.015uF	10% 25V
C207	1-128-257-21	ELECT CHIP 33uF	20% 10V
C208	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C209	1-164-336-11	CERAMIC CHIP 0.33uF	25V
C210	1-128-257-21	ELECT CHIP 33uF	20% 10V
C211	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C212	1-164-336-11	CERAMIC CHIP 0.33uF	25V
C213	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C216	1-135-163-21	TANTAL. CHIP 47uF	20% 4V
C217	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C220	1-164-633-11	CERAMIC CHIP 0.1uF	10% 25V
C221	1-164-245-11	CERAMIC CHIP 0.015uF	10% 25V
C222	1-164-299-11	CERAMIC CHIP 0.22uF	10% 25V
C251	1-135-161-21	TANTALUM CHIP 22uF	10% 10V
C255	1-135-163-21	TANTAL. CHIP 47uF	20% 4V
C256	1-164-360-11	CERAMIC CHIP 0.1uF	16V

YP-12

Ref. No.	Part No.	Description	Remark
< IC >			
IC201	8-759-080-34	IC TA75W01FU	
IC202	8-759-234-77	IC TC4S66F	
IC203	8-759-058-45	IC NJM3403AV	
IC204	8-759-234-77	IC TC4S66F	
< RESISTOR >			
R201	1-216-803-11	METAL CHIP	33 5% 1/16W
R202	1-216-837-11	METAL CHIP	22K 5% 1/16W
R203	1-216-837-11	METAL CHIP	22K 5% 1/16W
R204	1-216-837-11	METAL CHIP	22K 5% 1/16W
R205	1-216-833-11	METAL CHIP	10K 5% 1/16W
R206	1-218-768-11	METAL CHIP	470K 0.50% 1/10W
R207	1-218-768-11	METAL CHIP	470K 0.50% 1/10W
R208	1-216-833-11	METAL CHIP	10K 5% 1/16W
R209	1-216-835-11	METAL CHIP	15K 5% 1/16W
R210	1-216-850-11	METAL CHIP	270K 5% 1/16W
R211	1-216-833-11	METAL CHIP	10K 5% 1/16W
R212	1-218-768-11	METAL CHIP	470K 0.50% 1/10W
R213	1-218-768-11	METAL CHIP	470K 0.50% 1/10W
R214	1-216-833-11	METAL CHIP	10K 5% 1/16W
R215	1-216-835-11	METAL CHIP	15K 5% 1/16W
R216	1-216-850-11	METAL CHIP	270K 5% 1/16W
R220	1-216-837-11	METAL CHIP	22K 5% 1/16W
R221	1-216-837-11	METAL CHIP	22K 5% 1/16W
R222	1-216-837-11	METAL CHIP	22K 5% 1/16W
R251	1-216-803-11	METAL CHIP	33 5% 1/16W
< SENSOR >			
SE001	1-810-024-11	SENSOR, ANGULAR VELOCITY (PS SENSOR)	
SE002	1-810-024-21	SENSOR, ANGULAR VELOCITY (YS SENSOR)	
< FLEXIBLE BOARD >			
W212	1-650-063-11	FP-8 FLEXIBLE BOARD	

MISCELLANEOUS			

14	1-542-162-11	MICROPHONE UNIT	
27	1-692-680-11	SWITCH ASSY BLOCK	
51	1-467-296-11	SWITCH BLOCK, CONTROL	
67	1-692-257-41	SWITCH, PUSH (ZOOM)	
108	1-691-471-11	CONNECTOR, TRANSLATION 11P	
112	1-751-487-11	CORD, FFC-104 FLEXIBLE FLAT	
115	1-547-635-11	LENS, ZOOM (VCL-6110WF)	
120	1-547-558-21	FILTER BLOCK, OPTICAL	
264	1-568-323-11	CONNECTOR, BOARD TO BOARD 4P	

Ref. No.	Part No.	Description	Remark
324	1-691-254-13	CONNECTOR, TRANSLATION 10P	
BL951	1-519-746-22	TUBE, FLUORESCENT (0.71NCH)	
IC784	A-7030-368-A	CCD BLOCK ASSY (054 SERVICE)	
M901	A-7048-564-A	DRUM ASSY (DGH-78A-R)	
M902	8-835-477-01	MOTOR, DC SCE-0101A (CAPSTAN)	
M903	A-7040-304-A	MOTOR BLOCK ASSY, LM (LOADING)	
M904	3-708-792-01	METER, IG(IRIS)	
M905	3-708-793-01	MOTOR, STEPPING (FOCUS)	
M906	3-708-794-01	MOTOR, PZ (ZOOM)	
S001	1-572-986-11	SWITCH, ROTARY (ENCODER)	
S005	1-570-771-21	SWITCH (G DOWN)	
LCD901	8-753-011-05	LCX003BK-2	

ACCESSORIES & PACKING MATERIALS

- A-6768-253-A RFU ADAPTOR (RFU-90UC)
- 1-467-339-11 REMOTE COMMANDER (RMT-706)
- 1-575-334-11 CORD, CONNECTION (A/V connecting cable 1.5m)
- 3-738-517-01 BELT (S), SHOULDER
- 3-757-517-11 MANUAL, INSTRUCTION (ENGLISH, SPANISH) (TR636)
- 3-757-517-21 MANUAL, INSTRUCTION (ENGLISH) (TR91)
- 3-757-517-31 MANUAL, INSTRUCTION (FRENCH) (TR91:Canadian)
- 3-757-517-41 MANUAL, INSTRUCTION (CHINESE) (TR636)
- * 3-795-581-21 SAFEGUARD (SONY), IMPORTANT (TR91:US)
- * 3-954-313-01 CUSHION, ACC
- * 3-954-314-01 CUSHION (LOWER)
- * 3-954-315-01 INDIVIDUAL CARTON (TR91)
- * 3-954-315-21 INDIVIDUAL CARTON (TR636)

- ** AC-V35 AC POWER ADAPTOR
- *** NP-55H BATTERY PACK

Note.

- ** MARK PARTS IS AVAILABLE FOR REPAIR SERVICE.
- *** MARK PARTS IS AVAILABLE AS AN OPTIONAL ACCESSORY.

HARDWARE LIST

- #1 7-627-853-57 PRECISION SCREW +P2X5

Be sure to read "Precautions for Replacement of CCD Imager" on page 83 when changing the CCD imager.

SECTION 7
INTERFACES • IC PIN FUNCTIONS

7-1. CAMERA MICRO PROCESSOR PIN FUNCTION
(VC-132 BOARD IC653; MC68HC11FU)

Pin No.	Signal Name	I/O	Function
1	VTR SI	I	Serial data input from mode control micro processor (VC - 132 board IC902).
2	VTR SCK	I	Serial data transfer clock for mode control micro processor.
3	CAM CS	I	Chip select signal from mode control micro processor.
4			Not used.
5	ZOOM FWD (W)		Zoom motor control signal. Normally "H". 20 msec period PWM signal when rotating to WIDE.
6	ZOOM REW (T)		Zoom motor control signal. Normally "H". 20 msec period PWM signal when rotating to TELE.
7, 8			Not used.
9	VD	I	V SYNC from SYNC generator (VC - 132 board IC660).
10	A1ST	I	Adjusting timing pulse. Input from SYNC generator. Normally "H".
11			Not used.
12	VDD		+5V power supply.
13	VSS		GND
14 - 16			Not used.
17	WEN	I	Write enable signal from timing generator (VC - 132 board IC602). Normally "H".
18			Not used.
19	CS VAP	O	Chip select signal to VAP microprocessor (VC - 132 board IC745).
20			Not used.
21	EEPROM BUSY	I	BUSY signal from EEPROM (VC - 132 board IC641). Normally "H". "L" pulse during data reading/writing.
22			Not used.
23	IRIS PWM	O	Iris control signal. 16 μ sec. period PWM signal.
24			Not used.
25	ZP PWM		Zoom position detection voltage output. 16 μ sec period PWM signal.
26			Not used.
27	FOCUS END LED	O	Focus end sensor LED control signal. Normally "L".
28	FOCUS END FAR	I	Focus end FAR sensor input. Normally "L".
29			Not used.
30	XIRQ		Connected to +5V.
31	VDD		+5V power supply.
32	VSS		GND
33 - 35			Not used (open).
36	CAM SCK	O	Serial data transfer clock.
37	CAM SO	O	Serial data output.
38	CAM SI	I	Serial data input.
39, 40			Not used (open).
41	VDD		+5V power supply.
42, 43			Not used. Connected to GND.
44	ZOOM SW		Zoom sw input.
45	MAN FOCUS (2)		Manual focus ring input (2). 0V dc to 4.8V dc voltage change according to ring position.
46	MAN FOCUS (1)	I	Manual focus ring input (1). 0V dc to 4.8V dc voltage change according to ring position.
47	ZOOM POS \times 4	I	Zoom position voltage.
48	ZOOM POS	I	Zoom encoder voltage input.
49	HALL A/D	I	Hall voltage. Approx. 1V (iris open) to approx. 3.6V (iris close).
50	VRL	I	A/D port reference voltage (LOW). Connected to GND.
51	VRH	I	A/D port reference voltage (HIGH). Connected to +5V.

Pin No.	Signal Name	I/O	Function
52	VSS		GND
53	VAP RESET	O	VAP microprocessor reset signal. Normally "H". "L" when reset.
54, 55			Not used.
56	EEPROM RESET	O	Reset signal to EEPROM (VC - 132 board IC641).
57	OPD RESET	O	Reset signal to OPD (VC - 132 board IC656). "H" in camera mode, "L" in VTR mode.
58	PDR RESET	O	Reset signal to PDR (VC - 132 board IC655) reset signal. Normally "H". "L" when reset.
59	CAM ON	O	A/D converter (VC - 132 board IC604) on/off signal. Normally "L".
60	NTSC	O	NTSC: "L", PAL: "H".
61	IRQ		Connected to +5V.
62	CS TG	O	Chip select signal to timing generator.
63	CS CORE	O	Chip select signal to camera core (VC - 132 board IC659).
64	CS CAM OPD	O	Chip select signal to OPD.
65	D/A STB	O	Strobe signal to camera section EVR (VC - 132 board IC654).
66	CS EEPROM	O	Chip select signal to EEPROM.
67	CS AF OPD	O	Chip select signal to OPD.
68	CS PDR	O	Chip select signal to focus predriver.
69	CORE RESET	O	Reset signal to camera core. Normally "H". "L" when reset.
70	VSS		GND
71	VDD		+5V power supply.
72			Not used.
73	EXTAL	I	20 MHz clock oscillation circuit.
74	XTAL	O	
75	RESET	I	Reset signal from mode control micro processor. Normally "H". "L" when reset.
76	MODB		Connected to +5V.
77	MODA		Connected to GND.
78	RXD		Not used.
79	TXD		Not used.
80	VTR SO	O	Serial data output to mode control micro processor.

Pin No.	Signal Name	I/O	Function
33	DRUM FWD/RVS	O	Drum rotation direction control signal. Normally "L".
34	NC		Not used (open).
35	NC		
36	REEL HALL CONT	O	Reel FG sensor (HALL element) power supply control signal. When active: "L".
37	MP		Connected to GND.
38	RESET	I	Reset signal from mode control micro processor (VC - 132 board IC902). When reset: "L".
39	VSS		GND
40	XTAL	O	11.89 MHz clock oscillation circuit.
41	EXTAL	I	
42	MECHA CON CS	I	Chip select signal from mode control micro processor (VC - 132 board IC902).
43	DATA TO SLAVE	I	Serial data input from mode control micro processor.
44	DATA TO MASTER	O	Serial data output to mode control micro processor.
45	MODECON SCK	I	Serial clock input from mode control micro processor.
46	AUDIO MUTE	O	Audio output mute signal. "H": Mute.
47	MONO REC (1.7M ON/OFF)	O	Monaural/stereo recording switching signal. "H": During monaural recording (1.7 MHz REC AFM carrier off).
48	ZOOM POS	O	Not used. Connected to GND.
49	THERMIST	O	Not used. Connected to GND.
50	AVSS		AVD converter system GND.
51	AVREF		AVD converter system reference voltage. Connected to SSSV.
52	AVDD		AVD converter system power supply. Connected to SSSV.
53	NC		Not used. Connected to GND.
54	END SENS	I	Tape end detection signal. Normally: "L"; "H" pulse at tape end.
55	TOP SENS	I	Tape top detection signal. Normally: "L"; "H" pulse at tape top.
56	DEW DET	I	Condensation detection signal. "L" when condensation present.
57	BATT SENSE	I	Battery voltage input for battery end detection. AVD input.
58	ATF ERROR	I	ATF error. ATF lock error input.
59	S REEL FG	I	S reel FG signal input.
60	T REEL FG	I	T reel FG signal input.
61	NC		Not used. Connected to GND.
62	CAM VD	I	VD signal from camera circuit sync generator (VC - 132 board IC660). V cycle pulse.
63	F.LD (ODD/EVEN)	I	FIELD signal from camera circuit sync generator. 2V cycle pulse.
64	VTR SYNC	I	Composite sync signal separated from recording/playback Y signal.
65	PB SP/LP	I	Discriminates recording mode of playback tape during CUE/REVIEW/FF/REW. "L"=LP
66	DRUM PG	I	Drum PG signal input. For drum phase servo. 26.7 msec. cycle "H" pulse.
67	DRUM FG	I	Drum FG signal input. For drum speed servo. 4.4 msec. cycle pulse.
68	CAP FG	I	Capstan FG signal input. Approx. 1145.5 Hz during REC/PB for capstan speed servo (SP mode).
69	NC		Not used.
70	T/E LED ON	O	TAPE LED on/off signal. 200 msec. cycle "H" pulse during REC/PB.
71	NC		Not used.
72	ME/MP OUT	O	Recording current switching signal. "H": ME tape.
73	CAP PWM	O	Capstan error signal output. 20.15 μ sec. PWM signal.
74	DRUM PWM	O	Drum error signal output. 20.15 μ sec. PWM signal.
75	CFG HMS	I	Capstan FG signal input. For tape counter.
76	S JACK IN	I	"L" when plug is inserted in S VIDEO terminal.
77	LANC IN	I	Not used. Connected to GND.

Pin No.	Signal Name	I/O	Function
78	LANC OUT	O	Not used.
79	LM LIM ON	I	Loading motor limiter on detection signal. Normally "H". "L" when limiter is on.
80	ACC SLOW	I	Not used.
81	DRUM ON	O	Drum motor on/off signal. "H" (Approx. 1.3V): Drum on.
82	CLOG DET	I	Head clog detection signal. "L": Normal.
83	REF PILOT	O	Reference pilot signal for ATF servo. Output after synchronizing with drum rotation and switching 4 frequencies. f1=101.0 kHz, f2=117.2 kHz, f3=162.8 kHz, f4=146.5 kHz.
84	NC		Not used. Connected to GND.
85	13 μ /10 μ SW	I	Not used. Connected to GND.
86	VSS		GND.
87	VDD		Connected to SSSV.
88	VPP		Drum motor acceleration signal.
89	DRUM ACC	O	Drum motor brake signal. Normally: "L".
90	DRUM BLK	O	Drum motor switching signal. "L": LP.
91	SP/LP	O	Not used.
92	NC		Not used.
93	AUDIO OUT/IN	O	Audio input/output switching signal. "L": Audio output.
94	NC		Not used.
95	VA PB MODE	O	REC/PB switching signal of video/audio circuit. "H": PB.
96	VI SWP	O	RF switching pulse signal for video circuit. 25Hz. 50% duty pulse.
97	RF SWP	O	RF switching pulse signal for REC/PB amp and audio circuit. 25 Hz. 50% duty pulse.
98	H CHG	O	Head switching signal.
99	CAP ON	O	Capstan driver on/off control signal. "H": Capstan on.
100	CAP FWD/RVS	O	Capstan rotation direction control signal. "H": FWD, "L": RVS.

7-4. MODE CONTROL MICRO PROCESSOR PIN FUNCTION (VC-132 BOARD IC902: MB89092PFV-G128)

Pin No.	Port Name	Signal Name	I/O	Function
1	MOD0	TEST MODE 0	I	Connected to GND.
2	MOD1	TEST MODE 1	I	Connected to GND.
3	X0	X0	I	10 MHz clock oscillation circuit.
4	X1	X1	O	
5	VSS	VSS	O	GND
6	XRST	RESET	I	Reset input.
7	P00/EI20	DATA SW	I	Date (+) key (CF block S924) input. Normally "H". "L" when key is pressed.
8	P01/EI21	TIME SW	I	Time key (CF block S925) input. Normally "H". "L" when key is pressed.
9	P02/EI22	EJECT SW	I	Cassette eject switch (DD-55 board S451) input. Normally "H". "L" when switch is pressed.
10	P03/EI23	VTR MODE SW	I	Power supply switch input. "L" when power supply switch is at "Video".
11	P04/EI24	AUTO LOCK SW	I	Auto lock switch (CF block S927) input. "H" during auto lock.
12	P05/EI25	START/STOP SW	I	Start/stop key (SW-222 board S904) input. "L" when key is pressed (However, when power supply switch is at "Camera" and stand-by switch at "Standby".)
13	P06/EI26	CC DOWN SW	I	Cassette compartment down switch (mechanism section) input. "L" when cassette compartment is locked.
14	P07/EI27	CAM+STBY SW	I	Power supply switch, stand-by switch (SW-222 board S903) input. "L" when power supply switch is at "Camera" and stand-by switch at "Standby".
15	P10/EI10	BATT IN	I	Main battery detection input. "H" when main battery is loaded or external power supply is connected.
16	P11/EI11	SYSTEM SYNC (PB V)	I	System sync signal from mechanism control micro processor (VS-99 board IC501).
17	P12/EI12	INT_VD	I	Timing reference signal of communication, LANC, etc. Internal VD signal input.
18	P13/EI13	LANC POWER ON	I	Power on signal input from wired remote commander. "L" when power switch of remote commander is pressed.
19	P14	LI PRE END	I	Lithium battery end detection input. "L" when lithium battery has worn out or has not been loaded.
20	P15	EEPROM WE	O	EEPROM (VC-132 board IC901) writing enable signal. "L" when writing data.
21	P16	RF SWP	I	RF switching pulse signal. 25Hz, 50% duty pulse.
22	P17	WIND ON	O	Wind sound decrease control signal. "L": Wind sound decrease on.
23	P20	TALLY LED	O	Tally LED on/off signal. "L" during camera recording.
24	P21	SYSTEM RESET	O	Reset signal of all systems. Normally "H". "L" when reset.
25	P22	NC		Not used.
26	COMID	CLK 10M/32K (BATT IN)	I	Mode control micro processor clock frequency switching signal. "H" (10 MHz) when main battery is loaded or external power supply is connected. "L" (32 kHz) when backed up by lithium battery.
27	P24/S10	DATA TO MOD		
28	P25/S00	DATA TO MK		
29	P26/SCK0	SCK MK		Not used.
30	P27/RMC1	SIRCS IN	I	Infrared remote commander signal input.

Pin No.	Port Name	Signal Name	I/O	Function
31	P30/SEG31	CS MK		Not used.
32	P31/SEG30	NC		
33	P32/SEG29	CS EEPROM	O	Chip select signal to EEPROM (VC-132 board IC901).
34	P33/SEG28	CS SR	O	Chip select signal to video circuit Y signal process IC (VS-99 board IC902). "H" during input. "L" during output.
35	P34/SEG27	IN/OUT	O	"H" during input. "L" during output.
36	P35/SEG26	CS SG	O	Chip select signal to SYNC generator (VC-132 board IC660).
37	P36/SEG25	STB DA	O	Strobe signal to video circuit EVR (VS-99 board IC003, IC005).
38	P37/SEG24	CS TAI	O	Chip select signal to camera micro processor (VC-132 board IC653).
39	P40/SEG23	CAM/LINE		Not used.
40	P41/SEG22			
41	P42/SEG21			
42	P43/SEG20			Not used.
43	P44/SEG19			
44	P45/SEG18	SEG18	O	
45	P46/SEG17	SEG17	O	LCD segment terminal drive signal. Pulse of 4 values
46	P47/SEG16	SEG16	O	(0V, 1.6V, 3.2V and 4.8V).
47	VCC	VCC	O	+5V power supply (+3V power supply during backup).
48	SEG15	SEG15	O	
49	SEG14	SEG14	O	
50	SEG13	SEG13	O	
51	SEG12	SEG12	O	
52	SEG11	SEG11	O	LCD segment terminal drive signal. Pulse of 4 values
53	SEG10	SEG10	O	(0V, 1.6V, 3.2V, and 4.8V).
54	SEG09	SEG09	O	
55	SEG08	SEG08	O	
56	VSS	VSS		GND
57	SEG07	SEG07	O	
58	SEG06	SEG06	O	
59	SEG05	SEG05	O	
60	SEG04	SEG04	O	LCD segment terminal drive signal. Pulse of 4 values
61	SEG03	SEG03	O	(0V, 1.6V, 3.2V, and 4.8V).
62	SEG02	SEG02	O	
63	SEG01	SEG01	O	
64	SEG00	SEG00	O	
65	V3	V3	I	4.8V
66	V2	V2	I	3.2V
67	V1	V1	I	1.6V
68	V0	V0	I	0V
69	COM0	COM0	O	
70	COM1	COM1	O	LCD COM terminal drive signal. Pulse of 4 values (0V, 1.6V, 3.2V, 4.8V).
71	COM2	COM2	O	
72	COM3	COM3	O	
73	P80/STB	CS OSD	O	Chip select signal to character generator (VC-132 board IC905).
74	P81/XCS	CS MECHA	O	Chip select signal to mechanism control micro processor (VS-99 board IC501).
75	P82/S11	DATA TO MASTER	I	Serial data input signal.
76	P83/S01	DATA TO SLAVE	O	Serial data output signal.

Pin No.	Port Name	Signal Name	I/O	Function
77	P84/SCK1	MODECON SCK	O	Serial data transfer clock.
78	P85/ECK	TG STBY 1	O	Controls 4FSC of timing generator (VC-132 board IC602). "H" when no signal in VTR mode, "L" at other times.
79	P86/TO1	VTR DD ON	O	VTR DC - DC converter control signal. "H" when power switch is at "Player" or "Camera".
80	P87/TO2	CAM DD ON	O	CAMERA DC - DC converter control signal.
81	AVSS	AVSS		A/D port GND.
82	P90/AN00	K AD IN 0	I	Key input. A/D port. No input 5V (4.9V) Edit search (-) key (CF block S905) 4V (3.8V to 4.2V) Edit search (+) key (CF block S904) 3V (2.6V to 3.2V) Fast forward key (CF block S902) 1V (0.5V to 1.2V) Stop key (CF block S901) 0V (0.5V to 0.2V)
83	P91/AN01	K AD IN 1	I	Key input. A/D port. No input 5V Menu key (CF block S909) 3V Playback key (CF block S908) 2V (1.6V to 2.2V) Rewind key (CF block S907) 1V Pause key (CF block S906) 0V
84	P92/AN02	K AD IN 2	I	Key input. A/D port. No input 5V Item key (CF block S912) 2V Setting key (CF block S911) 1V Slow key (CF block S910) 0V
85	P93/AN03	K AD IN 3	I	Key input. A/D port. No input 5V Fader key (CF block S917) 4V Focus key (CF block S915) 2V Program AE key (CF block S913) 0V
86	P94/AN04	K AD IN 4	I	Key input. A/D port. No input 5V Steady shot key (CF block S922) 4V counter reset key (CF block S918) 0V
87	P95/AN05			Not used.
88	P96/AN06			Not used.
89	P97/AN07			Not used.
90	AVCC	AVCC		A/D port power supply (+5V).
91	PA0/AN08	BATT SENSE	I	For battery end detection, main battery voltage input. (Voltage divided into 1/2 by R906, R907).
92	PA1/AN09			Not used.
93	PA2/AN10	BRIGHT A	I	Brightness adjusting dial input. Pulse input by dial rotation.
94	PA2/AN11	BRIGHT B	I	Brightness adjusting dial input. Pulse input by dial rotation.
95	PA4/LSI	LANC IN	I	LANC serial data input.
96	PA5/LSO	LANC OUT	O	LANC serial data output.
97	PA6/COU1	BUZZER	O	Buzzer output. Normally "L", 2kHz pulse; alarm. +5V power supply (+3V power supply during backup).
98	VCC	VCC		+5V power supply (+3V power supply during backup).
99	CL1	CL1	O	32 kHz clock oscillation circuit (for clock).
100	CL0	CL0	I	32 kHz clock oscillation circuit (for clock).

7-5. INTERFACE

7-5-1. Video/Audio Block Interface

NAME	I/O	No.	VTR MODE										CAMERA MODE													
			STOP	FF	REW	FR SEARCH CUE	REVIEW	PB	PICTURE SEARCH CUE	REVIEW	PB- PAUSE	FRAME SLOW	X2	SHUTTLE EDIT*3 FWD	REV	REC*4 PAUSE	STAND BY	REC	EDIT SEARCH FWD	RVS	REC SEARCH FWD	RVS	REC REVIEW FWD	RVS		
SP/LP	O	IC501 ①	*1	H	H	*2	*2	*2	*2	*2	*1	*1	*1	*1	*2	*2	*6	H/L	*6	*2	*2	H	H	H	H	
VA PB MODE	O	IC501 ②	L	L	L	H	H	H	H	H	H	H	H	H	H	L	L	L	L	H	H	H	H	H	H	
AUDIO MUTE *13	O	IC501 ③	L	L	L	H	H	H	H	L	L	L	L	L	L	L	L	L	L	H	H	H	H	H	H	
VIDEO MUTE	O	IC501 ④	*14	*14	*14	*15	*15	*15	*15	*15	*15	*15	*15	*15	*15	*14	*14	L	L	*15	*15	*15	*15	*15	*15	*15
CAM/LINE	O	IC501 ⑤	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	H	H	L	L	L	L	
JOG VD	O	IC501 ⑥	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	*5	*5	*5	*5	*5	*5	*5
RP PB MODE	O	IC501 ⑦	H	H	H	H	H	H	H	H	H	H	H	H	H	L	L	L	L	H	H	H	H	H	H	
FE ON	O	IC501 ⑧	H	H	H	H	H	H	H	H	H	H	H	H	H	L	L	L	L	H	H	H	H	H	H	
RF SWP	O	IC501 ⑨	L	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	
JOG	O	IC501 ⑩	L	L	L	H	H	H	H	L	L	L	L	L	L	L	L	L	L	H	H	H	H	H	H	
DATA TO MASTER	O	IC501 ⑪																								
DATA TO SLAVE	I	IC501 ⑫																								
MODECON SCR	I	IC501 ⑬																								
PB SP/LP DET	I	IC501 ⑭	L	*10	*10	*10	*10	*10	*10	L	*10	*10	*10	*10	L	*10	H	H	H	H	H	L	L	L	*10	
CLOG	I	IC501 ⑮	H	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	H	*11	*11	*11	*11	*11	*11	*11	*11	
VTR SYNC	I	IC501 ⑯	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	

- *1. Outputs discrimination result of the mode just before. "H": SP mode, "L": LP mode.
- *2. Outputs discrimination result of the playback tape. "H": SP mode, "L": LP mode.
- *3. Edit search button pressed when playback pause mode.
- *4. Mode for adjustment.
- *5. False VD signal.
- *6. By REC MODE switch, "H": SP mode, "L": LP mode.
- *7. 25 Hz duty 50% pulse (synchronized with drum rotation).
- *10. "H": SP recording area on tape. "L": LP recording area.
- *11. "H": no recording area or drop out area on tape. Head clog detection input.
- *12. Composite sync signal input separated from line input video signal, camera video signal or playback video signal. (polarity +)
- *13. "H" during camera mode load/unload.
- *14. "L" when external input (video) present. "H" when other cases.
- *15. "H" when tape no signal. "L" when other cases.

7-5-2. Servo block Interface

NAME	I/O	No.	VTR MODE										CAMERA MODE										
			STOP	FF	REW	FR SEARCH CUE	PB REVIEW	PICTURE SEARCH CUE	REVIEW	PAUSE	FRAME	SLOW	X2	SHUTTLE EDIT *13		REC *14 PAUSE	STAND BY	REC	EDIT SEARCH		REC REVIEW		
														FWD	REV			FWD	RVS	FWD	RVS	FWD	RVS
T.REEL FG	I	IC501 60	-	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
S.REEL FG	I	IC501 65	-	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
ATF ERROR	I	IC501 65	-	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2
DRUM PG	I	IC501 66	-	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3
DRUM FG	I	IC501 67	-	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4
CAP FG/ CFG HMS	I	IC501 68, 75	-	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5
CAP ON	O	IC501 69	L	H	H	H	H	H	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
REF PILOT	O	IC501 69	*7	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6
RP PB MODE	O	IC501 1	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H
DRUM FWD/ RVS *10	O	IC501 33	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H
CAP FWD/ RVS	O	IC501 10	L	H	L	H	L	H	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
DRUM PWM	O	IC501 74	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9
CAP PWM	O	IC501 73	L	*9	*9	*9	*9	*9	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
LWTIM CONT *11	O	IC501 31	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
DRUM ON *12	O	IC501 61	L	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H

*1. Inputting waveform which is similar to sine wave according to reel rotation.

*2. ATF error voltage input

*3. One PG pulse input per one drum rotation, approx. 25 Hz.

*4. 12 FG pulses input per one drum rotation, approx. 300 Hz.

*5. 520 FG pulses input per one capstan rotation. Approx. 1388 Hz when REC/PB (SP).

*6. 694 Hz when PB (LP).

*7. Four frequencies output synchronized with drum rotation. f1=101.0 kHz, f2=117.2 kHz,

f3=162.8 kHz and f4=146.5 kHz

*7. f2(117.2 kHz) output

*8. "H" pulse when tape run.

*9. 21.5 μsec period PWM signal

*10. Normally "H", Temporary "L" when load (drum reverse rotation).

*11. Temporary "H" when cassette loading (finger catch protection).

*12. "H", approx. 1.3 Vdc

*13. Edit search button pressed when playback pause mode.

*14. Mode for adjustment.

SECTION 8 CAMERA SECTION ADJUSTMENTS

When performing adjustments, refer to the layout diagrams for adjustment related parts beginning from page 234.

8-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)

8-1-1. List of service tools

- Oscilloscope
- Regulated power supply
- Vectorscope
- Adjusting driver
- Color monitor
- Digital voltmeter

Ref. No.	Name	Parts Code	Usage
J-1	Filter for color temperature correction (C14)	J-6080-058-A	Auto White balance adjustment/check White balance adjustment/check
J-2	ND filter 1.0	J-6080-808-A	White balance check
	ND filter 0.3	J-6080-818-A	White balance check
J-3	Pattern box PTB-450	J-6082-200-A	
J-4	Color chart for pattern box	J-6020-250-A	
J-5	Adjusting remote commander (RM-95-remodeled partly) ^{Note 1}	J-6082-053-B	
J-6	Siemens star	J-6080-875-A	For checking the flange back
J-7	Extension cable (40P, 0.8 mm)	J-6082-168-A	For extension between the VS-99 board (CN501) and DD-55 board (CN451)
J-8	Extension cable (38P, 0.8 mm)	J-6082-274-A	For extension between the AU-149 board (CN802) and VS-99 board (CN505)
J-9	Extension cable (16P, 0.8 mm)	J-6082-191-A	For extension between the CD-105 board (W784) and VC-132 board (CN601)
J-10	Relay board (21P, 0.5 mm) ^{Note 2}	J-6082-176-A	For extension between the VC-132 board (CN711) and lens block (FPC) (During the repair of the camera section)
J-11	Extension cable (21P, 0.5 mm) ^{Note 2}	J-6082-138-A	For extension between the VC-132 board (CN711) and lens block (FPC) (During the repair of the camera section)
J-12	Extension cable (6P, 1.5mm)	J-6082-152-A	For extension between the EVF and VS-99 board (CN903).

Note 1: If the micro processor IC in the adjusting remote commander is not the new micro processor (UPD7503G-C56-12), the pages cannot be switched.
In this case, replace with the new micro processor (8-759-148-35).

Note 2: The extension cable (J-6082-138-A) is also attached with a 21P, 0.5 mm cable. Connect this code to the relay board (J-6082-176-A) for extensions between the lens block (FPC) and VC-132 board (CN711).

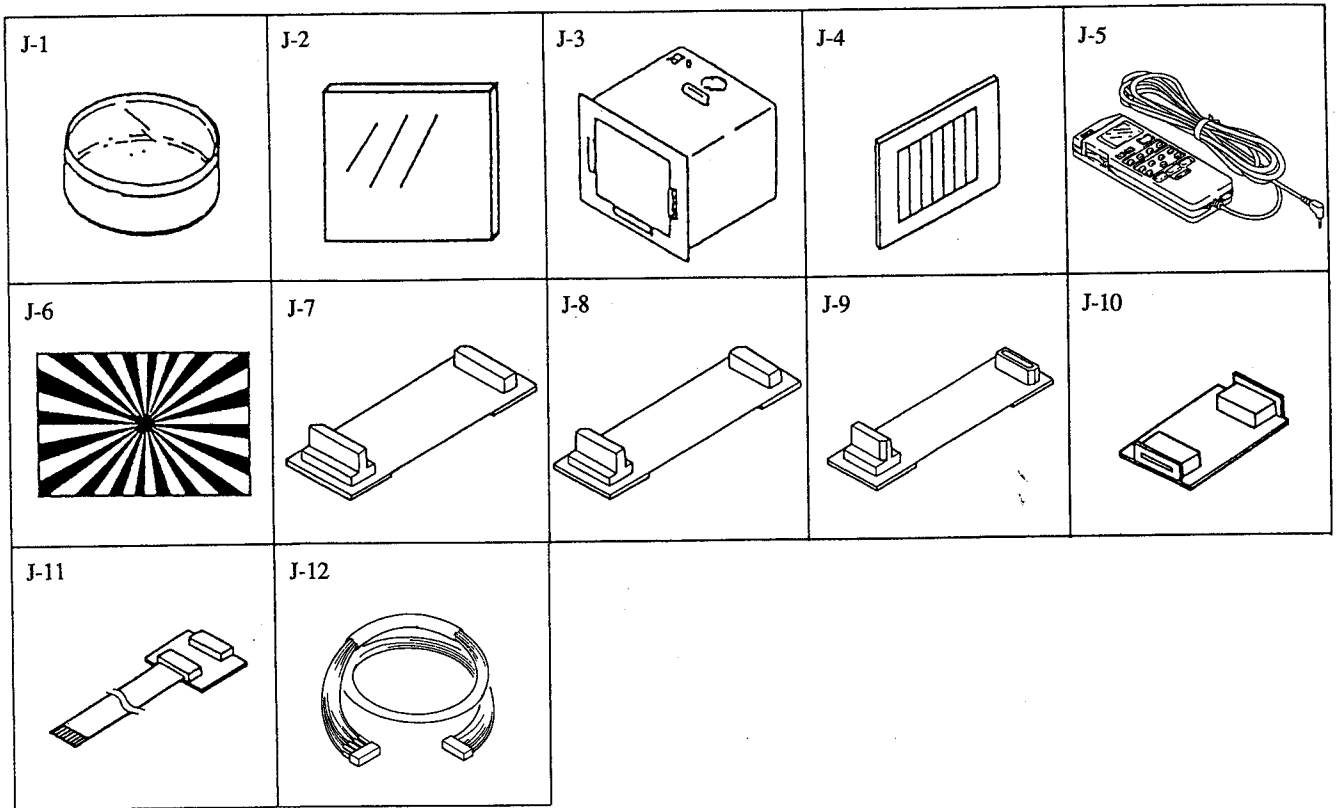


Fig. 8-1.

8-1-2. Preparations

Note 1: For further details of how to remove the cabinet and each board, refer to "2. Disassembly".

Note 2: When adjusting only, the lens block and VC-132 board need not be taken apart.

- 1) Connect the equipments for adjusting as shown in Fig. 8-3.
- 2) The EVF (Electronic viewfinder) is required for checking the PROGRAM AE mode and DDS display. However, by turning on the "data Screen", the same contents can be viewed on the TV monitor. If the EVF is not required, remove CN502 of the VS-99 board.

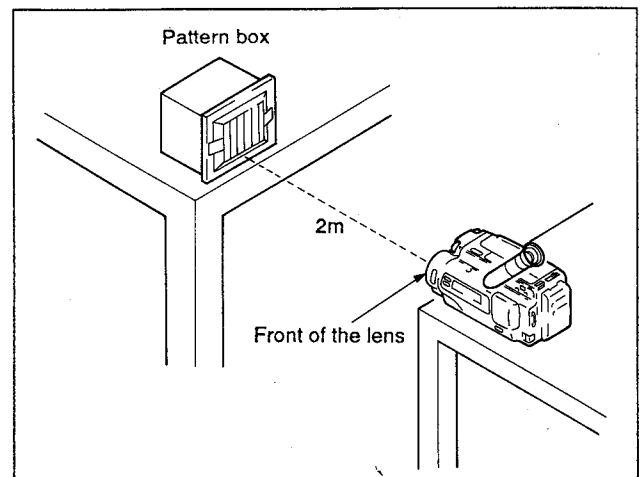


Fig. 8-2.

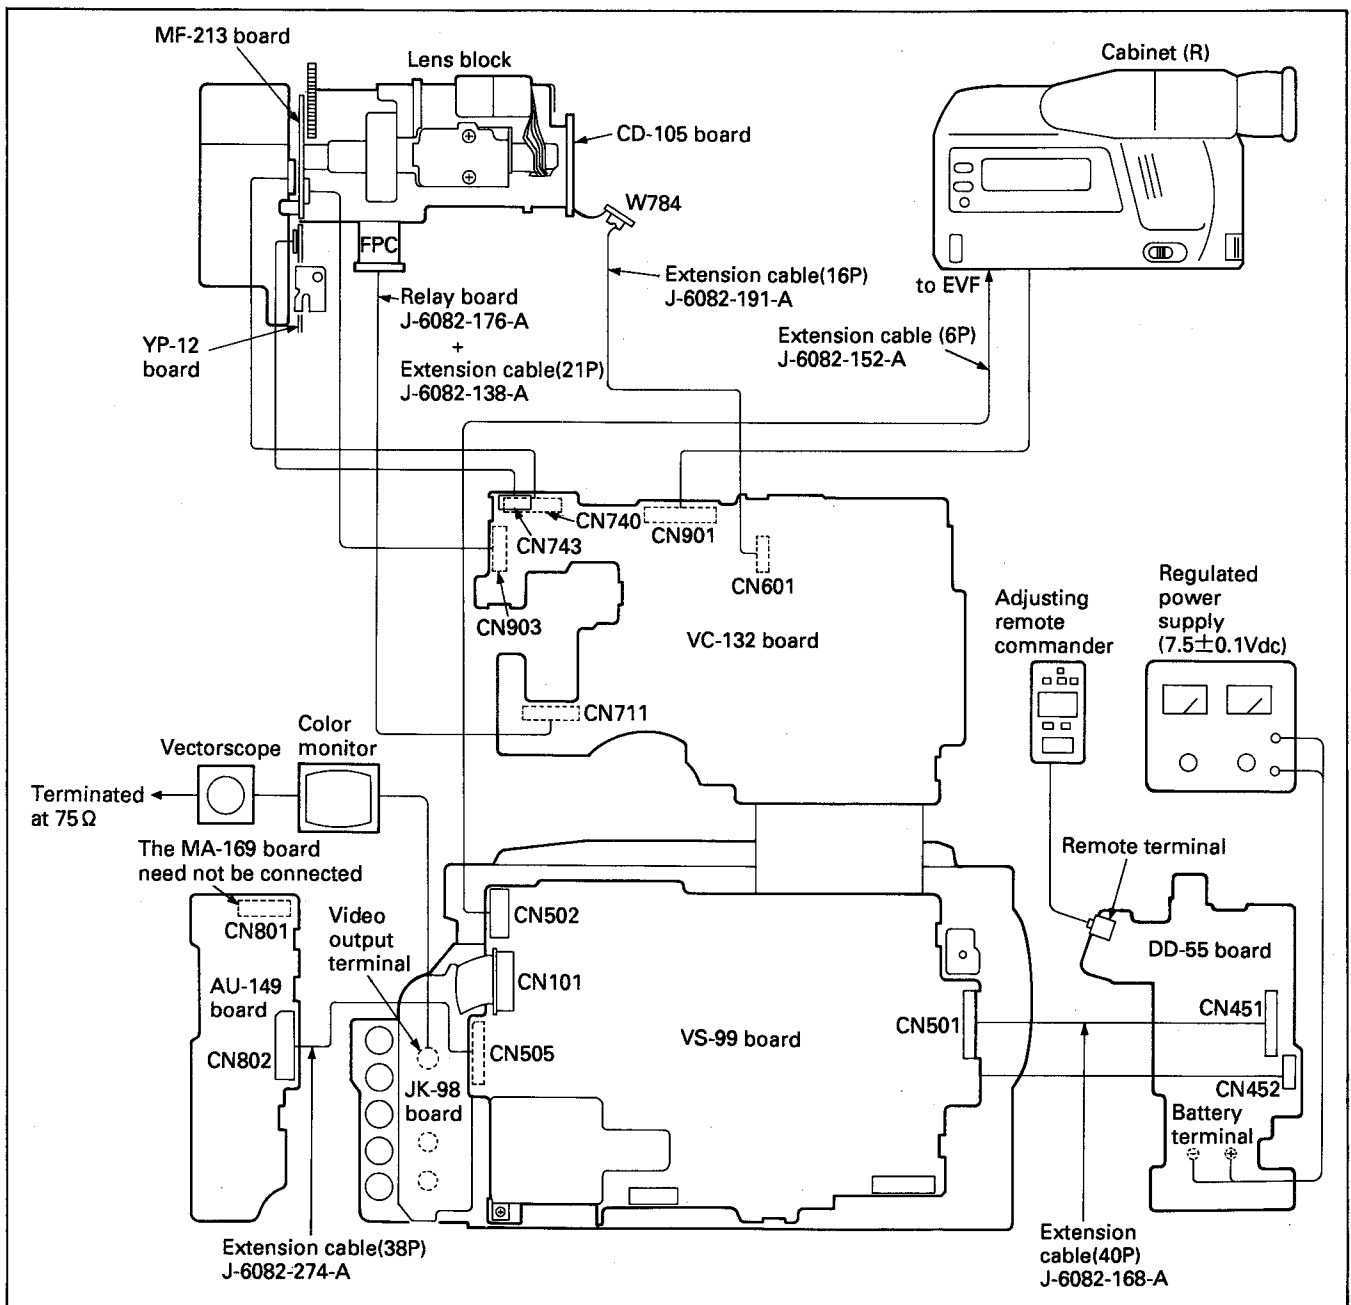


Fig. 8-3.

8-1-3. Precautions

1. Switch settings

Adjust the switches to the following positions, and adjust without loading the cassette tape, unless specified otherwise.

1. Camera/player power switch (Power switch unit S900) Camera
2. Standby switch (SW-222 board S903) Standby
3. Auto lock cover (CF block S927) Open
4. Focus button (CF block S915) Manual
5. Program AE button (CF block S913) Off
6. Steady shot switch (CF block S922) Off

2. Adjusting Procedure

Adjust in the given order.

3. Subject

- 1) Color bar chart (Standard picture frame)
Adjust the picture frame as shown in Fig. 8-4. if adjustments are performed using the color bar chart.
- 2) White pattern (Standard picture frame)
Remove the color bar chart from the pattern box, and so that the white pattern becomes the same size and is in the same position as the color bar chart (Standard picture frame).

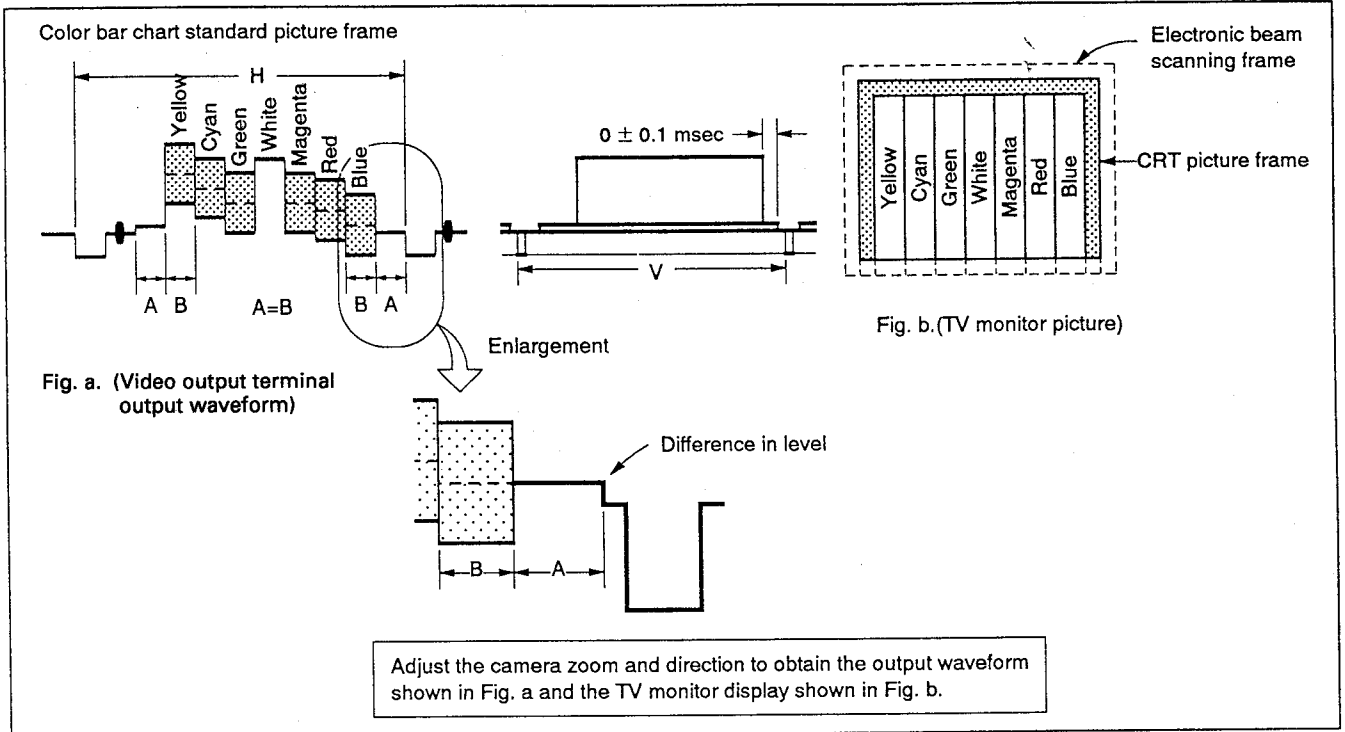


Fig. 8-4.

3) Chart for flange back adjustment

Combine a white A0 size (1189 mm × 841 mm) paper to a black one, and make the chart shown in Fig. 8-5.

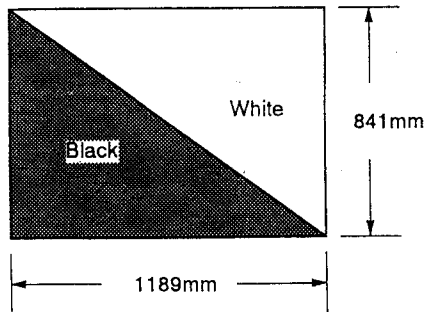


Fig. 8-5.

Note: Use the non-reflecting and non-glazing vellum paper whose size is more than A0, and make the boundary between white and black to be smoothly flat.

8-1-4. Adjusting Remote Commander

The camera section is adjusted by changing the constant or coefficient of the digital signal processing calculation, or modifying the output voltage of the EVR IC (VC-132 board IC654). This is controlled by the camera micro processor (VC-132 board IC653), which reads the data written in the nonvolatile memory (VC-132 board IC641: EEPROM), and transmits it to the digital signal processing circuit and EVR.

To perform adjustments, adjustment data written in the nonvolatile memory must be rewritten, using the adjusting remote commander.

The adjusting remote commander uses the remote commander signal line (LANC) to communicate mutually with the camera microprocessor. The page, address and the up/down commands of the data are transmitted from the adjusting remote commander to the camera micro processor. And, the page, address, and data are transmitted for the vice versa.

1. Using the adjusting remote commander

- 1) Connect the adjusting remote commander to the remote control terminal (DD-55 board J452).
- 2) Adjust the HOLD switch of the adjusting remote commander to "HOLD" (SERVICE position).

If it has been properly connected, the LCD on the adjusting remote commander will display as shown in Fig. 8-6.

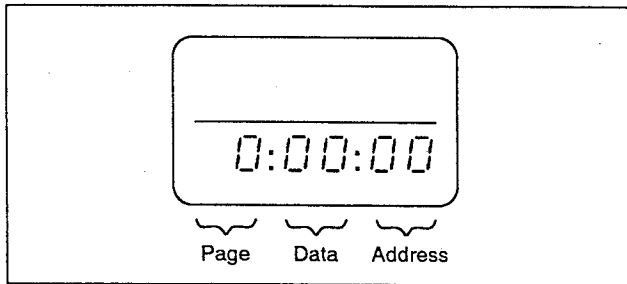


Fig. 8-6.

- 3) Operate the adjusting remote commander as follows.

- Changing the page

The page increases when the EDIT SEARCH+ button is pressed, and decreases when the EDIT SEARCH- button is pressed. There are altogether 16 pages, from 0 to F.

Hexadecimal notation	0 1 2 3 4 5 6 7 8 9 A B C D E F
LCD Display	0 1 2 3 4 5 6 7 8 9 A b c d E F
Decimal notation conversion value	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Table 8-1.

- Changing the address

The address increases when the FF (▶▶) button is pressed, and decreases when the REW (◀◀) button is pressed. There are altogether 256 addresses, from 00 to FF.

- Changing the data (Data setting)

The data increases when the PLAY (▶) button is pressed, and decreases when the STOP (■) button is pressed.

There are altogether 256 data, from 00 to FF.

- Writing the adjustment data

The PAUSE button must be pressed to write the adjustment data (F page) in the nonvolatile memory.

(The new adjustment data will not be recorded in the nonvolatile memory if this step is not performed.)

- 4) Select page: 6, address: 00, and adjust the data to 01. This releases the write protect of page F, and enables the camera section (Addresses 01 to DF of page F) to be adjusted.
- 5) After completing all adjustments, turn off the main power supply (7.5V) once. This release the adjustment mode (other than page F).

2. Precautions upon using the adjusting remote commander

Mishandling of the adjusting remote commander may erase the correct adjustment data at times. To prevent this, it is recommended that all adjustment data be noted down before beginning adjustments and new adjustment data after each adjustment.

8-1-5. Page F Address List

Note 1: The data already listed in the adjustment data memo column are fixed values.

Note 2: The adjustment data initial values are values just after executing "Page F Data Initialization" and "Page F Data Modification". They are different from the values after executing all adjustments.

Address	Name	Function [] contains the adjustment voltage output terminal	Adjustment data							
			Initial value	Memo column						
00	SET ID	Set ID	4F	4F						
01	NT PAL	Micro processor mode setting	50	50						
02	FT SW	DDS display mode switching	00	00						
		<table border="1"> <thead> <tr> <th>Data</th> <th>Mode</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Normal</td> </tr> <tr> <td>B8</td> <td>Focus position adjustment</td> </tr> </tbody> </table>			Data	Mode	00	Normal	B8	Focus position adjustment
		Data			Mode					
		00			Normal					
B8	Focus position adjustment									
03	FADER LEVEL	AE REF level change in fader	E0	E0						
04	FADER ENDTIME	AE REF modulation time setting in fader	10	10						
05	CORE Y GAIN	Camera core Y gain	3F	3F						
06	VSUB	CCD imager V SUB voltage adjustment [IC654 ③]	80							
07	VPGH	CCD imager V RG voltage adjustment [IC654 ④]	80							
08	VREF Y	Camera core Y D/A reference voltage, SYNC level adjustment [IC654 ⑤]	64	64						
09	VREF C	Camera core camera D/A reference voltage, burst level adjustment [IC654 ⑥]	4C	4C						
0A	HALL GAIN	Hall amplifier gain adjustment [IC654 ⑦]	80							
0B	HALL OFFSET	Hall amplifier off set adjustment [IC654 ⑧]								
0C	LOWLIGHT START	Low illuminance level modulation start setting	6A	6A						
0D	REF 2V	2V reference voltage for hall element [IC654 ⑨]	68	68						
0E	AD REF	Black level during A/D conversion [IC654 ⑩]	A0	A0						
0F	CORE DEPTH	CCD correction horizontal correlated control	04	04						
10	CORE OTHER	Various camera core mode settings	50	50						
11	CORE APCNH	Horizontal aperture setting	A5	A5						
12	CORE APCNV	Vertical aperture setting	3F	3F						
13	CORE EFFECT	Camera core special effects control	A0	A0						
14	CORE MAT R	RED matrix constant	6D							
15	CORE MAT B	BLUE matrix constant								
16	CORE BURST LEVEL	Burst level setting, color modulation ON/OFF	2C	2C						
		<table border="1"> <thead> <tr> <th>Data</th> <th>Mode</th> </tr> </thead> <tbody> <tr> <td>2C</td> <td>Normal</td> </tr> <tr> <td>2E</td> <td>Color modulation stopped</td> </tr> </tbody> </table>			Data	Mode	2C	Normal	2E	Color modulation stopped
		Data			Mode					
		2C			Normal					
2E	Color modulation stopped									
17	CORE CHROMA DLY	Y/C delay adjustment	27	27						
18	CORE Y SETUP	Set up level setting	04	04						
19	CORE APCN	Aperture setting	17	17						

Table 8-2(1).

Address	Name	Function [] contains the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
1A	CORE B Y3200 HUE	B-Y HUE	F8	
1B	CORE R Y3200 HUE	R-Y HUE	F0	
1C	CORE R Y3200 GAIN	R-Y GAIN	4C	4C
1D	CORE B Y3200 GAIN	B-Y GAIN	28	28
1E	CS/APCN CUT	Low illuminance aperture and chroma suppress level	23	23
1F	NEXT DEF BIT	CCD imager correction pattern	00	
20	CCD DEFECT0	CCD imager correction data	00	
21	CCD DEFECT1	CCD imager correction data	00	
22	CCD DEFECT2	CCD imager correction data	00	
23	CCD DEFECT3	CCD imager correction data	00	
24	CCD DEFECT4	CCD imager correction data	00	
25	CCD DEFECT5	CCD imager correction data	00	
26	CCD DEFECT6	CCD imager correction data	00	
27	CCD DEFECT7	CCD imager correction data	00	
28	CCD DEFECT8	CCD imager correction data	00	
29	CCD DEFECT9	CCD imager correction data	00	
2A	CCD DEFECT10	CCD imager correction data	00	
2B	CCD DEFECT11	CCD imager correction data	00	
2C	CCD DEFECT12	CCD imager correction data	00	
2D	CCD DEFECT13	CCD imager correction data	00	
2E	CCD DEFECT14	CCD imager correction data	00	
2F	CLPFLG	Digital clamp mode setting	03	03
30	ADMIN	Offset minimum value setting	50	50
31	C SHIFT	C shift amount setting	02	02
32	Y SHIFT	Y shift amount setting	02	02
33	LOWLIGHT START2	Low illuminance REF level modulation start setting 2	44	44
34	LOWLIGHT CS	Low illuminance color erasure setting	00	00
35	LOWLIGHT LEVEL	Low illuminance S/N correction point setting	61	61
36	DEFECT DELAY	CCD imager correction pulse delay setting	00	00
37	APCN E ZOOM	Not used	00	00
38	RG3200H	3200k Red/Green reference data H	30	
39	RG3200L	3200k Red/Green reference data L	00	
3A	BG3200H	3200k Blue/Green reference data H	58	
3B	BG3200L	3200k Blue/Green reference data L	00	
3C	SPEED S	Indoor/Outdoor determination (short)	20	20
3D	SPEED L	Indoor/Outdoor determination (long)	20	20
3E	3200 OFFSET	Pre white offset	12	12
3F	TRAN SPEED	Speed of pursur high speed for changing a source of light	02	02
40	NORM R	R regular correction coefficient, reference 80h	88	
41	NORM B	B regular correction coefficient, reference 80h	60	
42	INDOOR S	Indoor determination shutter data	00	00
43	OUTDOOR S	Outdoor determination shutter data	00	00
44	IRIS IN	Indoor determination hall data	36	
45	IRIS OUT	Outdoor determination hall data	3C	

Table 8-2(2).

Address	Name	Function [] contains the adjustment voltage output terminal	Adjustment data									
			Initial value	Memo column								
46	G LEVEL	High luminance Green integral level	02	02								
47	G WIDTH	High luminance Green integral level range	03	03								
48	MAT HUE	Variable linear matrix HUE coefficient	00	00								
49	MAT GAIN	Variable linear matrix GAIN coefficient	00	00								
4A	ADJ RCONT	Direct output value (RED)	35	35								
4B	B DIFFERENCE	Reference difference from outdoor fixed value	0A	0A								
4C	BOTTOM SLP R	Slant R coefficient of drawing frame bottom	48	48								
4D	BOTTOM SLP B	Slant B coefficient of drawing frame bottom	78	78								
4E	MIDDLE SLP R	Slant R coefficient of drawing frame middle	60	60								
4F	MIDDLE SLP B	Slant B coefficient of drawing frame middle	40	40								
50	TOP SLP R	Slant R coefficient of drawing frame top	66	66								
51	TOP SLP B	Slant B coefficient of drawing frame top	18	18								
52	KEIKO R	Slant R coefficient of drawing frame fluorescent lamp	66	66								
53	KEIKO B	Slant B coefficient of drawing frame fluorescent lamp	18	18								
54	BOTTOM UP	Upper value of drawing frame bottom	C2	C2								
55	BOTTOM DWN	Lower value of drawing frame bottom	8C	8C								
56	MIDDLE UP	Upper value of drawing frame middle	AD	AD								
57	MIDDLE DWN	Lower value of drawing frame middle	96	96								
58	TOP UP	Upper value of drawing frame top	78	78								
59	TOP DWN	Lower value of drawing frame top	60	60								
5A	KEIKO	Lower value of output frame fluorescent lamp output	66	66								
5B	KEIKO DWN	Lower value of drawing frame fluorescent lamp	59	59								
5C	R TOP LMT	Upper value of drawing frame R	6E	6E								
5D	R DWN LMT	Lower value of drawing frame R	20	20								
5E	B TOP LMT	Upper value of drawing frame B	83	83								
5F	B IN TOP	Upper value of INDOOR drawing frame B	67	67								
60	B IN MAX	Upper value of INDOOR output frame B	5C	5C								
61	B OUT MIN	Lower value of OUTDOOR output frame B	5C	5C								
62	B OUT DWN	Lower value of OUTDOOR drawing frame B	4A	4A								
63	B DWN LMT	Lower value of drawing frame B	1B	1B								
64	ADJ BCONT	Direct output value (BLUE)	50	50								
65	T M DIVID	Border between top and middle of drawing frame	5E	5E								
66	B M DIVID	Border between middle and bottom of drawing frame	39	39								
67	DELAY TIME	Auto white balance tracking speed <table border="1" style="margin-left: auto; margin-right: auto;"> <tr><td>Data</td><td>Mode.</td></tr> <tr><td>0E</td><td>Normal</td></tr> <tr><td>01</td><td>High speed tracking</td></tr> </table>	Data	Mode.	0E	Normal	01	High speed tracking	0E	0E		
Data	Mode.											
0E	Normal											
01	High speed tracking											
68	B IN MIN	INDOOR output frame B bottom	33	33								
69	OUT HYS OFF	OUTDOOR hysteresis off difference	0C	0C								
6A	OUT B HYS	OUTDOOR hysteresis amount	06	06								
6B	AWB MODE	Auto white balance adjustment mode <table border="1" style="margin-left: auto; margin-right: auto;"> <tr><td>Data</td><td>Mode</td></tr> <tr><td>00</td><td>Normal</td></tr> <tr><td>D0</td><td>AWB adjustment</td></tr> <tr><td>F1</td><td>AWB all tracking</td></tr> </table>	Data	Mode	00	Normal	D0	AWB adjustment	F1	AWB all tracking	00	00
Data	Mode											
00	Normal											
D0	AWB adjustment											
F1	AWB all tracking											

Table 8-2(3).

Address	Name	Function [] contains the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
6C	IN B HYS	Indoor hysteresis amount (Blue)	04	04
6D	IN R HYS	Indoor hysteresis amount (Red)	02	02
6E	KAKE NORM R	ADD : 40 NORM R × 1000H	20	20
6F	KAKE NORM B	ADD : 41 NORM B × 1000H	40	40
70	AE FUNCTION 1	Switch for turning each AE function ON and OFF (1)	00	00
71	AE FUNCTION 2	Switch for turning each AE function ON and OFF (2)	10	10
72	AE REF H	Reference value for AE (Upper)	1B	1B
73	HIGHLIT LEVEL	High luminance modulation level setting	50	50
74	AE MIN L	MAX GAIN adjustment	2F	
75	AGC MIN	AGC MIN value (AGC reference value)	D4	D4
76	IRIS MIN H	Iris limit value (Upper)	40	40
77	AE MAX	AE level max limiter	A0	A0
78	YAKEI LEVEL	YAKEI mode AGC max limiter	40	40
79	JITEISU DOWN	Constant during loop response DOWN side	30	30
7A	JITEISU UP	Constant during loop response UP side	10	10
7B	ORETEN SET	Variable point due to time constant error amount	13	13
7C	OMOMIWAKU 0	Weighting by changing to three frames (Upper frame)	40	40
7D	OMOMIWAKU 1	Weighting by changing to three frames (Surrounding frame)	FF	FF
7E	AFC WIDE	Coefficient required for the ANF integral loop	03	03
7F	AFC GAIN	Loop gain of the flicker less loop	01	01
80	AFC LIML	Limiter corresponding to the error rate (Lower)	60	60
81	DELTA GAIN	Gain smoothing value	08	08
82	ZOOM DROP 1	F-No. dropping (1) by Zoom lens	AE	AE
83	ZOOM DROP 2	F-No. dropping (2) by Zoom lens	41	41
84	HIST P KEISU	Histocomp level setting P for counter light determination	40	40
85	HIST H KEISU	Histocomp level setting H for counter light determination	E0	E0
86	HIST L KEISU	Histocomp level setting L for counter light determination	90	90
87	FUZZY JITEISU	Constant during auto back light response	08	08
88	BAIRITSU P	Magnification setting of required for HIST P	80	80
89	FUZZY DATA 1	Exposure correction data 1	90	90
8A	FUZZY DATA 2	Exposure correction data 2	C0	C0
8B	FUZZY DATA 3	Exposure correction data 3	B0	B0
8C	FUZZY DATA 4	Exposure correction data 4	A0	A0
8D	FUZZY DATA 5	Exposure correction data 5	80	80
8E	FUZZY DATA 6	Exposure correction data 6	A0	A0
8F	FUZZY DATA 7	Exposure correction data 7	98	98
90	FUZZY DATA 8	Exposure correction data 8	90	90
91	FUZZY DATA 9	Exposure correction data 9	60	60
92	FUZZY DATA 10	Exposure correction data 10	40	40
93	HIGHLIT START	Setting of high luminance modulation start	58	58
94	HIGHLIT END	Setting of high luminance modulation stop	88	88
95	IRIS OFFSET	Iris ROM table open side offset	28	28
96	IRIS PWM BIAS	Adjusting for IRIS PWM BIAS	F8	F8
97	AGC AMP BIAS	Adjusting for AGC AMP BIAS	FE	FE

Table 8-2(4).

Address	Name	Function [] contains the adjustment voltage output terminal	Adjustment data							
			Initial value	Memo column						
98	WIDE H	Zoom wide end upper	03							
99	WIDE L	Zoom wide end lower	26							
9A	TELE H	Zoom tele end upper	1C							
9B	TELE L	Zoom tele end lower	B5							
9C	FOCUS H	Focus offset upper	11							
9D	FOCUS L	Focus offset lower	03							
9E	ZM HYS	Zoom speed hysteresis	00	00						
9F	ADJ LENZ		00	00						
A0	REST WIDE	Zoom limiter WIDE side	20	20						
A1	REST TELE	Zoom limiter TELE side	10	10						
A2	NEAR LIM	Focus near limit	80	80						
A3	LANC ZM SPD	Lanc zoom speed	F0	F0						
A4	VAR ZM SPD H	Variable zoom speed	EA	EA						
A5	VAR ZM SPD L	Variable zoom speed	A8	A8						
A6	STOP DEAD ZONE	Dead zone amount for the absolute value control	04	04						
A7	ZM SPD LMT	Zoom speed (Limit)	0B	0B						
A8	ZM SPD MAX	Zoom speed (Maximum)	38	38						
A9	ZM MOTOR STOP	Zoom motor stop	15	15						
AA	PULSE SPD MAX	Maximum zoom pulse value	09	09						
AB	ADJ0	For adjusting (ZOOM OFF MODE) <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Data</th> <th>Mode</th> </tr> </thead> <tbody> <tr> <td>FB</td> <td>Normal</td> </tr> <tr> <td>01</td> <td>Zoom position fixed</td> </tr> </tbody> </table>	Data	Mode	FB	Normal	01	Zoom position fixed	FB	FB
Data	Mode									
FB	Normal									
01	Zoom position fixed									
AC	ADJ1	For adjusting (WND A)	1E	1E						
AD	ADJ2	For adjusting (WND B)	5A	5A						
AE	ADJ3	For adjusting	00	00						
AF	AF0	Noise threshold	55	55						
B0	AF ID	AF ID for testing	00	00						
B1	AF WIND	AF frame for testing	00	00						
B2	HBG REF	High luminance gate level	FA	FA						
B3	AGC REF 1	AGC gain 1	04	04						
B4	AGC REF 2	AGC gain 2	05	05						
B5	AGC REF 3	AGC gain 3	12	12						
B6	HOLE REF 1	Hole data close	A5	A5						
B7	HOLE REF 2	Hole data middle	96	96						
B8	HOLE REF 3	Hole data open	76	76						
B9	IIR K	IIR filter coefficient	03	03						
BA	B NOISE	Base noise level	30	30						
BB	GATE THR	Noise threshold	55	55						
BC	HB THR	High luminance threshold (HB)	80	80						
BD	HBFH THR	High luminance threshold (fh)	40	40						
BE	TEST WOB	Wobbling amplitude for testing	FF	FF						
BF	WOB LIMIT	Wobbling amplitude limit	06	06						

Table 8-2(5).

Address	Name	Function [] contains the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
C0	SHIND THR	Depth of focus THR	0C	0C
C1	SPD UP 0	Speed up value (No. -1)	01	01
C2	SPD UP 1	Speed up value (No. -2)	01	01
C3	WOB DET SW	Wobbling detect filter switch	00	00
C4	STEP LIM	Speed limit value	0A	0A
C5	YAMA SW	Climbing switch	00	00
C6	SPD THR	Speed THR	06	06
C7	YAMA THR	Climbing THR	50	50
C8	AF SPD	Speed offset	01	01
C9	TEST SPD	Speed for testing	FF	FF
CA	WOB AMP	Wobbling amplitude offset	02	02
CB	MODE SW	Test mode switching	FF	FF
CC	SPD OFFSET 1	Speed offset up value 1	01	01
CD	SPD OFFSET 2	Speed offset up value 2	01	01
CE	AF FADE SW	Fader AF mode	01	01
CF	IRIS THR		00	00
D0	V SENSOR GAIN	PITCH adjustment gain	88	88
D1	H SENSOR GAIN	YAW adjustment gain	64	64
D2		Not used	00	00
D3	V LIMIT 1	PITCH initial limiter	FF	FF
D4	V LIMIT 2	Loop limiter in PITCH integral	7F	7F
D5	V CORE VALUE	PITCH core ring	10	10
D6	VK HPF	PITCH HPF feedback coefficient	FF	FF
D7	H LIMIT 1	YAW initial limiter	FF	FF
D8	H LIMIT 2	Loop limiter in YAW integral	7F	7F
D9	H CORE VALUE	YAW core ring	10	10
DA	H K HPF	YAW HPF feedback coefficient	FF	FF
DB	K TABLE	PITCH and YAW integral feedback coefficient table	04	04
DC	V REF CENTER L	PITCH PWM center value (lower 8 bit)	00	00
DD	V REF CENTER H	PITCH PWM center value (upper 8 bit)	08	08
DE	H REF CENTER L	YAW PWM center value (lower 8 bit)	00	00
DF	H REF CENTER H	YAW PWM center value (upper 8 bit)	08	08
E0	STILL THR	Discrimination poin due to still and deflation	80	80
E1	V CORE STILL	Still core ring value (Vertical)	40	40
E2	H CORE STILL	Still core ring balue (Horizontal)	40	40
E3		} Not used	00	00
E4			00	00
E5			00	00
E6			00	00
E7			00	00
E8	PRE YL R-Y DATA	Hue a difference data of yellow (Red-Yellow)	00	
E9	PRE YL B-Y DATA	Hue a difference data of yellow (Blue-Yellow)	00	
EA	PRE R R-Y DATA	Hue a difference data of Red (Red-Yellow)	00	
EB	PRE R B-Y DATA	Hue a difference data of Red (Blue-Yellow)	00	
EC	BL R-Y DATA	Hue a difference data of Blue (Red-Yellow)	00	

Table 8-2(6).

Address	Name	Function [] contains the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
ED	BL B-Y DATA	Hue a difference data of Blue (Blue-Yellow)	00	
EE	CY R-Y DATA	Hue a difference data of Cyan (Red-Yellow)	00	
EF	CY B-Y DATA	Hue a difference data of Cyan (Blue-Yellow)	00	
F0		} Column for inputting unit's ID No, etc. Not related to unit's operations.	FF	
F1			FF	
F2			FF	
F3			FF	
F4			FF	
F5			FF	
F6			FF	
F7			FF	
F8			FF	
F9			FF	
FA			FF	
FB			FF	
FC			FF	
FD			FF	
FE			FF	
FF			FF	

Table 8-2 (7).

8-1-6. Page 6, Page 2 Address List

The camera adjustment mode can be set by setting the data in the following table to page 6 or 2. (The data of these pages can be set temporarily. When the main power supply (7.5V) is turned off, the original values (normal value) are returned. Therefore, these adjustment modes can be released easily by turning off the main power supply.)

(Example) By setting data: 01 to page:6, address: 00, the write protect of page F, addresses 01 to EF can be released.

1. Page 6

Address	Adjustment Mode	Data	Function
00	Page F protect	00	Normal (Protect released)
		01	Protect release of address 01 to EF of Page F
01	Camera adjustment switch Note: To execute this address adjustment mode, it is necessary to press the PAUSE button of the adjusting remote commander after setting the data.	00	Normal
		01	IRIS OPEN, AGC HOLD
		03	IRIS CLOSE1, AGC HOLD
		09	ND0.5 SHUTTER (PAL=1/160, NTSC=1/190)
		0B	ND0.8 SHUTTER (PAL=1/320, NTSC=1/380)
		0D	AWB PRESET1: 3200K PRESET DATA input
		0F	WB 3200K PRESET: Indoor white balance mode
		11	AWB PRESET2: 3200K PRESET DATA input preparations
		13	Flange back adjustment preparations
		15	Flange back adjustment execution
		17	1/2000 shutter mode
		19	MAX GAIN adjustment mode
2D	EEPROM PRE WRITE: Page F, page E initial data writing		
02	DDS display switching	00	Normal
		02	Color difference data display
		03	HALL DATA display
		04	R ratio display
		05	B ratio display
		0C	Auto focusing display (01: Focusing, 00: Not focusing)
0E	Light level display		
03	Weighting on/off	00	Weighting off
		10	Normal (Weighting on)
10	Camera control microprocessor version	20	Version 2 (SC424605FU5 : VC-132 board IC 653)
11	Page F data initialization completed display	00	Normal (Data can be initialized)
		01	Data initialized
12	Shutter mode	00	Normal
		19	1/4000 shutter mode
21	Flange back adjustment completed display	00	Normal (Flange back adjustable)
		01	Flange back adjusted
30	VAP control microprocessor version	10	Version 1 (CXP80620A-020R : VC-132 board IC745)

Table 8-3.

2. Page 2

Category	Address	Adjustment Mode	Data	Function
01	37	VH address L		Title horizontal/vertical position (L)
01	38	VH address H		Title horizontal/vertical position (H)
01	39	Data transmission to SG	00 01	Normal Data transmission to SG begins
01	3D	Character generator oscillation mode	01 others	Continuous oscillation mode Normal
FF	E3	Mode control microprocessor version	01	Version 1 (MB89092PFV-G-128; VC-132 board IC902)

Note: The category is specified by the data of page 2, address 00.
 (Example) To specify category 01, adjust to 01 the data of page 2, address 00.

Table 8-4.

8-1-7. Data Processing

For some adjustments, the DDS display and the display data of the adjusting remote commander (hexadecimal numeral) must be calculated in order to obtain the adjustment data. In this case, after converting the hexadecimal numeral to a decimals numeral

once, calculate and convert the result to a hexadecimal numeral, and use it as the adjustment data. Table 8-5 is the hexadecimal-decimal calculation table.

Hexadecimal-Decimal Conversion Table

The lower digits of the hexadecimal The upper digits of the hexadecimal	<div style="text-align: right;">② ↓</div>															
	0	1	2	3	4	5	6	7	8	9	A (A)	B (b)	C (c)	D (d)	E (E)	F (F)
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
2	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
3	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
4	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
5	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
6	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
7	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
8	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
9	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
A (A)	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
B (b)	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
C (c)	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
D (d)	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
E (E)	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
F (F)	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255

Note: () contains the display of the adjusting remote commander.

(Example) When the DDS display or the display of adjusting remote commander is BD (b d).

As the upper digit of the hexadecimal numeral is B (b), and the lower digit is D (d), the meeting point "189" of ① and ② in the above table is the decimal numeral to be calculated.

Table 8-5.

8-2. CAMERA SYSTEM ADJUSTMENTS

1. Adjusting points when replacing main parts

When replacing the CCD imager or lens block, adjust the items indicated by ○ in the following table.

	When CCD imager is replaced	When lens block is replaced
V SUB adjustment	○	
V RG adjustment	○	
HALL adjustment		○
CCD imager correction data writing	○	
Flange back adjustment	○	○
IRIS IN/OUT adjustment	○	○
MAX GAIN adjustment	○	
Auto white balance balance reference data input	○	
Auto white balance adjustment	○	
Color reproductivity adjustment	○	

2. Power supply voltage check (DD-55 board)

Subject	Arbitrary
Measuring instrument	Digital voltmeter
D5V check	
Measurement point	Pins ⑤ and ⑥ of CN451
Specified value	4.90 ± 0.15 Vdc
D4V check	
Measurement point	Pin ③ of CN451
Specified value	3.80 ± 0.15 Vdc
CAM 5V check	
Measurement point	Pin ① of CN451
Specified value	4.85 ± 0.15 Vdc
15V check	
Measurement point	Pin ④ of CN451
Specified value	15.0 ± 0.4 Vdc
-8.5V check	
Measurement point	Pin ② of CN451
Specified value	-8.5 ± 0.5 Vdc

Checking Method:

- 1) Check that each power supply voltage satisfies the specified value.

If not, refer to "Video circuit, Power supply block adjustment".

3. Page F data initialization

Note: If the page F data has been initialized, all adjustments of the camera section must be carried out again.

Initializing method:

Order	Page	Address	Data	Procedure	Conditions
1				Turn off/on the main power supply (7.5V)	
2	6	00	01	Releasing of protect.	
3	6	11		Check that the data is 00. (Display indicating that page F data can be initialized.)	
4	6	01	2D	Press the PAUSE button. (Initializing the page F data. The data of addresses 01 to EF of page F will be initialized.)	
5	6	11		Check that the data is 01. (Display of data initialized.)	

Note: Initialize page F only when the nonvolatile memory (VC-132 board IC641 EEPROM) has been replaced.

Processing after initializing

Order	Page	Address	Data	Procedure	Conditions
1	6	01	00	Press the PAUSE button. (Releasing of initialization mode)	
2				After " Page F Data Modifications ", carry out all adjustments of the camera section.	

Related Adjustments:

All camera adjustments of the camera section excluding " 28 MHz origin oscillation adjustment ".

4. Page F data modification

Some parts of the data (initial data) automatically written on page F by the initialization of the page F data will differ according to the version of the camera micro processor. Change the data manually, and arrange it.

Modification method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of page F protect.	
2	F	00 (SET ID)	4F	Set each data to each address, and press the PAUSE button.	
		01 (NT PAL)	50		
		08 (V REF Y)	64		
		09 (V REF C)	4C		
		10 (CORE OTHER)	50		
		16 (CORE BURST LEVEL)	2C		
		18 (CORE Y SET UP)	04		
		1C (CORE R Y 3200 GAIN)	4C		
		1D (CORE B Y 3200 GAIN)	28		
		67 (DELAY TIME)	0E		
		70 (AE FUNCTION 1)	00		
		79 (JITEISU DOWN)	30		
		7A (JITEISU UP)	10		
		C0 (SHIND THR)	0C		

Remarks: The versions of the camera micro processor (VC-132 board IC653) and the VAP micro processor (VC-132 board IC745) can be distinguished using the following table.

● Camera control microprocessor

Page	Address	Data	
6	10	20	Version 2

● VAP control microprocessor

Page	Address	Data	
6	30	10	Version 1

5. 28 MHz origin oscillation adjustment (VC-132 board)

Subject	Not required
Measurement Point	Pin ⑤ of IC602 (CL)
Measuring Instrument	Frequency counter
Adjusting Element	CT601
Specified Value	14318181 ± 71Hz

Adjusting method:

Order	Adjusting element	Procedure	Conditions
1	CT601	Adjust the oscillation frequency to the specified value.	

6. V SUB adjustment (VC-132 board)

Subject	Not required
Adjustment Page	F
Adjustment Address	06 (V SUB)

Related Adjustments:
 "MAX gain adjustment", "Auto white balance reference data input",
 "Auto white balance adjustment", "Color reproductivity
 adjustment".

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of protect.	
2	F	06		Reading a voltage code of V SUB indicated by CCD imager then input data of a table (Fig. 8-7.).	
3	F	06		Press the PAUSE button.	

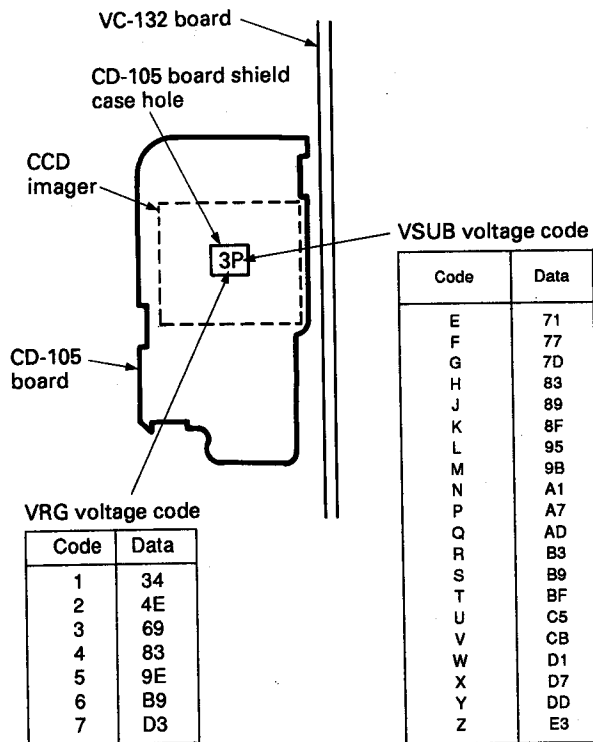


Fig. 8-7.

7. VRG adjustment (VC-132 board)

Subject	Not required
Adjustment Page	F
Adjustment Address	07 (V PGH)

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of protect.	
2	F	07		Reading a voltage code of VRG indicated by CCD imager then input data of a table (Fig. 8-7.).	
3	F	07		Press the PAUSE button.	

8. CCD imager correction data writing

Subject	Not required
Adjustment Page	F
Adjustment Address	1F to 2E (CCD-DEFECT)

Write the CCD imager correction data in the following cases.

1. When the CCD imager has been replaced
2. When the camera EEPROM (VC-132 board IC641) has been replaced
3. When the page F data has been initialized

In the case of 1, as the CCD imager for repair does not require the correction data, adjust the data of addresses 1D to 2C of page F and those of addresses E0 to EF of page D to "00".

Writing method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of page F protect.	
2	F	1F~2E		Set data 00 to each address, and press the PAUSE button.	
3	1	00	01	Releasing of page D protect.	
4	D	E0~EF		Set data 00 to each address, and press the PAUSE button. (Writing the backup data)	

In the case of 2 and 3, read the CCD imager correction data written on addresses E0 to EF in page D and write them in addresses 1F to 2E.

Writing method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of page F protect.	
2	D	E0~EF		Read the CCD imager correction data.	
3	F	1F 20 21 ⋮ 2E		Set the data of address E0 of page D, and press the PAUSE button. Set the data of address E1 of page D, and press the PAUSE button. Set the data of address E2 of page D, and press the PAUSE button. ⋮ Set the data of address EF of page D, and press the PAUSE button.	

9. HALL adjustment

Subject	Not required
Measurement Point	DDS display of EVF or TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	0A (HALL GAIN) 0B (HALL OFFSET)
Specified Value	33 to 37 during IRIS OPEN B7 to BB during IRIS CLOSE

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of protect.	
2	6	02	03	Set the HALL DATA display mode.	
3	6	01	03	Press the PAUSE button. (Setting the IRIS CLOSE mode)	
4	F	0B	80	Press the PAUSE button. (HALL OFFSET data initial setting)	
5	F	0A	40	Read the DDS display data (Note 1) and take it as W2.	IRIS CLOSE mode
6	F	0A	30	Read the DDS display data and take it as W1.	IRIS CLOSE mode
7	6	01	01	Press the PAUSE button. (Setting the IRIS OPEN mode)	
8	F	0A	30	Read the DDS display data and take it as K1.	IRIS OPEN mode
9	F	0A	40	Read the DDS display data and take it as K2.	IRIS OPEN mode
10				Convert W1, W2, K1, K2 to decimal numerals, and obtain W1', W2', K1', K2'. (Refer to Table 8-5. "Hexadecimal-Decimal Conversion Table")	
11				Calculate X1' using the following equations (Decimal calculation). $A' = W2' + K1' - W1' - K2'$ Equation 1 $B' = W1' - K1'$ Equation 2 $X1' = \frac{2128 + (48 \times A') - (16 \times B')}{A'}$ Equation 3	
12				Convert X1' to a hexadecimal numeral, and obtain X1. (Round off to a whole number)	
13	F	0A		Set the data to X1 (obtained at step 12).	
14	F	0A		Press the PAUSE button.	
15	F	0B		Change the data with the PLAY and STOP buttons, and adjust the DDS display data to 35.	IRIS OPEN mode
16	F	0B		Press the PAUSE button.	
17	6	01	03	Press the PAUSE button. (Setting the IRIS CLOSE mode)	
18				If the DDS display data is B7 to BB, it indicates the end of adjustments. Perform "Processing after Adjustments". If not, carry out step 19 onwards with the DDS display data as W0.	IRIS CLOSE mode

Note 1: Lower 2 digits of the data displayed at the bottom right of the EVF or TV monitor.

Order	Page	Address	Data	Procedure	Conditions
19				Convert W0 to a decimal numeral, and obtain W0'.	
20				Calculate X2' using the following equations (decimal numeral calculation). $C' = W0' - B' - 53$ Equation 4 $X2' = \frac{(133 - B') \times (X1' - 48) + 48 \times C'}{C'}$ Equation 5 (X1' and B' are values obtained from equations 2 and 3 at step 11)	
21				Convert X2' to a hexadecimal numeral, and obtain X2. (Round off to a whole number)	
22	F	0A		Set the data to X2 (obtained at step 21).	
23	F	0A		Press the PAUSE button.	
24	F	0B		Change the data with the PLAY and STOP buttons, and adjust the DDS display data to BA.	IRIS CLOSE mode
25	F	0B		Press the PAUSE button.	
26	6	01	01	Press the PAUSE button. (Setting the IRIS OPEN mode)	
27				Check that the DDS display data is 33 to 37.	IRIS OPEN mode

Processing after Adjustments:

Order	Page	Address	Data	Procedure	Conditions
1	6	02	00	Releasing of HALL DATA display mode.	
2	6	01	00	Press the PAUSE button. (Releasing the IRIS CLOSE/OPEN mode)	

Related Adjustments:
 "IRIS IN/OUT adjustment".

10. Flange back adjustment

Subject	Chart for flange back adjustment (Placed 2000 ± 5 mm in front of the lens Illuminance: 300 ± 50 lux)
Measurement Point	Check the operations on the TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	98 (WIDE H), 99 (WIDE L), 9A (TELE H), 9B (TELE L), 9C (FOCUS H), 9D (FOCUS L)

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of protect.	
2				Check that the center of the flange back adjustment chart coincides with that of the exposure display at both the zoom lens TELE end and the WIDE end.	
3	6	21		Check that the data is 00. (Flange back adjustable display)	
4	6	01	13	Press the PAUSE button.	
5	6	01	15	Press the PAUSE button. (This enables adjustments to be carried out automatically. Adjustments are performed at the zoom lens TELE end first, and then at the WIDE end. The adjustment data is automatically input to page: F, addresses: 98 to 9D.)	
6	6	21		Check that the data is 01. (Display indicating that flange back adjustment has completed.)	

Processing after Adjustments:

Order	Procedure
1	Turn on the main power supply (7.5V) (Out of focus if this is not carried out.)

11. Flange back check

Subject	Siemens star (Placed 2m in front of the lens)
Measurement Point	DDS display of the EVF or TV
Measuring Instrument	monitor
Specified Value	$D_2 = D_1 \pm 3$

Checking method:

Order	Page	Address	Data	Procedure	Conditions
1				Place the Siemens star 2m in front of the lens.	
2				To open the IRIS, decrease the luminous intensity to the siemens star up to a point before noise appears on the image displayed on the monitor TV screen.	
3				Expose the Siemens star at the TELE end.	
4				Press the "Focus" button, and turn on the auto focus.	
5	6	02	0C	Check that the DDS display is 00 0001. (Focusing check)	Auto focus on
6				Press the "Focus" button and turn off the auto focus.	
7				Expose the siemens star at the WIDE end.	
8	6	00	01	Releasing of protect.	
9	6	02	00		
10	F	02	B8	Press the PAUSE button. (Setting the focus position display mode)	
11				Read the DDS display data (4 digits) and take it as D1.	Zoom WIDE end Auto focus off
12				Press the "Focus" button, and turn on the auto focus.	
13	6	02	0C	Check that the DDS display is 00 0001. (Focusing check)	Auto focus on
14	6	02	00	Read the DDS display (focus position display) data and take it as D2.	Zoom WIDE end Auto focus on Focusing condition
15				Check that $D_2 = D_1 \pm 3$.	

Checking method:

Order	Page	Address	Data	Procedure
1	F	02	00	Press the PAUSE button. (Releasing the focus position display mode)

12. SYNC level check (VC-132 board)

Subject	Not required
Measurement Point	Pin ⑧ of CN641 (Y OUT)
Measuring Instrument	Oscilloscope
Specified Value	$A=140 \pm 10 \text{ mV}$

Checking method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of protect.	
2	6	01	03	Press the PAUSE button. (Setting the IRIS CLOSE mode)	
3				Check that the SYNC level to the specified value.	IRIS CLOSE mode

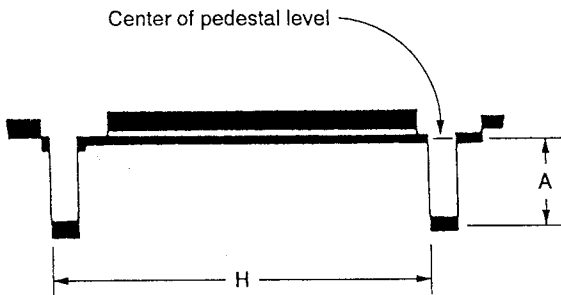


Fig. 8-8.

Processing after Adjustments:

Order	Page	Address	Data	Procedure	Conditions
1	6	01	00	Press the PAUSE button. (Releasing the IRIS CLOSE mode)	

13. Burst level check (VC-132 board)

Subject	Not required
Measurement Point	Pin ⑥ of CN641 (C OUT)
Measuring Instrument	Oscilloscope
Specified Value	A = 140 ± 15 mVp-p

Checking method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of protect.	
2	6	01	03	Press the PAUSE button. (Setting the IRIS CLOSE mode)	
3				Check that the SYNC level to the specified value.	IRIS CLOSE mode

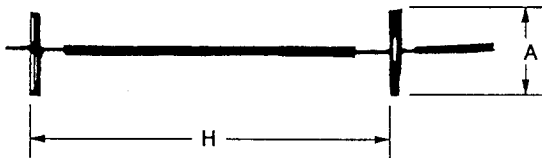


Fig. 8-9.

Processing after Adjustments:

Order	Page	Address	Data	Procedure	Conditions
1	6	01	00	Press the PAUSE button. (Releasing the IRIS CLOSE mode)	

Related Adjustments:

"Color reproductivity adjustment".

14. Picture frame setting

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope and TV monitor.
Specified Value	A=B, C=D, $t=0 \pm 0.1$ msec.

Setting method:

Order	Procedure
1	Turn off the auto focus.
2	Adjust the focus using the focus knob.
3	Adjust the direction of the zoom and camera, and set at the specified position.
4	Mark the position of the picture frame on the monitor display, and adjust it to this position if the "color bar chart standard picture frame" or "white pattern standard picture frame" is used in the following adjustments.

Checking on the TV monitor (Under scan mode)


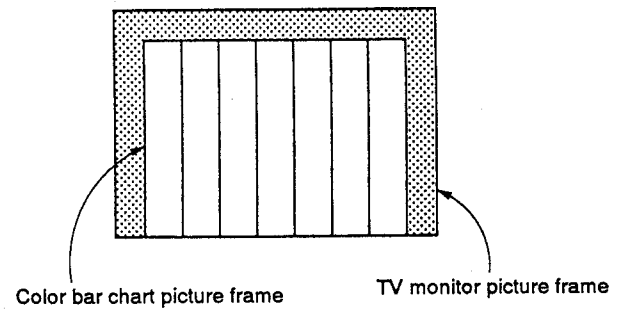


Fig. 8-11.

Checking with the oscilloscope

1. H cycle

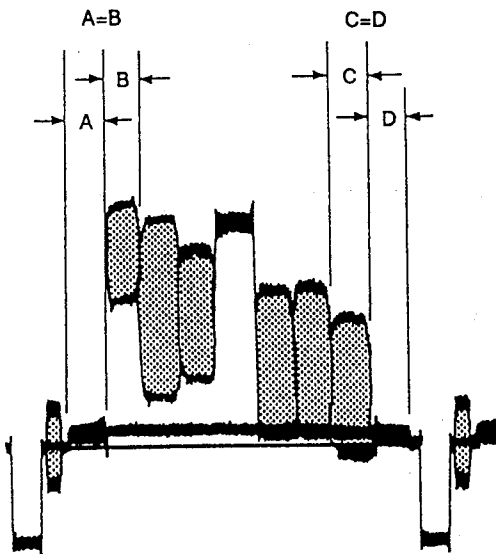

2. V cycle

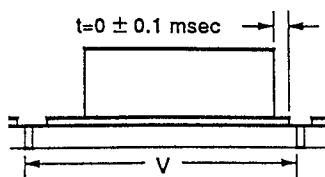


Fig. 8-10.

15. IRIS IN/OUT adjustment

Subject	White pattern standard picture frame
Measurement Point	DDS display fo the EVF or TV
Measuring Instrument	monitor
Adjustment Page	F
Adjustment Address	44 (IRIS IN) 45 (IRIS OUT)

Checking method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of protect.	
2	6	02	0E	Setting of light level display mode.	
3	6	01	0B	Press the PAUSE button. (Setting the ND 0.8 shutter mode)	
4				Read the data of the DDS display data, and take it as D_1 .	ND 0.8 shutter mode
5				Convert D_1 to decimal numerals to obtain D_1' . (Refer to table 8-5 "Hexadecimal-Decimal Conversion Table")	
6				Calculate D_2' from the following equations (Decimal numeral calculation). $D_2' = D_1' - 5584$	
7				Convert D_2' to hexadecimal numerals to obtain D_2 . Read the upper 2 digits of D_2 , and take it as D_{44} .	
8	F	44		Adjust the data to D_{44} (obtained at step 7) with the PLAY and STOP buttons.	
9	F	44		Press the PAUSE button.	
10	6	01	09	Press the PAUSE button. (Setting the ND 0.5 shutter mode)	
11				Read the data of the DDS display data, and take it as D_3 .	ND 0.5 shutter mode
12				Convert D_3 to decimal numerals to obtain D_3' .	
13				Calculate D_4' from the following equations (Decimal numeral calculation). $D_4' = D_3' - 3568$	
14				Convert D_4' to hexadecimal numerals to obtain D_4 . Read the upper 2 digits of D_4 , and take it as D_{45} .	
15	F	45		Adjust the data to D_{45} (obtained at step 14) with the PLAY and STOP buttons.	
16	F	45		Press the PAUSE button.	

Processing after Adjustments:

Order	Page	Address	Data	Procedure	Conditions
1	6	02	00	Releasing of light level display mode.	
2	6	01	00	Press the PAUSE button. (Releasing the ND 0.5 shutter mode.	

16. Max gain adjustment (VC-132 board)

Subject	White pattern standard picture frame
Measurement Point	Pin ⑧ of CN641 (Y OUT)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	74 (AE MIN L)
Specified Value	A=365 ± 10 mV

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of protect.	
2	6	01	19	Press the PAUSE button. (Max gain adjustment mode)	
3	F	74		Change the data with the PLAY and STOP buttons, and adjust the CAM Y signal level (A) to the specified value.	MAX GAIN adjustment mode
4	F	74		Press the PAUSE button.	

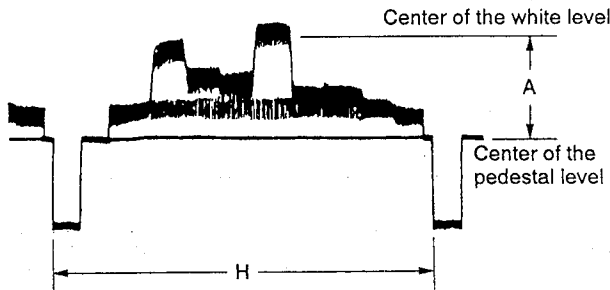


Fig. 8-12.

Processing after Adjustments:

Order	Page	Address	Data	Procedure	Conditions
1	6	01	00	Press the PAUSE button. (Releasing the max gain adjustment mode)	

17. Auto white balance reference data input

Subject	White pattern standard picture frame
Adjustment Page	F
Adjustment Address	38 (RG3200H), 39 (RG3200L), 3A (BG3200H), 3B (BG3200L)

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1				Turn off/on the main power supply (7.5V).	
2	6	00	01	Releasing of protect.	
3	6	11		Check that the data is 00. (Display indicating that auto white balance reference data can be input)	
4	6	01	11	Press the PAUSE button. (Auto white balance reference data input preparation mode)	
5	6	01	0D	Press the PAUSE button. (The auto white balance reference data input will be executed and the data input automatically to addresses 38 to 3B of page F.)	
6	6	11		Check that the data is 01. (Display indicating that the auto white balance reference data input completed)	

Processing after Adjustments:

Order	Page	Address	Data	Procedure	Conditions
1	6	01	00	Press the PAUSE button. (Releasing the auto white balance reference data input mode)	
2				Perform "Auto White Balance Adjustment".	

Related Adjustments:

"Auto White Balance Adjustment".

18. Auto white balance adjustment

Subject	White pattern standard picture frame
Filter	Filter C14 for color temperature correction
Measurement Point	Check with the DDS display on the EVF or TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	40 (NORM R), 41 (NORM B)
Specified Value	R ratio $2A80 \pm 40$ B ratio $5E80 \pm 40$

Note: Perform this adjustment after "Auto White Balance Reference Data Input".

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of protect.	
2	F	6B	D0	Press the PAUSE button. (Setting the auto white balance adjustment mode)	
3	6	02	04	Setting of R ratio display mode.	
4	F	40		Change the data with the PLAY and STOP buttons, and adjust the R ratio data of the DDS display to the specified value.	R ratio display mode
5	6	02	05	Setting of B ratio display mode.	
6	F	41		Change the data with the PLAY and STOP buttons, and adjust the B ratio data of the DDS display to the specified value.	B ratio display mode
7	F	41		Press the PAUSE button.	

Processing after Adjustments:

Order	Page	Address	Data	Procedure	Conditions
1	F	6B	00	Press the PAUSE button. (Releasing the auto white balance adjustment mode)	
2	6	02	00	Releasing of B ratio display mode.	

19. White balance check

Subject	White pattern standard picture frame
Filter	Filter C14 for color temperature correction ND filters 1.0 and 0.3
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Specified Value	Fig. 8-13 A to C

Checking method:

Order	Page	Address	Data	Procedure	Conditions
1				Check that the lens is not covered with either filter.	
2	6	00	01	Releasing of protect.	
3	6	01	0F	Press the PAUSE button. (Setting the WB 3200K preset mode)	
4				Check that the white luminance point is within the circle shown in Fig. 8-13. A. (Setting the indoor white balance mode)	WB 3200K preset mode, no filter
5	6	01	00	Press the PAUSE button. (Releasing WB 3200K preset mode)	
6	F	67	01	Press the PAUSE button. (Setting the auto white balance high speed tracking mode)	
7				Check that the white luminance point is within the circle shown in Fig. 8-13. A.	Auto white balance high speed tracking mode, no filter
8				Place the C14 filter on the lens.	
9				Check that the white luminance point is within the circle shown in Fig. 8-13. B. (Checking the auto white balance outdoor mode)	Auto white balance high speed tracking mode, C14 filter
10				Remove the C14 filter, and place the ND filter 1.3 (1.0+0.3) over the lens.	
11				Check that the white luminance point is within the circle shown in Fig. 8-13. C. (Checking the auto white balance outdoor mode)	Auto white balance high speed tracking mode, ND filter 1.3

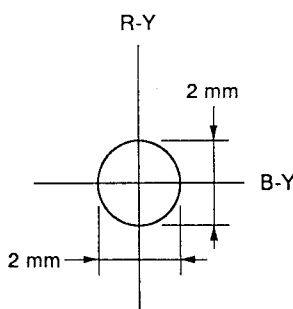


Fig. 8-13.A

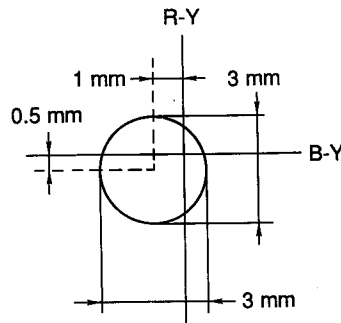


Fig. 8-13.B

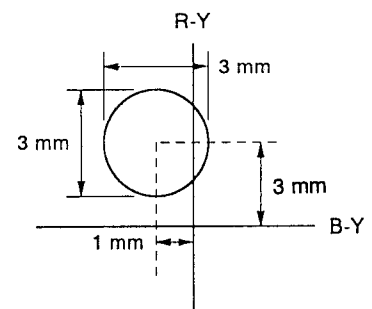


Fig. 8-13.C

Processing after Adjustments:

Order	Page	Address	Data	Procedure	Conditions
1	F	67	0E	Press the PAUSE button. (Releasing the auto white balance high speed tracking mode)	

20. Color reproductivity adjustment

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	14 (CORE MAT R) 15 (CORE MAT B) 1A (CORE B-Y HUE) 1B (CORE R-Y)
Specified Value	Each color luminance point should be within each color reproduction frame.

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	6	00	01	Releasing of protect.	
2	6	03	00	Setting of weighting off mode.	
3	F	3E	00	Press the PAUSE button. (Setting the WB 3200K preset mode)	
4	F	6B	F1	Press the PAUSE button. (Setting the AWB all tracking mode.)	
5	F	14 15 1A 1B		Change the data, and settle red and yellow color luminance point in each color reproduction adjustment frame. Press the PAUSE button for each address.	

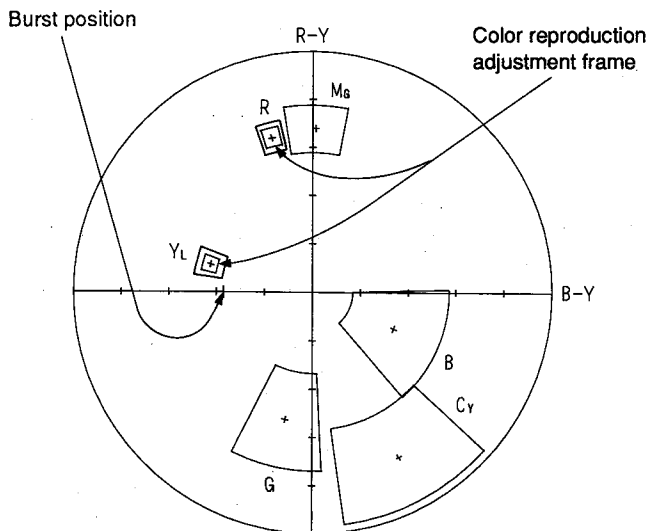


Fig. 8-14.

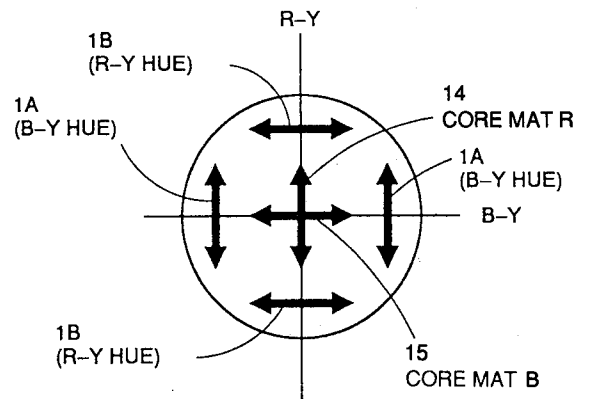


Fig. 8-15. Direction of the Movements of Adjustment Addresses and Luminance Points

Processing after Adjustments:

Order	Page	Address	Data	Procedure	Conditions
1	F	6B	00	Press the PAUSE button. (Releasing the AWB all tracking mode)	
2	F	3E	12	Press the PAUSE button. (Releasing the WB 3200K preset mode)	
3	6	03	10	Set the normal mode (weighting on mode).	

8-3. ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENTS

Note 1: The backlight (fluorescent tube) is driven by a 800 Vp-p, 16 kHz AC power supply. Therefore, be careful not to touch the backlight holder as you will receive an electric shock.

Note 2: When replacing the LCD unit, ensure there will be no damages by static electricity.

[Adjusting connector]

Most measuring points for adjusting the view-finder are concentrated at CN801 of the VF-68 board. Connect the measuring equipments via the measuring pin tool. The following table lists the pin numbers and signal names of CN801.

Pin No.	Signal Name	Pin No.	Signal Name
1	LC COM	2	EVF GND
3	G OUT	4	13.5V
5	SELFR	6	12V
7	R OUT	8	B OUT
9	BRIGHT	10	PCO

Table 8-5.

Measuring pin tool

Parts Code: J-6082-192-A

[Positions of RVs during adjustments]

Unless specified otherwise, set RVs to the following positions and adjust.

- RV953 (BRIGHT)..... Refer to "BRIGHT Adjustment"
- RV954 (COLOR)..... Mechanical center
- RV955 (HUE)..... 20 °± 10 ° from the mechanical center in the counterclockwise (○)

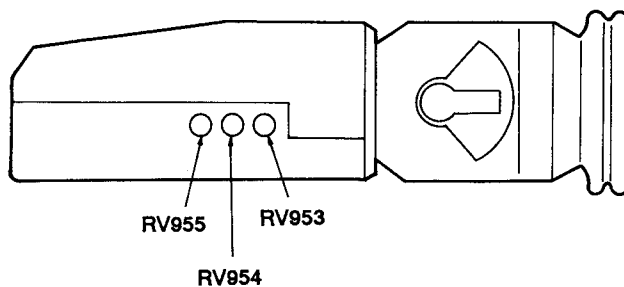


Fig. 8-16.

[Power Supply Voltage]

Adjust the power supply voltage for the battery pin so that Pin ① (EVF UNREG) of CN951 of the VF-69 board becomes 6.0 ± 0.1 Vdc.

[Connecting the Pattern Generator]

Connect the pattern generator as shown Fig. 8-17.

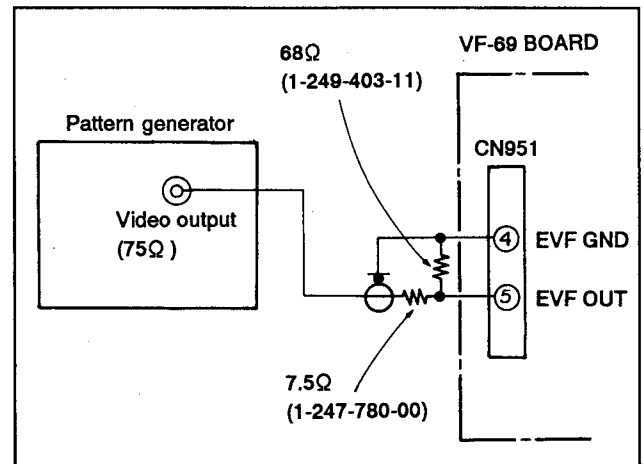


Fig. 8-17.

[Video Input Signal for Adjusting]

If the signal column specifies "Color bar signal whose chroma signal and burst signal are turned off", input a color bar signal whose chroma signal and burst signal have been turned off to the video input pin as the video input signal for adjusting. Check that the signal level of Pin ⑤ of CN951 of the VF-69 board is 0.9 ± 0.12 Vp-p before adjusting.

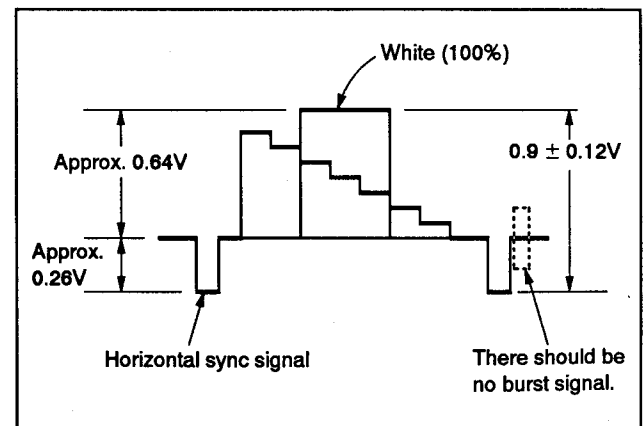


Fig. 8-18. Color bar signal whose chroma signal and burst signals are turned off

1. Current consumption adjustment (VF-69 board)

Mode	Stop
Signal	Color bar signal whose chroma signal and burst signal are turned off
Measurement Point	Remove L953 and measure +: Pin ① of CN951 -: ⊕ pin of C958
Measuring Instrument	Ammeter
Adjustment Element	RV951
Specified Value	72 ± 5 mA



Note 1: Adjust within 30 secs. after the power supply has been turned on.

Note 2: After adjusting, connect L953.

Adjusting method:

1. Check that the voltage of Pin ① of CN951 is 6.0 ± 0.1 Vdc.
2. Adjust the current consumption to 72 ± 5 mA with RV951.

VF-69 board Component side

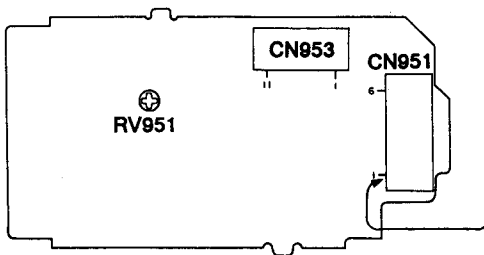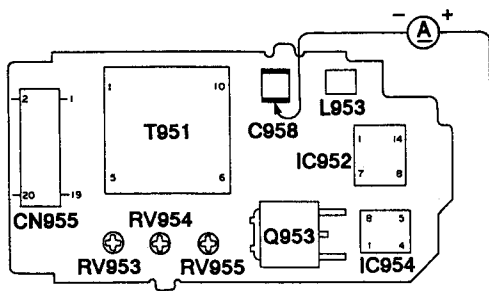

VF-69 board Conductor side

Fig. 8-19.

2. Power supply voltage check (VF-68 Board)

Mode	Stop
Measuring Instrument	Digital voltmeter
+12V check	
Measurement Point	Pin ⑥ of CN801 (12V)
Specified Value	$+11.6 \pm 0.2$ Vdc
+13.5V check	
Measurement Point	Pin ④ of CN801 (13.5V)
Specified Value	$+13.5 \pm 0.3$ Vdc

Checking Method:

1. Check that the UNREG power supply voltage (Pin ① of VF-69 board CN951) of CN951 is 6.0 ± 0.1 Vdc.
2. Check that each power supply voltage satisfies the specified value.

3. VCO adjustment (VF-68 Board)

Mode	Stop
Signal	Color bar
Measurement Point	Pin ⑩ of CN801 (PCO)
Measuring Instrument	Oscilloscope (DC range)
Adjustment Element	RV804
Specified Value	$A=2.8 \pm 0.1V$

Adjusting method:

1. Check the GND level of the oscilloscope.
2. Adjust the PCO voltage (A) to the specified value with RV804.


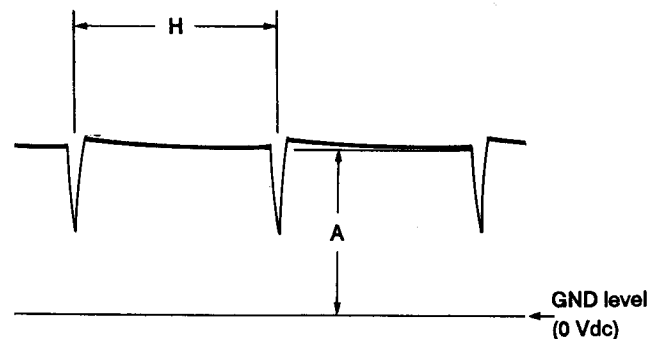


Fig. 8-20.

VF-68 BOARD (COMPONENT SIDE)

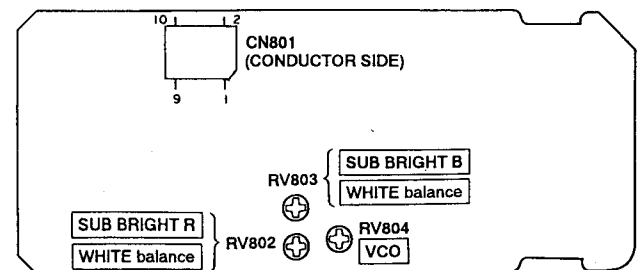


4. LC COM voltage check (VF-68 Board)

Mode	Stop
Signal	Color bar signal whose chroma signal and burst signal are turned off
Measurement Point	+ : Pin ③ of CN801 (G OUT) - : Pin ① of CN801 (LC COM)
Measuring Instrument	Digital voltmeter
Specified Value	$A = +0.35 \pm 0.1$ Vdc

Connection:


- 1) Connect the digital voltmeter as shown in the following figure.

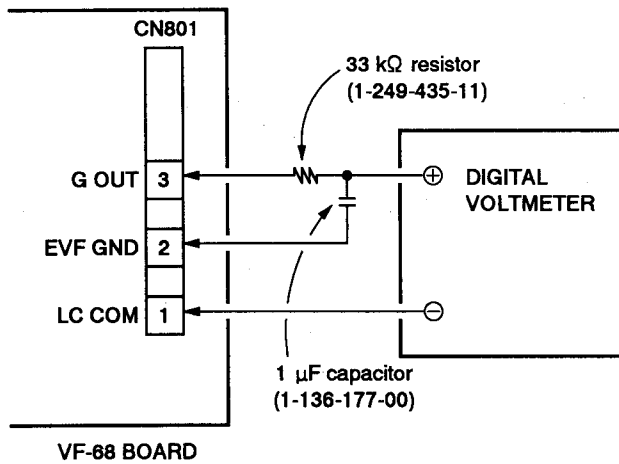

Checking method:

1. Check that the voltage difference (A) satisfies the specified value.

VF-68 BOARD (CONDUCTOR SIDE)

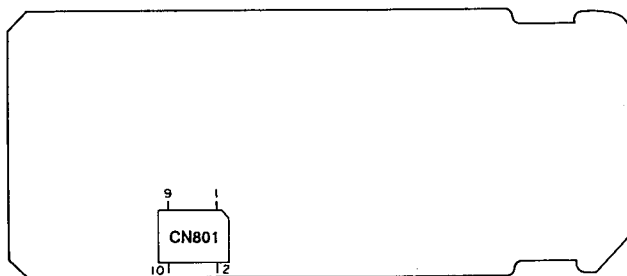

5. BRIGHT adjustment (VF-69 Board)

Mode	Stop
Signal	No signal
Measurement Point	Pin ③ of CN801 of VF-68 board (G OUT)
Measuring Instrument	Oscilloscope
Adjustment Element	RV953
Specified Value	$A = 7.2 \pm 0.1$ V

Adjusting method:

1. Adjust the potential difference (A) between the reversed waveform pedestal and the non reversed waveform pedestal to the specified value with RV953.


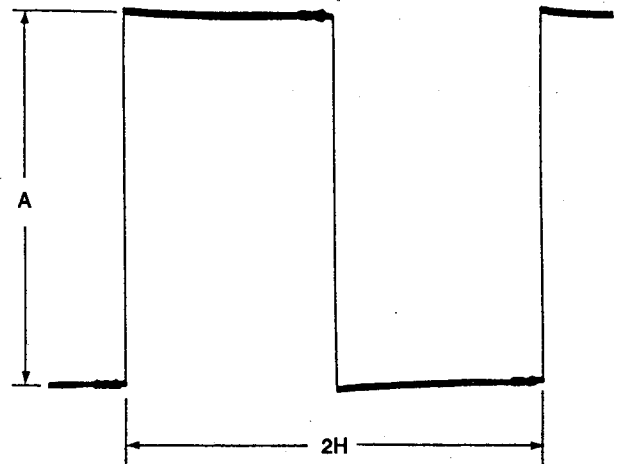


Fig. 8-21.

VF-69 BOARD (COMPONENT SIDE)

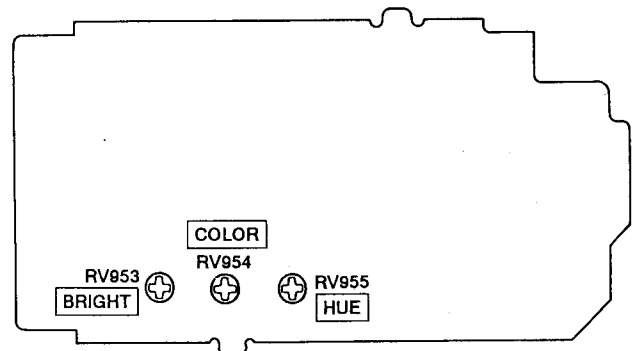

6. CONTRAST check (VF-68 Board)

Mode	Stop
Signal	Color bar signal whose chroma signal and burst signal are turned off
Measurement Point	Pin ③ of CN801 (G OUT)
Measuring Instrument	Oscilloscope
Specified Value	$A=2.1 \pm 0.1V$

Checking method:

1. Check that the white 100% level (A) is the specified value.

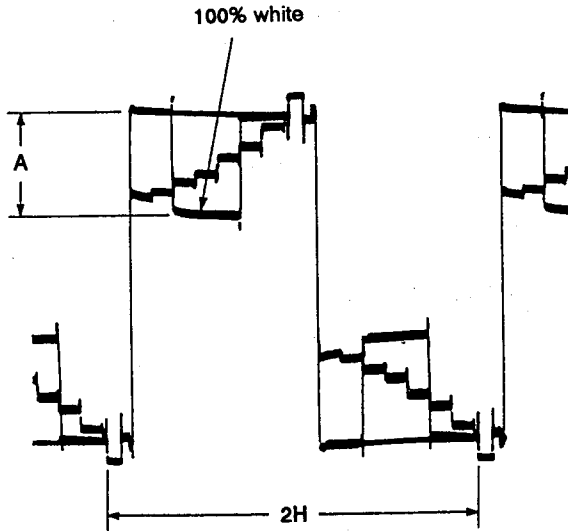


Fig. 8-22.

7. SUB BRIGHT R preset adjustment (VF-68 Board)

Mode	Record
Signal	No signal
Measurement Point	Pin ⑦ of CN801 (R OUT)
Measuring Instrument	Oscilloscope
Adjustment Element	RV802
Specified Value	$A=7.2 \pm 0.1V$

Adjusting method:

1. Adjust the potential difference (A) between the reversed waveform pedestal and the non reversed waveform pedestal to the specified value with RV802.



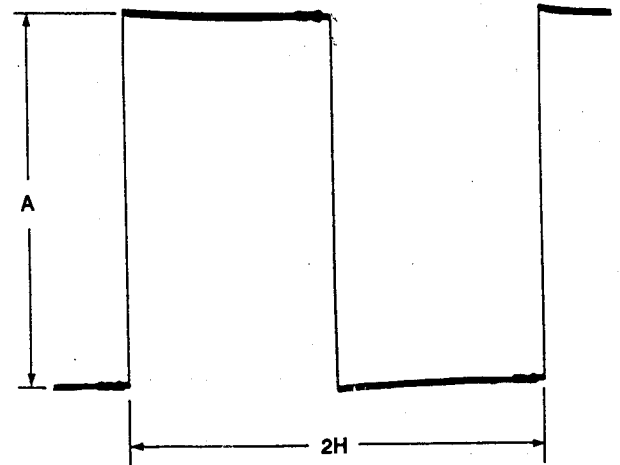


Fig. 8-23.

VF-68 BOARD (CONDUCTOR SIDE)

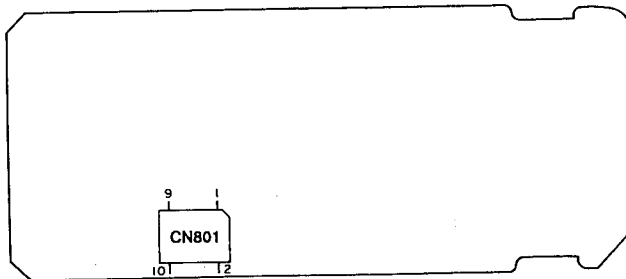

VF-68 BOARD (COMPONENT SIDE)

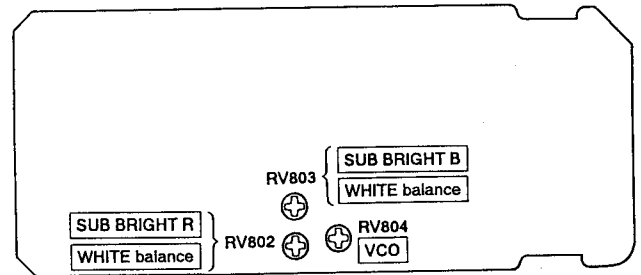

8. SUB BRIGHT B preset adjustment (VF-68 Board)

Mode	Record
Signal	No signal
Measurement Point	Pin ⑧ of CN801 (B OUT)
Measuring Instrument	Oscilloscope
Adjustment Element	RV803
Specified Value	$A=7.2 \pm 0.1V$

Adjusting method:

1. Adjust the potential difference (A) between the reversed waveform pedestal and the non reversed waveform pedestal to the specified value with RV803.

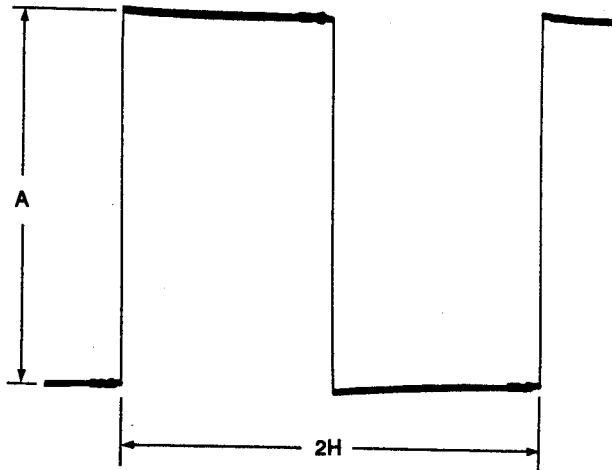


Fig. 8-24.

9. White balance adjustment (VF-68 Board)


Mode	Record
Signal	Color bar signal whose chroma signal and burst signal are turned off
Measurement Point	Check on LCD display
Measuring Instrument	
Adjustment Element	R: RV802 B: RV803
Specified Value	Picture should not be colored

Note: Turn on the power supply and adjust after more than one minute.


Adjusting method:

1. Check that the LCD display is not colored. If it is, adjust RV802 and RV803.

VF-68 BOARD (COMPONENT SIDE)

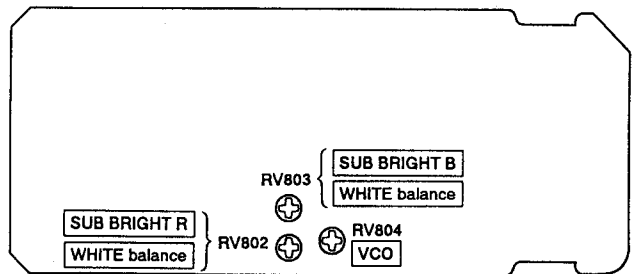


VF-68 BOARD (CONDUCTOR SIDE)

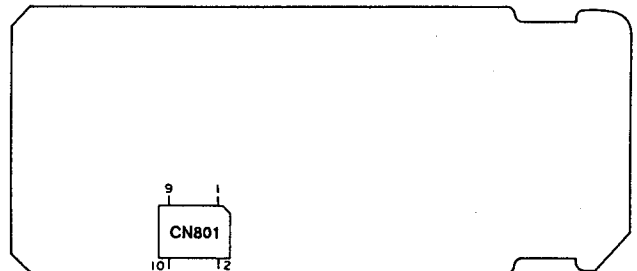


8-4. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS


DD-55 BOARD (COMPONENT SIDE)

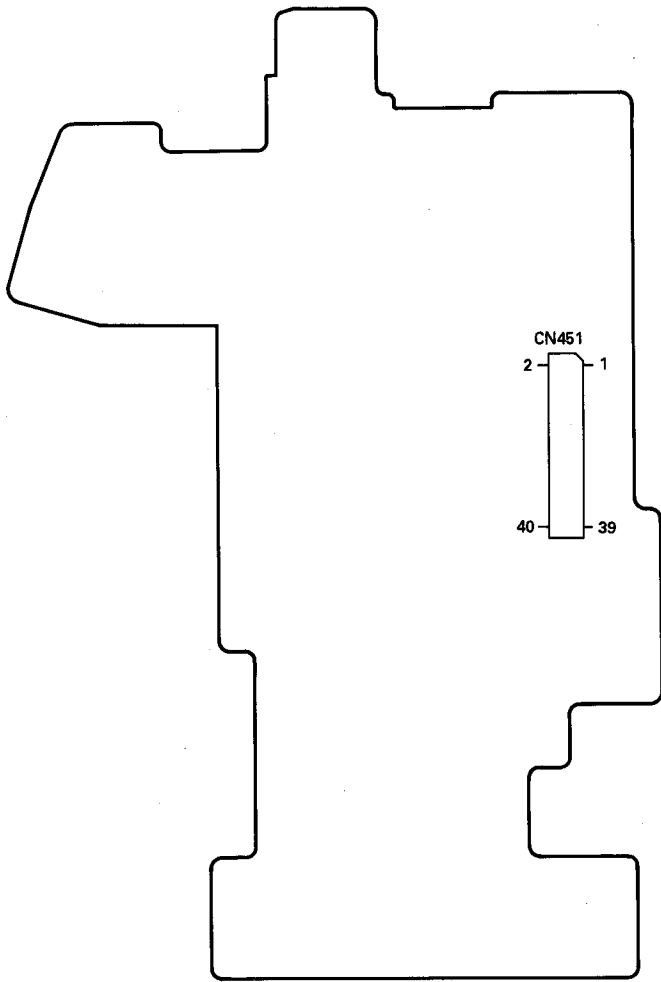

VC-132 BOARD (COMPONENT SIDE)

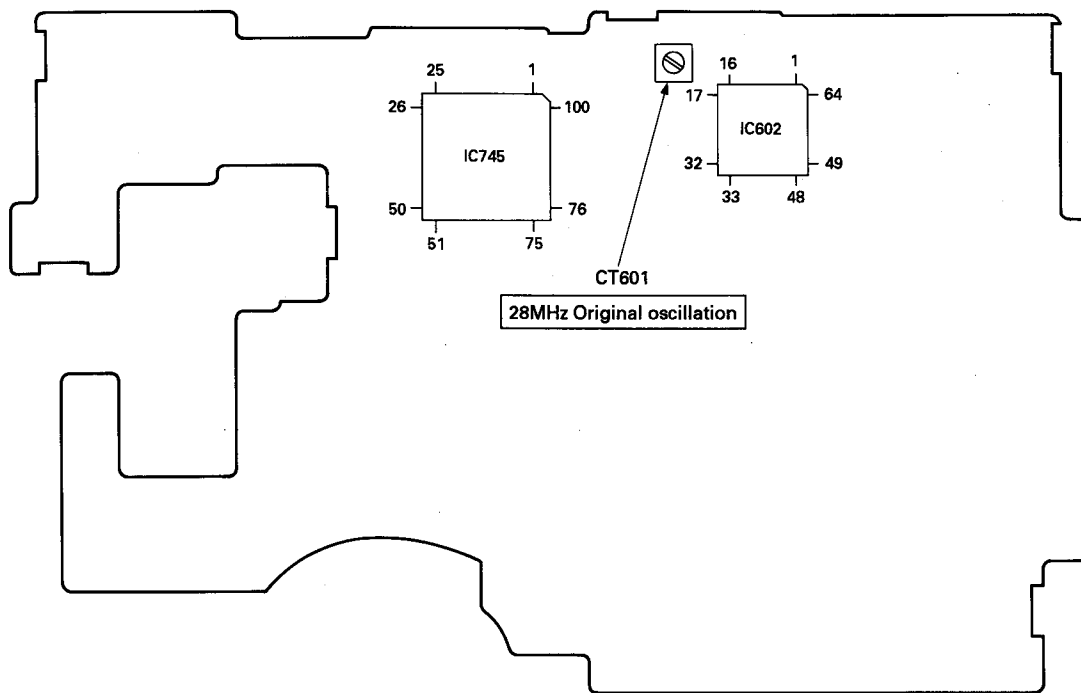

VC-132 BOARD (CONDUCTOR SIDE)

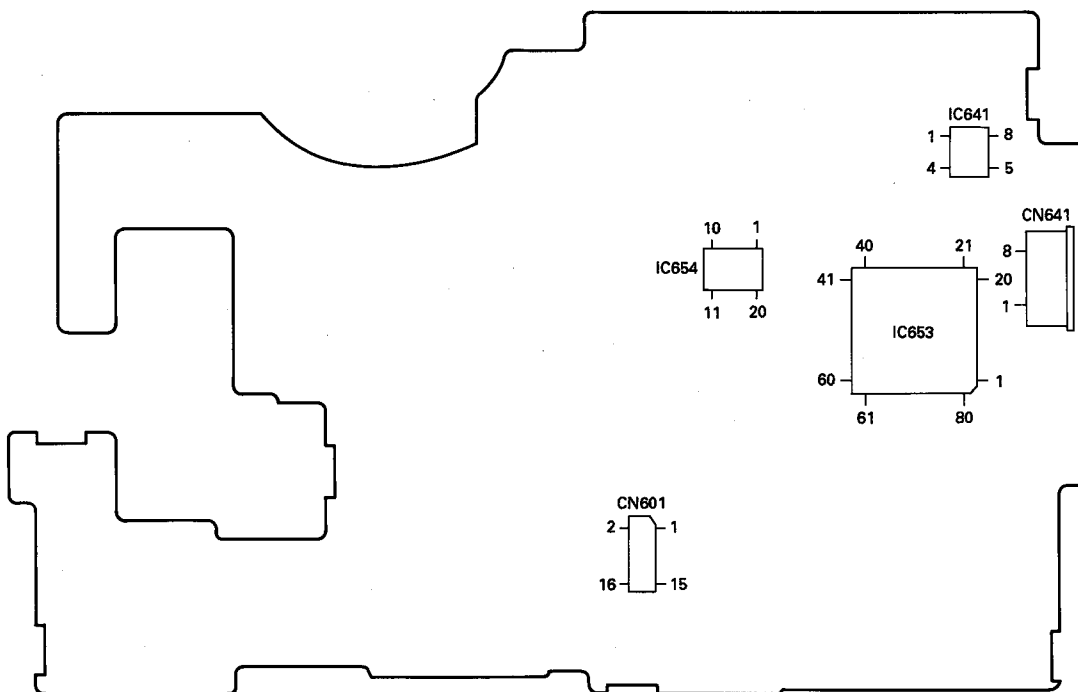

SECTION 9 MECHANICAL SECTION ADJUSTMENTS

For Mechanical Adjustments

Refer to the separate volume of mechanical adjustment "8 mm Video MECHANICAL ADJUSTMENT MANUAL IV (A Mechanism)" for the adjustments and checks of mechanism section and the mechanical parts replacement. (9-973-199-11)


For setting of the track shift mode, however, refer to the following.

9-1. SETTING THE TRACK SHIFT MODE

Note: Camera part and video part should have been installed.

[Setting Method]

- 1) Set the adjustment commander to the HOLD ON side.
- 2) Set page: 1, address: 01 and data: 01, and then release the protector.
- 3) Set page: D and address: 01.
- 4) Set adjustment data to 03 (test mode 3) by PLAY or STOP button.
 (When HOLD OFF once after the setting and HOLD ON again, the display of the address data will be changed. To set the another mode with shifting, repeat the procedures from 3).
- 5) Set to the HOLD OFF side in order to set the normal mode.

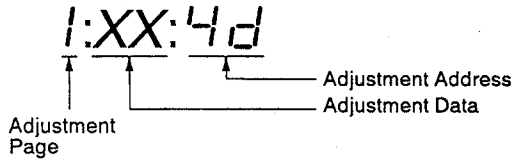

9-2. PREPARATION FOR ADJUSTMENT

- 1) Clean the tape running surfaces (tape guides, drum, capstan shaft, pinch roller.)
- 2) Connect to the oscilloscope.
 CH1: VS-99 board CN002 pin ③ (PB RF)
 CH2: VS-99 board CN002 pin ④ (RF SWP)
- 3) Play back the tracking alignment tape (WR5-1NP: 8-967-995-02).
- 4) Check that the RF waveform of the oscilloscope is flat at both inlet and outlet side. (Refer to Fig. 9-1 and 9-2)
 If not flat, perform necessary adjustment according to the separate 8 mm Video Mechanical Adjustment IV (A Mechanism).

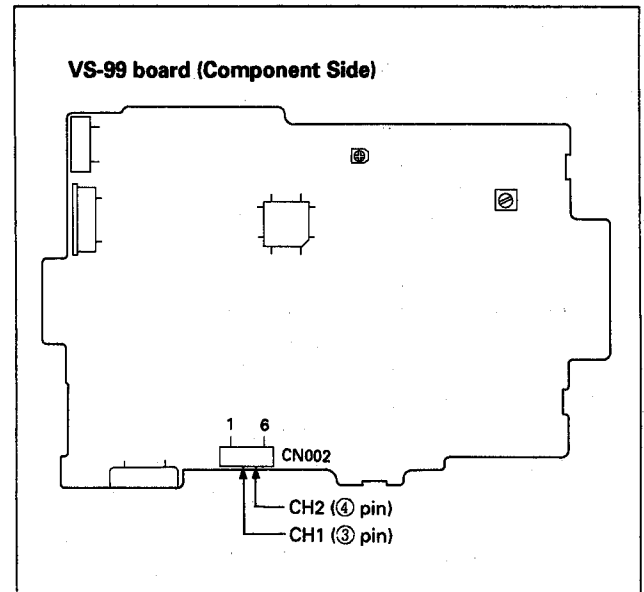


Fig. 9-1.

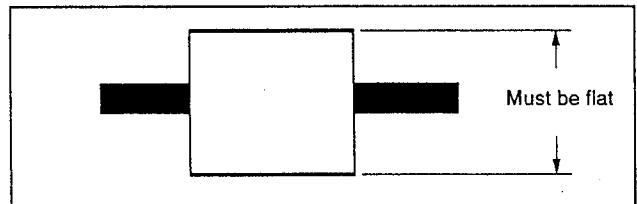


Fig. 9-2.

SECTION 10 VIDEO SECTION ADJUSTMENTS

When performing adjustments, refer to the layout diagrams for adjustment related parts beginning from page 290.

10-1. PREPARATIONS BEFORE ADJUSTMENT

The following measuring equipments are used for adjusting the video section.

10-1-1. Equipments Used

- 1) TV monitor
- 2) Oscilloscope 2 phenomena, band 30 MHz or wider, with delay mode. (Use a 10:1 probe unless specified otherwise.)
- 3) Frequency counter
- 4) Pattern generator with video output terminal
- 5) Digital voltmeter
- 6) Audio generator
- 7) Audio level meter
- 8) Audio distortion meter
- 9) Audio attenuator
- 10) Regulated power supply
- 11) Alignment tape

For tracking adjustment (WR5-1NP)

Part Code: 8-967-995-02

For video frequency characteristics adjustment (WR5-6N)

Part Code: 8-967-995-12

For checking operations

(WR5-4NL)^{Note 1}

Part Code: 8-967-995-51

(WR5-5NSP)^{Note 2}

Part Code: 8-967-995-42

Note: The following alignment tapes can also be used.

1) WR5-3NL (8-967-995-31)

2) WR5-4NSP (8-967-995-41)

For checking AFM stereo operations (WR5-9NS)

Part Code: 8-967-995-23

12) Remote control unit for adjustment (J-6082-053-B)

13) DD-55 board extension cord (40P, 0.8 mm)

Part Code: J-6082-168-A

14) AU-149 board, extension cord (38P, 0.8 mm)

Part Code: J-6082-274-A

10-1-2. Precautions upon Adjustment

The EVF (electronic view-finder) section is not required for adjusting the video section.

Remove the following connector when removing the EVF section

1. CN502 of VS-99 board (Pin 6)

The MA-169 board is not required for adjusting the video section.

Remove the following connector when removing the MA-169 board.

1. CN801 of AU-149 board (Pin 13)

The audio board (AU-149 board) is not required other than in the "REC AFM Level Check" of "Audio System Adjustments" and "Video System Adjustments". Remove the following connectors.

1. CN505 of VS-99 board (Pin 38)

The lens block (including CD-105 board, MF-213 board and YP-12 board) is not required other than in "Power supply System Adjustments". Remove the following connectors and three mounting screws, and remove it from the VC-132 board.

1. CN601 of VC-132 board (Pin 16)
2. CN711 of VC-132 board (Pin 21)
3. CN740 of VC-132 board (Pin 12)
4. CN743 of VC-132 board (Pin 6)

10-1-3. How to Set the REC in the Model without REC Switch

1. REC key forbidden accept mode cancel
 1. Connect the adjusting remote commander to the REMOTE terminal.
 2. Turn on the power.
 3. Turn on the HOLD switch of the adjusting remote commander.
 4. Select the page: 1 address: 00, and set the data to 01.
(Protect mode cancel)
 5. Select the page: D address: 02, and set the data to 4B[6B].
(REC key forbidden accept mode cancel)
 6. Press PAUSE button on the adjusting remote commander.
(Write to the non-volatile memory)

2. Signal input mode setting
 1. Select the page: 2 address: 00, and set the data to 01.
(Specification category 1)
 2. Set data: 01 to page 2, address: 3A. (Input mode set*)

Note: Setting of output mode.
Set data: 02 to page 2, address: 3A (category: 1)

The REC key is accepted through the above procedure. The adjusting remote commander may be removed, hereafter.
Note: After completing adjustment be sure to perform "4. Procedure after completed adjustment".

3. REC mode setting
 1. Set the HOLD switch of the adjusting remote commander to the OFF (Normal) position.
 2. Press the REC buttons set up REC mode.

4. Procedure after completed the adjustment
Be sure to return the mode to REC key forbidden accept mode after adjustment.
 1. Connect the adjusting remote commander to the REMOTE terminal.
 2. Turn on the power.
 3. Turn on the HOLD switch of the adjusting remote commander.
 4. Select the page: 1 address: 00, and set the data to 01.
(Protect mode cancel)
 5. Select the page: D address: 02, and set the data to 4A[6A].
(Setting of the REC key forbidden accept mode)
 6. Press PAUSE button on the adjusting remote commander.
(Write to the non-volatile memory)

Note: No mark: US, Canadian model
[]: E model

10-1-4. Connector for Adjustments (CN002 of VS-99 Board)

Some video section adjustment points are concentrated at CN002 of the VS-99 board.

Pin No.	Signal Name
1	PB CH1
2	PCM OUT
3	PB RF
4	RF SWP
5	RF GND
6	REC 2CH

Table 10-1.

10-1-5. Connection of Equipments

Unless specified otherwise, connect the measuring instruments as shown in Fig. 10-1. and perform the adjustments.

- Camera/player power switch (S900 of power switch unit)
..... Position of the player
- Connect the adjusting remote commander to the remote terminal (DD-55 board J452).

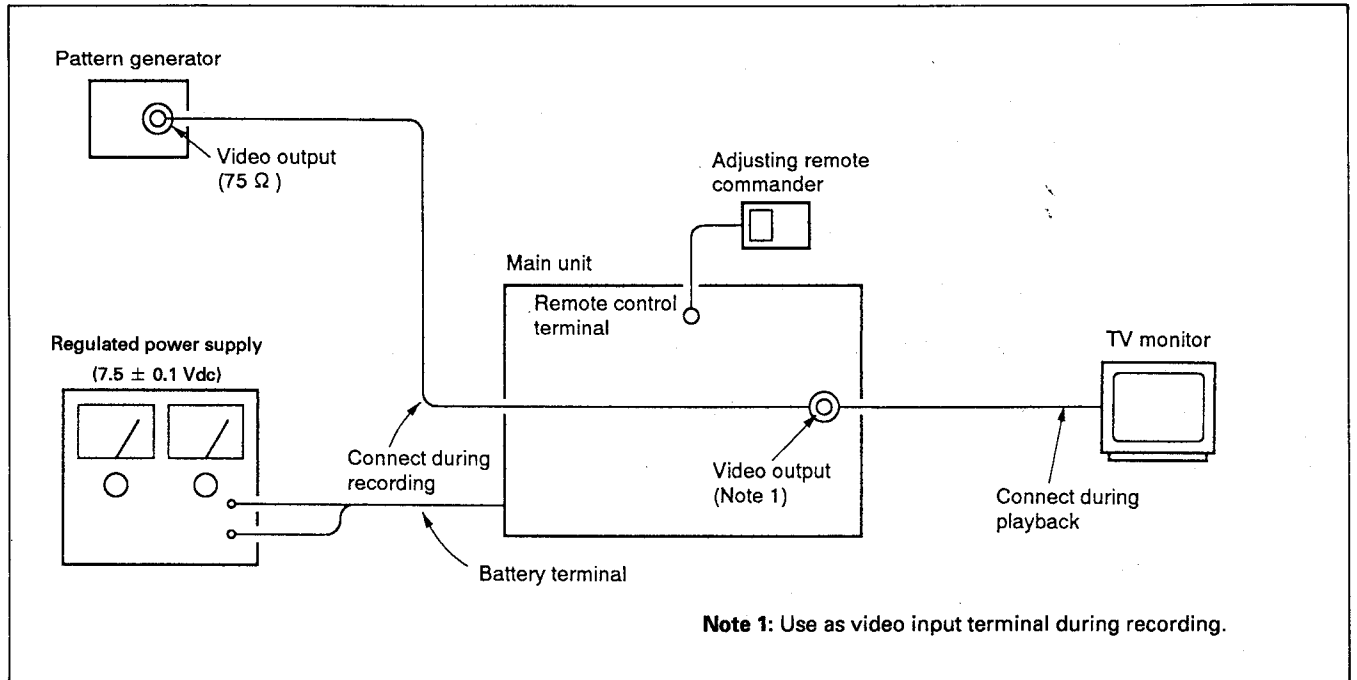


Fig. 10-1.

10-1-6. Checking the Input Signals

Because the video signal obtained from the pattern generator is used as the adjustment signal for adjusting the VTR section, the video output signal must satisfy the given specifications.

1. VIDEO input

Connect the oscilloscope to the video output terminal, and check that the sync signal amplitude of the video signal is approximately 0.3V, the amplitude of the video section is approximately 0.7V, the amplitude of the burst signal is approximately 0.3V and flat, and that the level ratio of the burst signal to the "red" signal is 0.3:0.66.

The video signal (color bar) used for adjusting the VTR section is shown in Fig. 10-2.

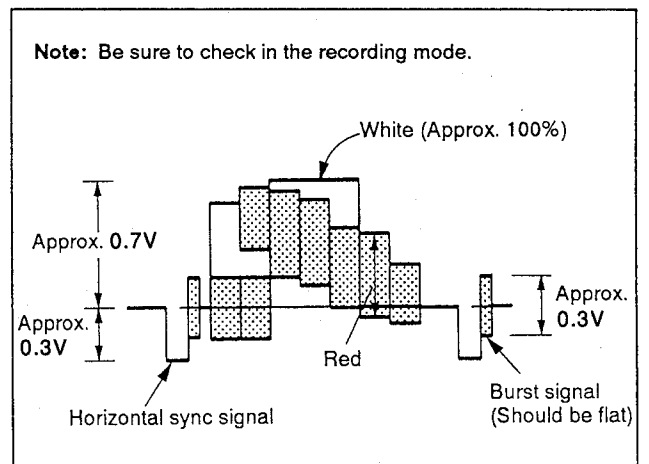


Fig. 10-2. Color Bar Signal of Pattern Generator

10-1-7. Alignment Tape

The following table lists available alignment tapes. Use the tape specified in the signal column for each adjustment.

If the tape type is not specified for adjustments using tapes to check operations, use any tape for checking operations.

Name	Recording mode	Tape type	Tape speed	Recording Contents		Usage
				Video area	PCM area	
Tracking WR5-1NP	L	MP	SP	CH2: Signal for adjusting 1 MHz tape path		Switching position adjustment
Video frequency characteristics WR5-6N	L	MP	SP	Rf sweep 0 to 10 MHz Marker 1, 3.58, 5.5, 7 MHz		Frequency characteristics adjustment
Checking operations (SP mode) WR5-5NSP	L	MP	SP	<ul style="list-style-type: none"> Video signal Color bar 4 mins. Monoscope 4 mins. Audio signal (AFM) 400 Hz 60% modulation 	<ul style="list-style-type: none"> Audio signal (PCM) Monoscope section 20 Hz 20sec. 400 Hz 20sec. 14kHz 20sec. Color bar section 1 kHz 4 mins. 	Checking operations
Checking operations (LP mode) WR5-4NL	L	MP	LP	<ul style="list-style-type: none"> Video signal Color bar 4 mins. Monoscope 4 mins. Audio signal (AFM) 400 Hz 60% modulation 		
AFM stereo checking operations WR5-9NS	L	MP	SP	<ul style="list-style-type: none"> Video signal Color bar 4 mins. Monoscope 4 mins. Audio signal (AFM) stereo section (color bar) Lch: 400 Hz, Rch: 1kHz (L+R: 1.5 MHz ± 60kHz DEV) (L-R: 1.7 MHz ± 30kHz DEV) Bilingual section (Monoscope) MAIN: 400Hz (1.5 MHz ± 60kHz DEV) SUB: 1 kHz (1.7 MHz ± 30kHz DEV) 	<ul style="list-style-type: none"> Audio signal (PCM) 400Hz 8 mins. 	AFM stereo Checking operations

Note: Recording mode

L Normal (conversional) mode
E Hi8 (Hi-band) mode

Tape type

MP Metal particle tape
ME Metal evaporated tape

Table 10-2.

Fig.10-3. shows the 75% color bar signals recorded on the alignment tape.

Note: Measure using the video output terminal
(Terminated at 75 Ω)

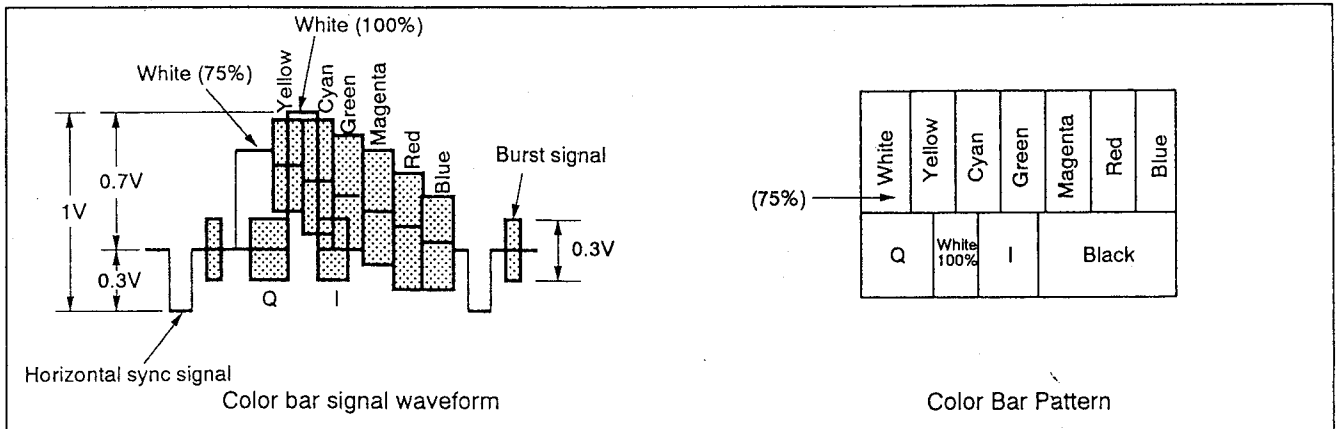


Fig. 10-3. Color Bar Signals of the Alignment Tape

10-1-8. Output Level and Impedance

Video output Pin jack

Output signal: 1 Vp-p, 75 unbalanced, sync negative

Audio output Pin jack

Specified output: -7.5 dBs


Output impedance: Below 2.2 k Ω

10-1-9. Service Mode


1. Setting the service mode

The service mode consists of the adjustment mode which adjusts the EVR and the test mode which shows the condition of the unit.

The unit can be set into the test mode and adjustment mode by connecting the adjusting remote commander (Set the HOLD switch to "HOLD").

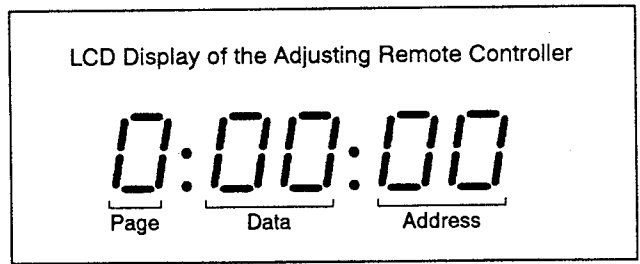


(1) Service LANC memory map

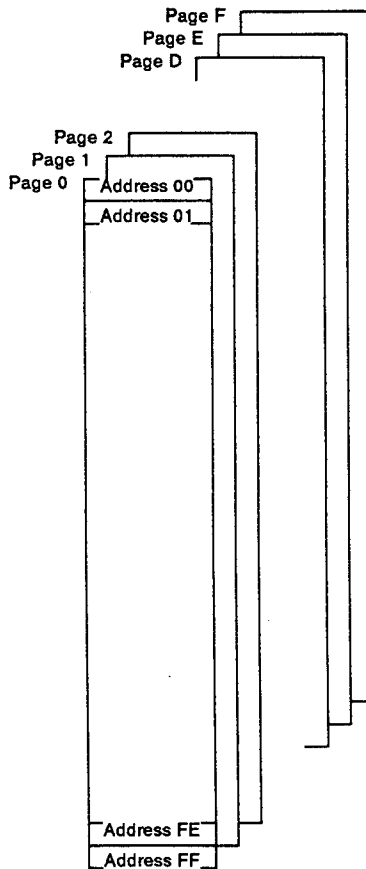

Page	Page Layout
0	
1	D page write protect setting/release
2	Mode controller RAM, I/O (Note 1)
3	Mechanism controller RAM, I/O (Note 1)
4	
5	
6	Shared by camera section (Note 1)
7	Camera controller RAM, I/O (Note 1)
8	AF controller RAM, I/O (Note 1)
9	
A	2 bytes data display
B	
C	VTR EEPROM (Note 2)
D	VTR EEPROM (Note 2)
E	Camera EEPROM (Note 3)
F	Camera EEPROM (Note 3)

Adjusting remote commander RM-95 (J-6082-053-B)

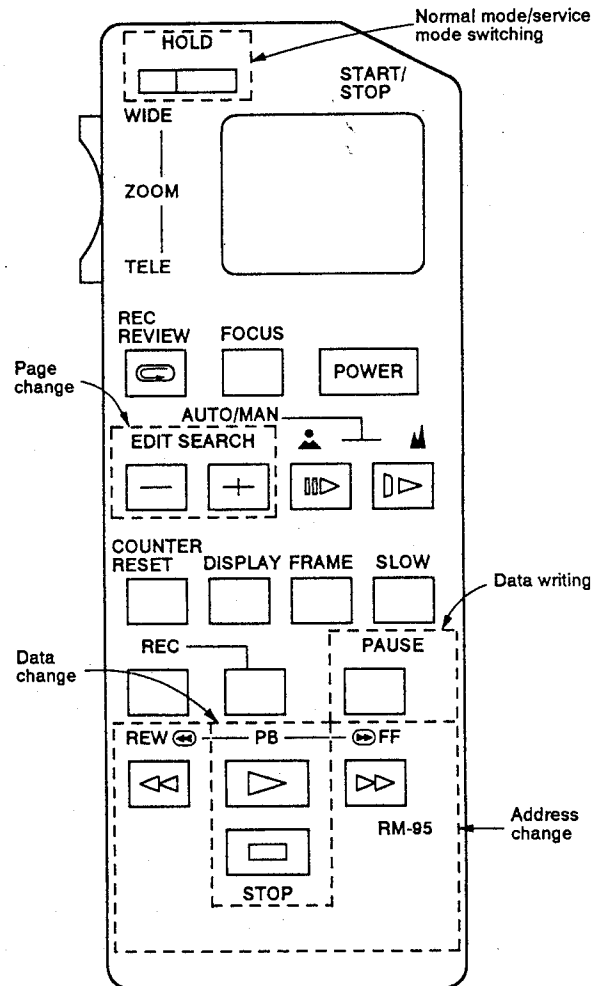

Note 1: If the data of this page is rewritten using the adjusting remote commander to set the adjustment mode or test mode, the data will not be written in the EEPROM (nonvolatile memory). Therefore, the original condition (normal condition) can be returned by removing the main power supply (7.5V) and lithium battery.


Note 2: The data of this page is written in the EEPROM (IC901 of VC-132 board).

Note 3: The data of this page is written in the EEPROM (IC601 of VC-132 board).


(2) Category codes

This unit uses category codes for pages 2 and 3. The 256 addresses from 00 to FF are insufficient for the mode controller and mechanism controller to access the RAM. Therefore, new category codes have been used to seemingly increase addresses (Addresses 0000 to FFFF).

However, the data of address 00 are actually used as page numbers to form the 256 pages from 00 to FF, as shown in the following figure. This address 00 data are called category codes to discriminate them from the real page numbers. The new pages are called categories.

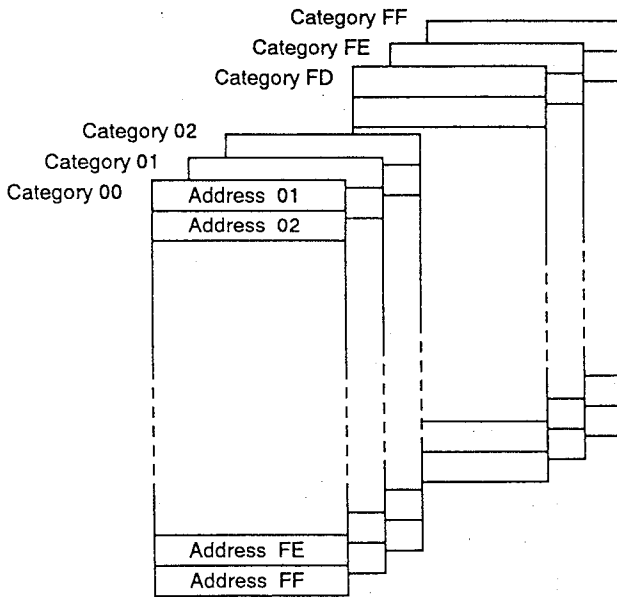

(Supplement) As each category no longer has address 00 as it is, this address cannot be accessed using the adjusting remote commander. Therefore, category 3F is used for accessing address 00.

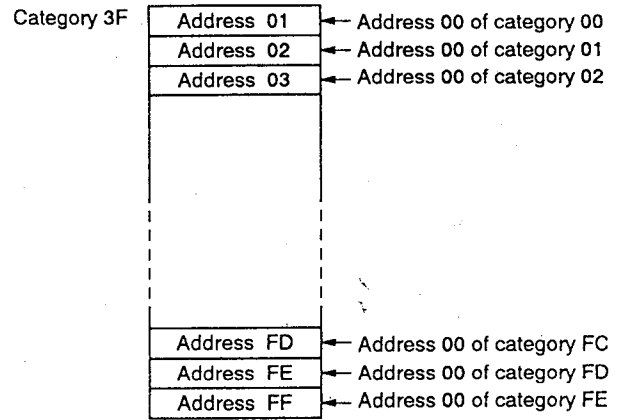

(Example)


Specification of	Page 2	Category 01	Address 15
------------------	--------	-------------	------------

↑
 Page 2 is the mode controller
 Page 3 is the mechanism controller

The actual category and address are specified by the adjusting remote commander as follows.

Order	Page	Address	Data	Procedure
1	2	00	01	Select category 01 using the data of page 2, address 00. From here onwards, category 01 will be selected at page 2 until the data of page 2, address 01 is rewritten.
2	2	15		As the data of page 2, address 00 is 01, select page 2, address 15 to select page 2, category 01, address 15. (The data of this address is the battery voltage A/D conversion value of the mode controller input.)

[Shifting to the service mode using the adjusting remote commander]

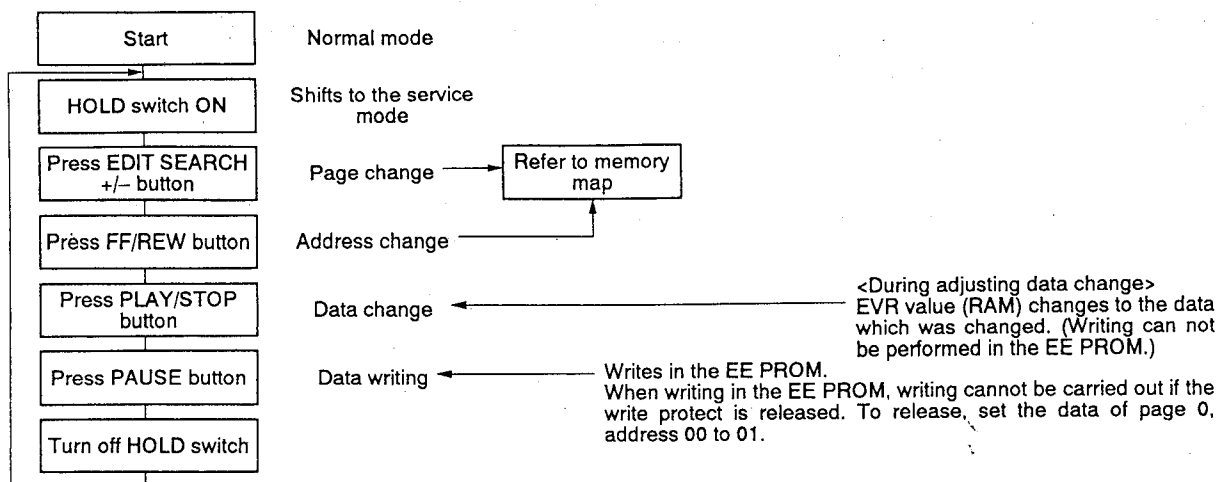

Command Name	Command Function	Normal LANC Command
Page Up	Page+1	Edit Search+
Page Down	Page-1	Edit Search -
Direct Page Set	Sets to the specified page	Event Clear
Address Up	Address+1	Fast Forward
Address Down	Address-1	Rewind
Data Up	Data+1	Play Back
Data Down	Data-1	Stop
Store	Writes data in the EEPROM, RAM	Pause

2. Page D write protect

Release/set the page D write protect.

Page 1	Address 00
--------	------------

Data	Function
00	Normal (Write protect condition)
01	Release the write protect

3. Test mode setting

Set/release each test mode. Release the protect (Page: 1, Address: 00, Data: 01) before setting the data.

Page D	Address 01
--------	------------

Data	Function
00	Normal
01	Test mode 1 Various emergency prohibitions and releases Drum, capstan, loading motor, reel, tape top and end, DEW SP/LP automatic discrimination prohibition, manual switching, 5 minutes pause release prohibition Power off prohibition/release by battery end
02	Test mode 2 Not used
03	Test mode 3 Track shift Performs the track shift playback Rear lock distinction prohibition during PB SP/LP automatic discrimination prohibition, manual switching
04	Test mode 4 Rear lock mode Performs rear lock playback SP/LP automatic discrimination prohibition, manual switching

- ※ For page D, the data set will be recorded in the nonvolatile memory by pressing the PAUSE button on the adjusting remote commander. Take note that, in this case, the test mode will not be released even if the main power has been turned off (7.5 Vdc).
- ※ Be sure to return this address data to 00 after completing adjustments/repairs and press the PAUSE button of the adjusting remote commander.

4. Emergency code

Fault (error) symptoms can be checked.

Page D	Address 06
--------	------------

First emergency code

.....First error code generated

Page D	Address 07
--------	------------

Last emergency code

.....Last error code generated (This data will be renewed each time an error occurs.)

- ※ Be sure to rewrite the data of addresses 06 and 07 to 00 after repairs/adjustments.
- ※ When rewriting the data, be sure to press the PAUSE button of the remote commander after setting the data.

Code	Error Condition
00	No error
01	Loading motor error
02	Reel error during unloading
03	Reel errors at other times
04	Capstan error
05	FG error during drum start up
06	PG error during drum start up
07	FG error during normal drum conditions
08	PG error during normal drum conditions
09	Phase error during normal drum conditions

5. Emergency mode

The operation mode can be checked during faults.

Page D	Address 08
--------	------------

First emergency mode

.....The operation mode when the first error is generated

Page D	Address 09
--------	------------

Last emergency mode

.....The operation mode when the last error is generated
(This data will be renewed each time an error occurs.)

※ Be sure to rewrite the data of addresses 08 and 09 to 00 after repairs/adjustments.


※ When rewriting the data, be sure to press the PAUSE button of the adjusting remote commander after setting the data.

Code	Error Conditions
00	BEFOR INITIALIZE
01	EJECTED
02	NORMAL STOP
03	FF
04	NORMAL REC
06	NORMAL PB
07	PB PAUSE
12	LOADING
14	REC PAUSE
26	X1
27	1/5 SLOW
31	UNLOADING
46	CUE
56	REVIEW
62	STOP TAPE END
66	X2
67	FRAME
72	STOP TAPE TOP
83	REWIND
85	REC REVIEW (+)
95	REC REVIEW (-)
97	-PB PAUSE
A2	EMERGENCY LOADING
A5	EDIT SEARCH (+)
B1	EMERGENCY UNLOADING
B2	STOP EMERGENCY 1
B5	EDIT SEARCH (-)
C2	STOP EMERGENCY 2
E2	STOP NO CASSETTE
F5	EDIT PAUSE

6. Bit value discrimination

Bit values must be discriminated using the display data of the adjusting remote commander for the following items. Use the table below to discriminate if the bit value is "1" or "0".

Adjusting remote commander display

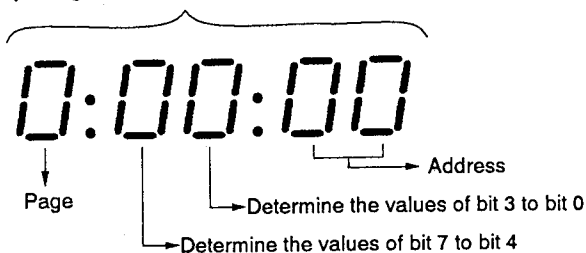

Remote commander display	Bit value			
	bit 3 or bit 7	bit 2 or bit 6	bit 1 or bit 5	bit 0 or bit 4
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
Ⓐ → 8	1	0	0	0
9	1	0	0	1
A (R)	1	0	1	0
B (b)	1	0	1	1
C (c)	1	1	0	0
D (d)	1	1	0	1
Ⓑ → E (E)	1	1	1	0
F (F)	1	1	1	1

(Example) If the remote commander display data is "8E", bit values from bit7 to bit4 can be discriminated from column Ⓐ, and those from bit3 to bit0 from column Ⓑ.

7. Mode controller Input check

Page 2	Category 00	Address 02
--------	-------------	------------

Bit	Input Signal	Input Signal Level
0	BATT IN (IC902 15)	"1"=H, "0"=L
1	PB V (IC902 16)	"1"=PB V input present, "0"=No PB V input
2		
3	LANC PWR ON (IC902 18)	"1"=H, "0"=L
4	LI PREEND (IC902 19)	"1"=H, "0"=L
5	EEPROM WE (IC902 20)	"1"=H, "0"=L
6		
7	WIND ON (IC902 22)	"1"=H, "0"=L

Using method:

Order	Page	Address	Data	Procedure
1	2	00	00	Specification of category 00
2	2	02		The H/L of each input signal can be discriminated by differentiating the bit values of the display data.

Page 2	Category 00	Address 1C
--------	-------------	------------

Bit	Input Signal	Input Signal Level
0	BATT SENCE (IC902 91)	"1"=L, "0"=H
1		
2	BRIGHT A (IC902 93)	"1"=H
3	BRIGHT B (IC902 94)	"0"=L
4		
5		
6		
7		

Using method:

Order	Page	Address	Data	Procedure
1	2	00	00	Specification of category 00
2	2	1C		The H/L of each input signal can be discriminated by differentiating the bit values of the display data.

8. White balance mode switching

Page 2	Category 00	Address 21
--------	-------------	------------

Data	White balance mode
01	Indoor
02	Outdoor
03	Hold
06	Auto

Using method:

Order	Page	Address	Data	Procedure
1	2	00	00	Specification of category 00
2	2	AE	40	Prohibition of camera function renewal
3	2	00	01	Specification of category 1
4	2	21		Specify the white balance mode by setting data 01 to 03 and 06.

9. Zoom position check

Page 2	Category 00	Address 2B, 2C
--------	-------------	----------------

Address	Data
2B	Zoom position data (lower)
2C	Zoom position data (upper)

Using method:

Order	Page	Address	Data	Procedure
1	2	00	00	Specification of category 00
2	2	2B		Data (00 to FF) indicates lower data of zoom position
3	2	2C		Data (00 to 02) indicates upper data of zoom position. WIDE end: 00 TELE end: 02

10. LCD, LED check

Page 2	Category 00	Address AE
--------	-------------	------------

Data	
00	Normal
10	All segments of LCD light up Tally LED lights up

Using method:

Order	Page	Address	Data	Procedure
1	2	00	00	Specification of category 00
2	2	AE	10	All segments of LCD and tally LED light up.

11. Key Input check

Page 2	Category 3F	Address 01
--------	-------------	------------

Bit	Key Switch	Condition of Switch
0	Date (+) (CF block S924)	"1"=OFF "0"=ON
1	Time (CF block S925)	
2	Cassette eject (DD-55 S451)	
3	Video power supply (Power switch unit S900)	
4	Auto lock (CF block S927)	
5	Start/Stop (SW-222 S904)	
6	CC DOWN (Mechanism section)	
7	Camera power supply (Power switch unit S900)	

Using method:

Order	Page	Address	Data	Procedure
1	2	00	3F	Specification of category 3F
2	2	01		The on/off of each key switch can be discriminated by differentiating the bit values of the display data.

12. Key Input check (A/D Port)

Page 2	Category 01	Address 16 to 1A
--------	-------------	------------------

Display Data Address	00 to 10	11 to 4C	4D to 7E	7F to B1	B2 to E7	E8 to FF
16 (AD0: IC902 ㉔)	STOP (CF block S901)	Foward (CF block S902)		Edit search (+) (CF block S904)	Edit search (-) (CF block S905)	No key input
17 (AD1: IC902 ㉕)	Pause (CF block S906)	Rewind (CF block S907)	Playback (CF block S908)	Menu (CF block S909)		No Key input
18 (AD2: IC902 ㉖)	Slow (CF block S910)	Set (CF block S911)	Item (CF block S912)			No key input
19 (AD3: IC902 ㉗)	Program AE (CF block S913)		Focus (CF block S915)		Fader (CF block S917)	No key input
1A (AD4: IC902 ㉘)	Reset (CF block S918)				Steady shot (CF block S922)	No key input

Using method:

Order	Page	Address	Data	Procedure
1	2	00	01	Specification of category 00
2	2	16 to 1A		The key pressed can be discriminated by the display data of each address.

13. Wireless remote commander reception contents check

Page 2	Category 01	Address 11
--------	-------------	------------

Display Data	Pressed Key of Wireless Remote Commander
FF	Non
9A	TELE
9B	WIDE
99	Start/Stop
1B	REW
1C	FWD
18	Stop
1A	Playback
19	Pause
5A	Data screen
23	Slow

Using method:

Order	Page	Address	Data	Procedure
1	2	00	01	Specification of category 01
2	2	11		The pressed key of the wireless remote commander can be discriminated by the display data.

14. Battery voltage check

Page 2	Category 01	Address 15
--------	-------------	------------

Display Data	Battery Voltage
FF	Approx. 10 Vdc
F0	Approx. 9.4 Vdc
E0	Approx. 8.8 Vdc
D0	Approx. 8.2 Vdc
C0	Approx. 7.5 Vdc
B0	Approx. 6.9 Vdc
A0	Approx. 6.3 Vdc
90	Approx. 5.6 Vdc
80	Approx. 5.0 Vdc

Using method:

Order	Page	Address	Data	Procedure
1	2	00	01	Specification of category 01
2	2	15		The battery voltage can be discriminated by the display data.

※ Voltage measurement accuracy is approx. $\pm 10\%$.



15. Mechanism section switch, etc. check

Page 2	Category 00	Address 86
--------	-------------	------------

Bit	Switch, etc.	Condition
0	Hi8 MP	"1"=Hi8 MP tape, "0"=Others
1	PB E/L	"1"=Hi8 mode playback, "0"=Others
2	ME/MP	"1"=ME tape, "0"=MP tape
3	REC PROOF	"1"=Recording prohibited, "0"=Recording possible
4		
5	MODE SW 0	Mode switch position*1
6	MODE SW 1	
7	MODE SW 2	

Note 1

MODE SW			POSITION	FUNCTION	CC DOWN
0	1	2			
1	1	1	BL	Interval of each position	
0	1	1	END	FULL END processing (T side lock removal)	1
0	0	1	EJECT	Cassette compartment ejection	1
1	0	1	USE	EJECTED (Unskate end)	1
0	0	1	LOAD	LOADING (Skate in)	0
1	0	0	READY	NORMAL STOP position	0
1	1	0	TURN	OFF of pinch roller only with PB ↔ REV (oscillating position)	0
0	1	0	RP	PB, REC, RVS, REV, REW	0
0	0	0	FF	FF/CUE	0



Using method:

Order	Page	Address	Data	Procedure
1	2	00	00	Specification of category 00
2	2	86		The mode switch position can be discriminated by the upper 1 digit of the display data. The conditions of various switches can be discriminated by the bit value of the lower 1 digit.

16. Mechanism controller input/output check

Page 2	Category 00	Address 85
--------	-------------	------------

Bit	I/O Signal	Condition
0	PB LP/SP DET	"1"=LP playback, "0"=Others
1	SYNC DET	"1"=VTR SYNC present, "0"=No VTR SYNC
2	REC CLOG	"1"=Clog occurred, "0"=Others
3		
4	JOG	"1"=Variable speed playback, "0"=Others
5	VA PB MODE	"1"=PB mode, "0"=E-E mode
6	AUDIO MUTE	"1"=Mute, "0"=Audio output
7	VIDEO MUTE	"1"=Mute, "0"=Video output

Using method:

Order	Page	Address	Data	Procedure
1	2	00	00	Specification of category 00
2	2	85		The condition of each input/output signal can be discriminated by differentiating the bit value of the display data.

17. Mechanism controller input check

Page 2	Category 00	Address 89
--------	-------------	------------

Bit	I/O Signal	Condition
0	$\overline{S\ IN}$	"0"=S VIDEO terminal connection condition, "1"=S VIDEO terminal open condition
1	$\overline{DEW\ DET}$	"0"=Condensation occurred, "1"=Others
2		
3		
4	$\overline{MIC\ MONO}$	"0"=During monaural external microphone use, "1"=Others
5	$\overline{JACK\ MONO}$	"0"=Audio output terminal (right) connection condition. "1"=Audio output terminal (right) open condition.
6	PB 1.7M DET	"1"=During AFM stereo/bilingual tape playback, "0"=Others
7		

Using method:

Order	Page	Address	Data	Procedure
1	2	00	00	Specification of category 00
2	2	89		The condition of each input signal can be discriminated by differentiating the bit values of the display data.

18. Mechanism controller A/D port input voltage check

Page 3	Category 02	Address 14
--------	-------------	------------

Display Data	A/D Port Input Voltage
00 to FF	Approx. 0 Vdc to approx. 5 Vdc


Using method:

Order	Page	Address	Data	Procedure																
1	3	00	02	Specification of category 02																
2	3	0E	02	Permission for A/D conversion operations																
3	3	13		Set the data according to the following table, and specify the A/D port of the mechanism controller. <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Data</th> <th>Mechanism Controller Port</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Ⓢ pin; AN0, T REEL FG</td> </tr> <tr> <td>01</td> <td>Ⓢ pin; AN1, S REEL FG</td> </tr> <tr> <td>02</td> <td>Ⓢ pin; AN2, ATF ERROR</td> </tr> <tr> <td>03</td> <td>Ⓢ pin; AN3, BATT SENSE</td> </tr> <tr> <td>04</td> <td>Ⓢ pin; AN4, DEW DET</td> </tr> <tr> <td>05</td> <td>Ⓢ pin; AN5, TAPE TOP</td> </tr> <tr> <td>06</td> <td>Ⓢ pin; AN6, TAPE END</td> </tr> </tbody> </table>	Data	Mechanism Controller Port	00	Ⓢ pin; AN0, T REEL FG	01	Ⓢ pin; AN1, S REEL FG	02	Ⓢ pin; AN2, ATF ERROR	03	Ⓢ pin; AN3, BATT SENSE	04	Ⓢ pin; AN4, DEW DET	05	Ⓢ pin; AN5, TAPE TOP	06	Ⓢ pin; AN6, TAPE END
Data	Mechanism Controller Port																			
00	Ⓢ pin; AN0, T REEL FG																			
01	Ⓢ pin; AN1, S REEL FG																			
02	Ⓢ pin; AN2, ATF ERROR																			
03	Ⓢ pin; AN3, BATT SENSE																			
04	Ⓢ pin; AN4, DEW DET																			
05	Ⓢ pin; AN5, TAPE TOP																			
06	Ⓢ pin; AN6, TAPE END																			
4	3	14		The A/D port input voltage can be discriminated according to the display data.																

19. Tape top/end sensor check

Page 3	Category 02	Address 0A
--------	-------------	------------

Display Data	Tape Top/End Sensor Condition
00	Tape present (Middle of tape)
01	Tape end
10	Tape top
11	No tape

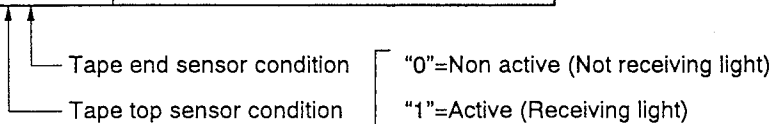

Using method:

Order	Page	Address	Data	Procedure
1	3	00	02	Specification of category 02
2	3	0E	10	Request for tape top/end sampling operations
3	3	0A		The condition of the tape top/end sensor can be discriminated by the display data.

20. Individual operations of the drum, capstan, and loading motor

Page 3	Category 02	Address 11
--------	-------------	------------

Display	Operations
00	Normal
02	Drum in normal rotation
04	Drum in reverse rotation
06	Capstan in normal rotation
08	Capstan in reverse rotation
0A	Loading motor in normal rotation
0C	Loading motor in reverse rotation
01	All motors stop
03	
05	
07	
09	
0B	
0D	
0F	

Using method:

Order	Page	Address	Data	Procedure
1	3	00	02	Specification of category 02
2	3	0E	01	Permission for individual operations of motor
3	3	11		The motor can be operated individually by setting the data indicated above.
4				Turn off the main power supply (7.5 Vdc).

21. Version of mechanical control microprocessor

Page 3	Category 02	Address 0B
--------	-------------	------------

Data	Microprocessor version
01	Version 1 (CXP80624A-019R: VS-99 board IC501)

22. Page D address list

Note 1: The adjustment data initial value is the data input before performing video section adjustments (Page D) if the Page D data has been erased due to some reason.

Note 2: The data written in the adjustment data memo column are fixed. After adjusting, check that these data have not been rewritten by mistake.

*1 No mark : US, Canadian model
 [] : E model

Address	Name	Function [] contains the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
00		Not used	FF	FF
01	Test mode	Test mode	00	00
02	Destination flag	Destination flag	4A[6A]*1	4A[6A]*1
03	BATT END	Battery end adjustment	8D	
04	SW POSITION (LOW)	SW POSITION adjustment [Lower]	80	
05	SW POSITION (HIGH)	SW POSITION adjustment [Upper]	0B	
06	EMERGENCY code (FIRST)	} Error codes and modes are recorded in the memory. Rewrite the data of these addresses to 00 after repairs/adjustments.	00	00
07	EMERGENCY code (LAST)		00	00
08	EMERGENCY mode (FIRST)		00	00
09	EMERGENCY mode (LAST)		00	00
0A	SR DATA (MP NORMAL SP)	CXA1207 serial data	29	29
0B	SR DATA (MP NORMAL LP)	CXA1207 serial data	3E	3E
0C	SR DATA (ME HI8 SP)	CXA1207 serial data	28	28
0D	SR DATA (ME HI8 LP)	CXA1207 serial data	28	28
0E	SR DATA (ME NORMAL SP)	CXA1207 serial data	28	28
0F	SR DATA (ME NORMAL LP)	CXA1207 serial data	3E	3E
10	SR DATA (MP HI8 SP)	CXA1207 serial data	28	28
11	SR DATA (MP HI8 LP)	CXA1207 serial data	28	28
12	SR DATA (EDIT ON NORMAL)	CXA1207 serial data	28	28
13	SR DATA (EDIT ON HI8)	CXA1207 serial data	28	28
14		Not used	FF	FF
15		Not used	FF	FF
16		Not used	FF	FF
17		Not used	FF	FF
18		Not used	FF	FF
19		Not used	FF	FF
1A		Not used	FF	FF
1B		Not used	FF	FF
1C		Not used	FF	FF
1D		Not used	00	00
1E		Not used	00	00
1F		Not used	00	00
20	VARIATION	DDS display start year, EJECT permission, MUTE.	05	05
21	ADJUST MODE	CAM P ON, VTR P ON, etc.	00	00
22 - 26		Not used	FF	FF
27	BATT HUNTING PREVENTION LEVEL	Battery hunting prevention threshold level	00	
28	BATT REF	Battery pre end	8F	

Table 10-3(1).

Address	Name	Function [] contains the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
29	MECH SW	Mechanism control switch	06	06
2A	TRAC FWD ADJUST	Slow brake (Foward)	00	00
2B	TRAK REV ADJUST	Slow brake (Reverse)	00	00
2C	STILL BRK ADJUST	Still brake	00	00
2D	BATT REF (LOW)	Amount of remaining battery (Low)	94	
2E	BATT REF (MID)	Amount of remaining battery (Mid)	99	
2F	BATT REF (FULL)	Amount of remaining battery (Full)	A0	
30-39		Not used	FF	FF
3A	MT' CH	MT' CH	AA	AA
3B-3D		Not used	FF	FF
3E	MT 2A (E)	Hi8 2Ach frequency characteristics adjustment	88	
3F	MT 2A (L)	Normal 2Ach frequency characteristics adjustment (⑫ of IC003)	88	
40		Not used	FF	FF
41		Not used	FF	FF
42	MT 1A (E)	Hi8 1Ach frequency characteristics adjustment	82	
43	MT 1A (L)	Normal 1Ach frequency characteristics adjustment (③ of IC003)	82	
44		Not used	FF	FF
45		Not used	FF	FF
46	REC C (REC)	REC C level adjustment (EE) (⑨ of IC005)	A1	
47	REC C (PB)	REC C level adjustment (PB) (⑨ of IC005)	00	00
48		Not used	FF	FF
49		Not used	FF	FF
4A	SYNC AGC	EE level adjustment (⑦ of IC005)	62	
4B		Not used	FF	FF
4C	C COMB	Chroma comb type filter adjustment (⑧ of IC005)	A6	
4D	SR IR	IR adjustment (④ of IC005)	AF	
4E	CAR.-E	Hi8 Y-FM carrier frequency adjustment	A8	A8
4F	CAR.-L	Normal Y-FM carrier frequency adjustment (⑥ of IC005)	A8	
50	DEV.-E	Hi8 Y-FM deviation adjustment	98	98
51	DEV.-L	Normal Y-FM deviation adjustment (⑤ of IC005)	98	
52	REC Y (ME E)	Hi8 ME REC Y level adjustment. Not used.	7E	7E
53	REC Y (MP E)	Hi8 MP REC Y level adjustment. Not used.	7E	7E
54	REC Y (ME L)	Normal ME REC Y level adjustment (⑫ of IC005)	7E	
55	REC Y (MP L)	Normal MP REC Y level adjustment (⑫ of IC005)	7E	
56	REC Y (PB)	REC Y level adjustment (PB) (⑫ of IC005)	00	00
57	PB Y (REC)	EE mode PB Y level (② of IC005)	00	00
58	PB Y (E)	Hi8 PB Y level adjustment. Not used	8F	8F
59	PB Y (L)	Normal PB Y level adjustment (② of IC005)	97	
5A	EMPH (EE)	EE emphasis input level adjustment (③ of IC005)	86	
5B	EMPH (PB)	PB emphasis input level adjustment (③ of IC005)	8E	

Table 10-3(2).

Address	Name	Function [] contains the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
5C	REC L CONT (ME E SP)	Hi8 ME SP REC level control. Not used	80	80
5D	REC L CONT (MP E SP)	Hi8 MP SP REC level control. Not used	80	80
5E	REC L CONT (ME L SP)	Normal ME SP REC level control	C0	C0
5F	REC L CONT (MP L SP)	Normal MP SP REC level control	A8	A8
60	REC L CONT (ME E LP)	Hi8 ME LP REC level control. Not used	80	80
61	REC L CONT (MP E LP)	Hi8 MP LP REC level control. Not used	80	80
62	REC L CONT (ME L LP)	Normal ME LP REC level control	AC	AC
63	REC L CONT (MP L LP)	Normal MP LP REC level control	8F	8F
64	PILOT CONT (ME)	ME pilot control	95	95
65	PILOT CONT (MP)	MP pilot control	84	84
66		Not used	FF	FF
67		Not used	FF	FF
68	D. CLIP (ME E SP)	Hi8 ME SP DARK CLIP. Not used.	75	75
69	D. CLIP (MP E SP)	Hi8 MP SP DARK CLIP. Not used.	93	93
6A	D. CLIP (ME L SP)	Normal ME SP DARK CLIP (⑥ of IC003)	48	48
6B	D. CLIP (MP L SP)	Normal MP SP DARK CLIP (⑥ of IC003)	48	48
6C	D. CLIP (ME E LP)	Hi8 ME LP DARK CLIP. Not used.	FF	FF
6D	D. CLIP (MP E LP)	Hi8 MP LP DARK CLIP. Not used.	FF	FF
6E	D. CLIP (ME L LP)	Normal ME LP DARK CLIP (⑥ of IC003)	FF	FF
6F	D. CLIP (MP L LP)	Normal MP LP DARK CLIP (⑥ of IC003)	FF	FF
70	W. CLIP (ME E SP)	Hi8 ME SP WHITE CLIP. Not used	82	82
71	W. CLIP (MP E SP)	Hi8 MP SP WHITE CLIP. Not used	75	75
72	W. CLIP (ME L SP)	Normal ME SP WHITE CLIP (⑤ of IC003)	CA	CA
73	W. CLIP (MP L SP)	Normal MP SP WHITE CLIP (⑤ of IC003)	CA	CA
74	W. CLIP (ME E LP)	Hi8 ME LP WHITE CLIP. Not used	FF	FF
75	W. CLIP (MP E LP)	Hi8 MP LP WHITE CLIP. Not used	FF	FF
76	W. CLIP (ME L LP)	Normal ME LP WHITE CLIP (⑤ of IC003)	FF	FF
77	W. CLIP (MP L LP)	Normal MP LP WHITE CLIP (⑤ of IC003)	FF	FF
78	REC/PB MX (REC)	REC matrix adjustment (⑱ of IC005)	61	
79	REC/PB MX (PB)	PB matrix adjustment (⑱ of IC005)	A0	
7A	1.5 IR	1.5 MHz IR adjustment (⑬ of IC003). Not used.	B0	
7B	1.5 DEV	1.5 MHz deviation adjustment (⑦ of IC003)	9B	
7C	1.7 IR	1.7 MHz IR adjustment (④ of IC003). Not used.	B0	
7D	1.7 DEV	1.7 MHz deviation adjustment (⑧ of IC003)	AB	
7E	A FADER	Auto fader (⑬ of IC005)	FF	FF
7F	ID VCO	EVR ID VCO	00	
80	ZOOM CONT B	Zoom control B	FF	FF
81	ZOOM CONT A	Zoom control A	FF	FF

Table 10-3(3).

Address	Name	Function [] contains the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
82-DF		Not used	FF	FF
E0	NEST DEF BIT	CCD imager correction pattern (for backup)	00	
E1	CCD DEFECT 0	CCD imager correction data (for backup) ※ Refer to "8-2. 8 CCD Imager Correction Data Writing" of Camera Section Adjustments.	00	
E2	CCD DEFECT 1		00	
E3	CCD DEFECT 2		00	
E4	CCD DEFECT 3		00	
E5	CCD DEFECT 4		00	
E6	CCD DEFECT 5		00	
E7	CCD DEFECT 6		00	
E8	CCD DEFECT 7		00	
E9	CCD DEFECT 8		00	
EA	CCD DEFECT 9		00	
EB	CCD DEFECT 10		00	
EC	CCD DEFECT 11		00	
ED	CCD DEFECT 12		00	
EE	CCD DEFECT 13		00	
EF	CCD DEFECT 14		00	
F0-FF		Establishment area		

Table 10-3(4).

10-2. ADJUSTING POINTS WHEN REPLACING MAIN PARTS

1. When replacing drum

"Switching Position Adjustment" of "Servo System Adjustments"

"Playback Frequency Characteristics Adjustment" of "Video System Adjustments"

10-3. POWER SUPPLY SYSTEM ADJUSTMENTS

1. Oscillator frequency check (DD-55 board)

Mode	Camera record
Subject	Arbitrary
Measurement Point	Q454 collector
Measuring Instrument	Frequency counter
Specified Value	460 ± 30 kHz

2. Power supply voltage check (DD-55 board)

Mode	Camera record
Subject	Arbitrary
Measuring Instrument	Digital voltmeter
EVF 5V check	
Measurement Point	Pin ⑭ of CN451
Specified Value	4.92 ± 0.15 Vdc
SS5V check	
Measurement Point	Pin ⑫ of CN451
Specified Value	4.71 ± 0.15 Vdc
D5V check	
Measurement Point	Pins ⑤ and ⑥ of CN451
Specified Value	4.90 ± 0.15 Vdc
D4V check	
Measurement Point	Pin ③ of CN451
Specified Value	3.80 ± 0.15 Vdc
VIDEO 5V check	
Measurement Point	Pins ⑩ and ⑪ of CN451
Specified Value	4.69 ± 0.15 Vdc
AU5V check	
Measurement Point	Pin ⑬ of CN451
Specified Value	4.72 ± 0.15 Vdc
CAM 5V check	
Measurement Point	Pin ① of CN451
Specified Value	4.85 ± 0.15 Vdc
15V check	
Measurement Point	Pin ④ of CN451
Specified Value	15.00 ± 0.4 Vdc
-8.5V check	
Measurement Point	Pin ② of CN451
Specified Value	-8.5 ± 0.5 Vdc

10-4. SYSTEM CONTROL SYSTEM ADJUSTMENTS

1. Page D initial value input

If the page D data is erased due to some cause, input the page D initial value before adjusting. For details on the initial value, refer to "Page D Address List" in "10-1-9. Service Mode". Input the CCD correction data (Page F, addresses 1F to 2E) to addresses E0 to EF as backup data. For details, refer to "CCD correction data writing" of "Camera Section Adjustments".

Mode	Stop
Signal	Arbitrary
Adjustment Page	D
Adjustment Address	00 to 8F, E0 to EF

Inputting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2	D	00~8F		Input the data (initial value) according to the "Page D Address List". After setting each data, be sure to press the PAUSE button.	
3	D	E0 E1 E2 ⋮ EF		Set the data of page F address 1F, and press the PAUSE button. Set the data of page F address 20, and press the PAUSE button. Set the data of page F address 21, and press the PAUSE button. ⋮ Set the data of page F address 2E, and press the PAUSE button.	

2. Battery end adjustment

Mode	Camera record, auto focus off
Subject	Arbitrary
Measurement Point	LCD display of the adjusting remote commander
Measuring Instrument	commander
Adjustment Page	D
Adjustment Address	03 (BATT END) 27 (BATT HUNTING PREVENTION LEVEL) 28 (BATT REF) 2D (BATT REF (LOW)) 2E (BATT REF (MID)) 2F (BATT REF (FULL))

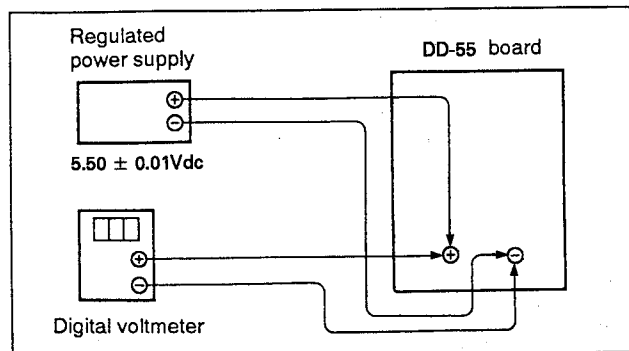


Fig. 10-4.

Connection:

- 1) Connect the regulated power supply and the digital voltmeter as shown in Fig. 10-4.

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1				Adjust the output voltage of the regulated power supply so that the digital voltmeter display becomes 7.5 ± 0.1 Vdc.	
2				Set the camera recording mode. The auto focus turns off.	
3	1	00	01	Releasing of protect.	
4	D	01	01	Set the data, and press the PAUSE button. (Setting of TEST MODE 1)	
5				Adjust the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.50 ± 0.01 Vdc.	
6	2	00	01	Specification of page 2, category 1.	
7	2	15		Read the adjusting remote commander display data and take it as DEND.	
8	D	03		Set DEND, and press the PAUSE button.	
9				Convert DEND to decimal to obtain DEND'. (Refer to Table 8-5., "Hexadecimal-Decimal Conversion Table")	
10				Obtain the adjustment data (decimal) by following formula (decimal notation calculation), convert to hexadecimal and enter the data into each adjustment address.	
11	D	2F 2E 2D 28 27		$D_{2F}' = D_{END}' + 19$ $D_{2E}' = D_{END}' + 17$ $D_{2D}' = D_{END}' + 13$ $D_{28}' = D_{END}' + 4$ $D_{27}' = D_{END}' - 5$ Note: After setting the data, be sure to press the PAUSE button of the adjusting remote commander before changing address.	
12	D	01	00	Set the data, and press the PAUSE button. (Releasing of TEST MODE 1)	
13				Perform "Battery Down check"	

3. Battery down check

Mode	Camera record
Subject	Arbitrary


Connection

- 1) Connect the regulated power supply and the digital voltmeter as shown in Fig. 10-4.

Checking method:

Order	Procedure
1	Remove the adjusting remote control unit, and perform the following check. If the check is not satisfied, perform from the beginning again.
2	Adjust the output voltage of the regulated power supply so that the digital voltmeter display becomes 7.5 ± 0.1 Vdc.
3	Set to the camera recording mode.
4	Decrease the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.75 ± 0.01 Vdc.
5	Check that the \square mark on the EVF (viewfinder) display is not lighted up. (TALLY lamp lights up).
6	Decrease the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.69 ± 0.01 Vdc.
7	Check that the \square mark and the TALLY lamp on the EVF display on the EVF display blinks every second.
8	Decrease the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.47 ± 0.01 Vdc.
9	Check that the \square mark and the TALLY lamp on the EVF display are blinking faster, the VTR stops and the power supply turns off.

AU-149 BOARD (COMPONENT SIDE)

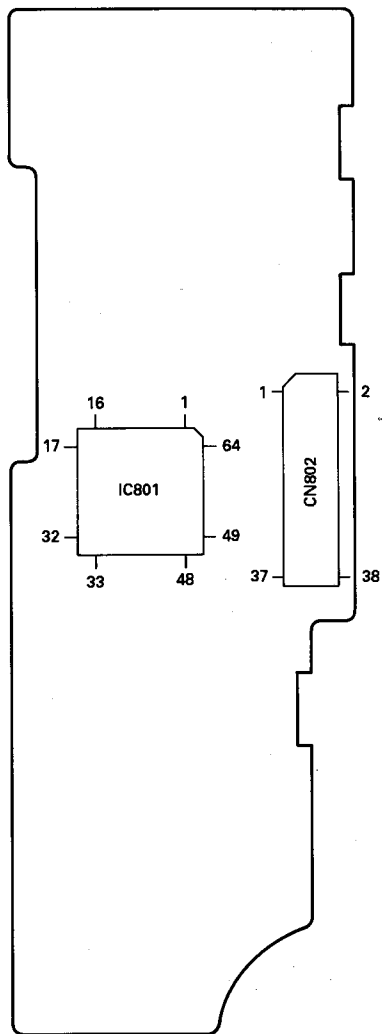

10-6. VIDEO ADJUSTMENTS

Basically, the video system must be adjusted according to the following adjustment procedures.

The color video signal supplied from the pattern generator is used as the video input signal for adjusting the video system in the recording mode. Check that the sync signal and the color burst signal satisfy the standards specified for the set-ups for adjustments shown in Fig. 10-2.

[Adjusting procedure]

- 1) Playback frequency characteristics adjustment
- 2) Flying erase check
- 3) VXO oscillation frequency check
- 4) EE level adjustment
- 5) IR adjustment
- 6) Chroma comb filter adjustment
- 7) Emphasis input level adjustment
- 8) PB Y level adjustment
- 9) PB line out level adjustment
- 10) Y FM deviation adjustment
- 11) Y carrier frequency adjustment
- 12) Chroma emphasis fo adjustment
- 13) REC Y level adjustment
- 14) REC C level adjustment
- 15) REC ATF level check
- 16) REC AFM level check
- 17) Chroma comb filter fine adjustment

**1. Playback frequency characteristic adjustment
(VS-99 board)**

Note: The adjusting element for CH2 is shown in parentheses [].

Mode	Playback
Signal	Alignment tape: For adjusting frequency characteristics (WR5-6N)
Measurement Point	CH1: Pin ③ of CN002 (PB RF) EXT TRIG: Pin ④ of CN002 (RF SWP)
Measuring Instrument	Oscilloscope TRIG SLOPE: +[-]
Adjustment Page	D
Adjustment Address	43 (MT 1A (L)) [3F (MT 2A (L))] 42 (MT 1A (E)) [3E (MT 2A (E))]
Specified Value	3.58 MHz level: 5.5 MHz level= 4: (3.0±0.3)

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2	D	05		After memorizing the data, set the data to 10.	Playback mode
3	D	05		Press the PAUSE button	
4	D	43 [3F]		Change the data with the PLAY and STOP buttons, and adjust the level ratio of 3.58 MHz and 5.5 MHz of PB RF output waveform to the specified value Note: After each address adjustment, be sure to press the PAUSE button of the adjusting remote commander and memorize the data.	Playback mode
5	D	42 [3E]		Set the data, same data as address 43 Set the data, same data as address 3F	
6	D	05		Set the data memorized at step 2), and press the PAUSE button of the adjusting remote commander.	

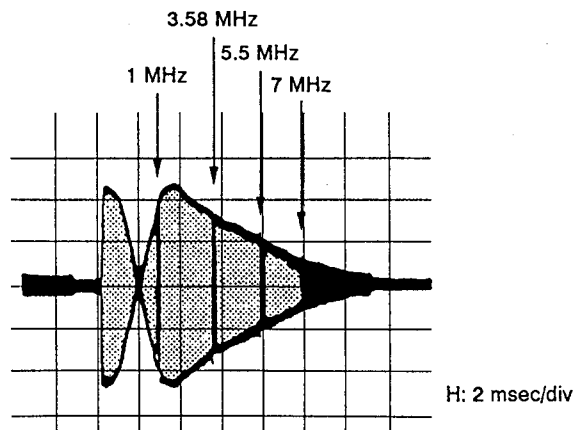


Fig. 10-6.

2. Flying erase check (VS-99 board)

Mode	Record
Signal	Arbitrary
Measurement Point	Pin ② of W001 (FE (X))
Measuring Instrument	Oscilloscope and frequency counter
Specified Value	Frequency: Above 7.5 MHz Voltage: Above 5.5 Vp-p (ME tape) Above 7.0 Vp-p (MP tape)

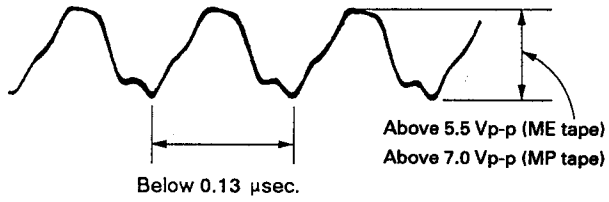


Fig. 10-7.

3. VXO oscillation frequency check (VS-99 board)

Mode	Playback
Signal	Any tape
Measurement Point	Pin ② of IC301 (FSC OUT)
Measuring Instrument	Frequency counter
Specified Value	3579545 \pm 70Hz

Note: Connect the frequency counter via a high impedance (approximately 10 M Ω) and low capacity (below 10 pF) buffer.

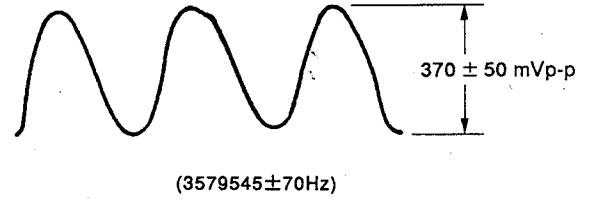


Fig. 10-8.

4. EE level adjustment (VS-99 board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ② of CN101 (VIDEO OUT) ^{Note}
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	4A (SYNC AGC)
Specified Value	A=1.00±0.05 V

Note: Terminate pin ② of CN101 at 75 Ω.
After completing adjustments, remove the 75 Ω resistor.

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2	D	4A		Change the data with the PLAY and STOP buttons, and adjust the Y signal level (A) to the specified value.	E-E mode
3	D	4A		Press the PAUSE button.	

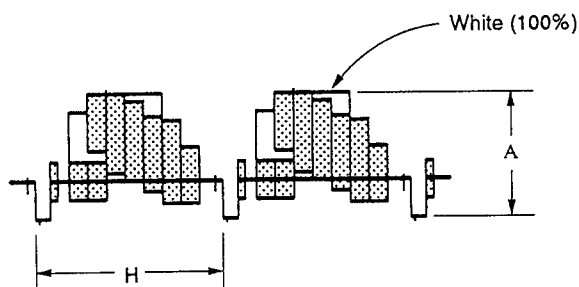


Fig. 10-9.

Related Adjustments:

“Emphasis input level adjustment”, “PB Y level adjustment”,
“Y FM carrier frequency adjustment”, “Y FM deviation adjustment”.

5. IR adjustment (VS-99 board)

Mode	Record
Signal	Color bar
Measurement Point	Pin ⑦ of IC201 (YCOMB OUT)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	4D (SR IR)
Specified Value	Minimum residual chroma component (A) (Below 80 mVp-p)

Connection:

- 1) Connect Pin ⑭ of IC201 (or Pin ② of IC202) and Pin ⑤ of IC201 with a jumper wire

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1				Check that the input is "VIDEO".	
2	1	00	01	Releasing of protect.	
3	D	4D		Change the data with the PLAY and STOP buttons, and minimize the residual chroma component (A).	Recording mode Connect Pin ② of IC202 and Pin ⑤ of IC201 with a jumper wire.
4	D	4D		Press the PAUSE button.	

Note: Remove the lens block and adjust.

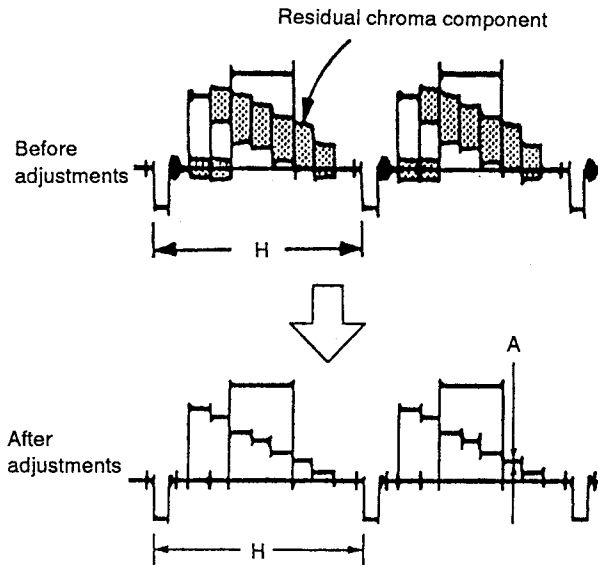


Fig. 10-10.

Related Adjustments:

- “Emphasis input level adjustment”, “PB Y level adjustment”,
- “Y FM deviation adjustment”, “Y FM carrier frequency adjustment”.

6. Chroma comb filter adjustment (VS-99 board)

Mode	Record
Signal	Color bar
Measurement Point	Pin ⑪ of IC201 (C+CD)
Measuring Instrument	Oscilloscope
Adjusting Element	RV161 (Phase)
Adjustment Page	D
Adjustment Address	4C (C COMB)
Specified Value	Minimum residual chroma component (A)

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1				Check that the input is "VIDEO".	
2	1	00	01	Releasing of protect.	
3				Minimize the residual chroma component (A) with RV161	Recording mode
4	D	4C		Change the data with the PLAY and STOP buttons, and minimize the residual chroma component.	Recording mode
5	D	4C		Press the PAUSE button.	
6				Repeat steps 3 to 5 in order.	

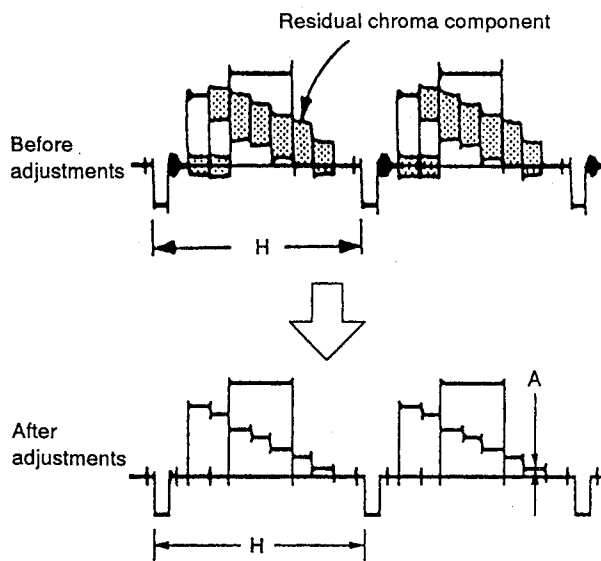


Fig. 10-11.

Related Adjustments:

"Chroma comb filter fine adjustment".

7. Emphasis input level adjustment (VS-99 board)

Mode	Record
Signal	Color bar
Measurement Point	Pin ③ of IC201 (EMPH IN)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	5A (EMPH (EE))
Specified Value	$A=0.50\pm 0.025V$

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of the protect.	
2	D	5A		Change the data with the PLAY and STOP buttons, and adjust the Y signal level (A) to the specified value.	Recording mode
3	D	5A		Press the PAUSE button.	

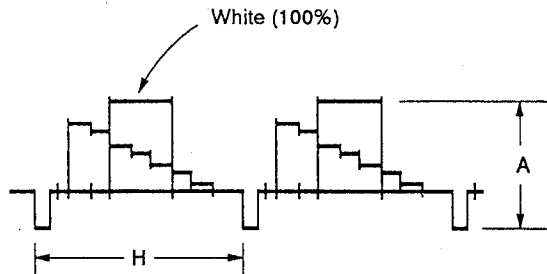


Fig. 10-12.

Related Adjustments:

“PB Y level adjustment”, “Y FM deviation adjustment”.

8. PB Y level adjustment (VS-99 board)

Mode	Playback
Signal	Alignment tape: For checking operations (WR5-5NSP) Color bar section
Measurement Point	Pin ② of IC201 (DL IN 1)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	59 (PB Y L)
Specified Value	$A=0.50 \pm 0.025V$

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2				Play back the color bar section of the normal mode alignment tape.	
3	D	59		Change the data with the PLAY and STOP buttons, and adjust the playback signal level (A) to the specified value.	Play back WR5-5NSP.
4	D	59		Press the PAUSE button.	

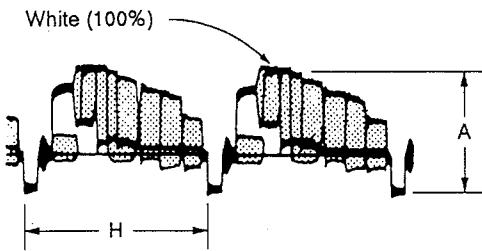


Fig. 10-13.

9. PB line out level adjustment

Mode	Playback
Signal	Alignment tape: For checking operations (WR5-5NSP) Color bar section
Measurement Point	Video output terminal (terminated at 75 Ω)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	5B (EMPH (PB))
Specified Value	A=1.0±0.05V

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of the protect.	
2	D	5B		Change the data with the PLAY and STOP buttons, and adjust the video signal level (A) to the specified value.	Playback mode
3	D	5B		Press the PAUSE button.	

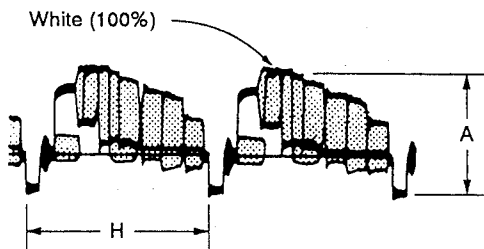


Fig. 10-14.

**10. Y FM deviation adjustment
(VS-99 board)**

Mode	Record and playback
Signal	Color bar
Measurement Point	Pin ② of IC201 (DL IN 1)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	51 (DEV. -L)
Specified Value	$A=0.50 \pm 0.025V$

Note: Check that the "Emphasis input level adjustment" and "PB Y level adjustment" have been completed.

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2				Record the color bar signal.	
3				Play back the recorded signal.	
4				Compare the playback signal level with the specified value. If it satisfies the value, the adjustment is completed.	
5	D	51		If not, Change the data with the PLAY and STOP buttons. <ul style="list-style-type: none"> • Decrease the data if the playback signal level is greater than the specified value. • Increase the data if smaller. 	
6	D	51		Press the PAUSE button.	

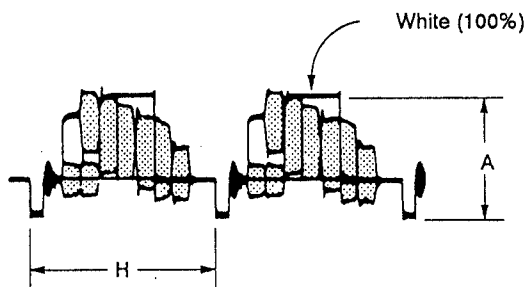


Fig. 10-15.

Related Adjustments:
"Y FM carrier frequency adjustment".

**11. Y FM carrier frequency adjustment
(VS-99 board)**

Mode	Record
Signal	No signal
Measurement Point	Pin ④ of IC201 (Y RF OUT)
Measuring Instrument	Frequency counter
Adjustment Page	D
Adjustment Address	4F (CAR. -L)
Specified Value	4.20 ± 0.04 MHz

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2	D	4F		Change the data with the PLAY and STOP buttons, and adjust the Y FM carrier frequency to the specified value.	Recording mode, no signal input
3	D	4F		Press the PAUSE button.	

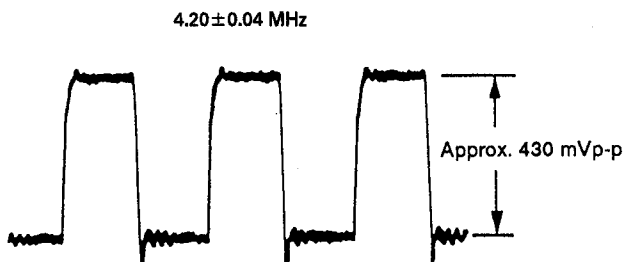


Fig. 10-16.

12. Chroma emphasis f0 adjustment (VS-99 board)

Mode	Record
Signal	Color bar
Measurement Point	Pin ② of IC301
Measuring Instrument	Oscilloscope
Adjustment Element	FL302
Adjustment value	Minimum f0 components

Connection:

- 1) Connect pin ② of IC301 to GND with a 3.3 kΩ resistor (1-249-423-11).

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1				Minimize the amplitude of the rear part of the yellow section of the chroma signal with FL302.	

Minimize the amplitude of the rear part of the yellow section

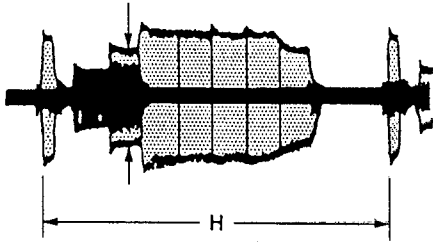


Fig. 10-17.

13. REC Y level adjustment (VS-99 board)

Mode	Record (SP)
Signal	No signal
Measurement Point	Pin ⑥ of CN002 (REC 2CH)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	54 (REC Y (ME L)), 55 (REC Y (MP L))
Specified Value	<ul style="list-style-type: none"> • ME mode $A = 195 \pm 5 \text{mVp-p}$ • MP mode $A = 195 \pm 5 \text{mVp-p}$

Note: Use a MP type tape

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2	D	55		Change the data with the PLAY and STOP buttons, and adjust the REC Y level (A) to the specified value.	Recording mode
3	D	55		Press the PAUSE button.	
4	D	54		Set the same data as address 55, and press the PAUSE button.	

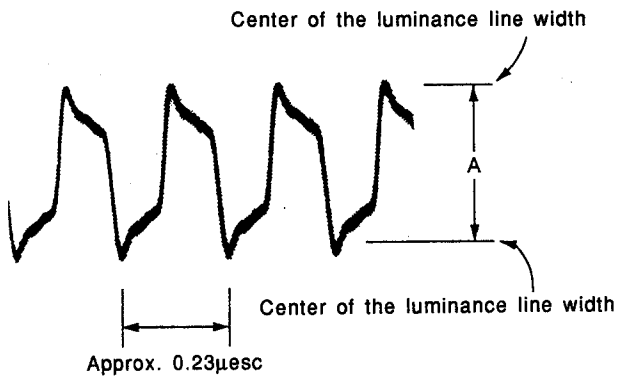


Fig. 10-18.

14. REC C level adjustment (VS-99 board)

Mode	Record (SP)
Signal	Color bar
Measurement Point	Pin ⑤ of IC302 (REC C RF)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	46 (REC C (REC))
Specified Value	A=115 ± 10 mV

Note: Use a MP type tape

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2	D	46		Change the data with the PLAY and STOP buttons, and adjust the amplitude (A) of the flat section of the "red" of the REC C level to the specified value.	Recording mode
3	D	46		Press the PAUSE button.	

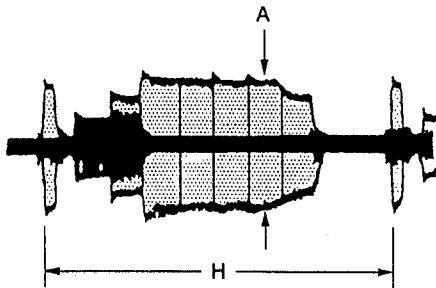


Fig. 10-19.

15. REC ATF level check (VS-99 board)

Mode	Record (SP)
Signal	No signal
Measurement Point	Pin ⑥ of CN002 (REC 2CH)
Measuring Instrument	Oscilloscope
Specified Value	$A=8 \pm 2.0$ mVp-p

Note: Use a MP type tape

Connection:

- 1) Remove CN505 of the AU-149 board.

Checking method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2	D	55		Set the data to 00. (Minimizing the REC Y level) Note: Don't press the PAUSE button of the adjusting remote commander.	
3				Check that the REC ATF signal level (A) satisfies the specified value.	Recording mode
4				Turn the main power supply (7.5V) off	

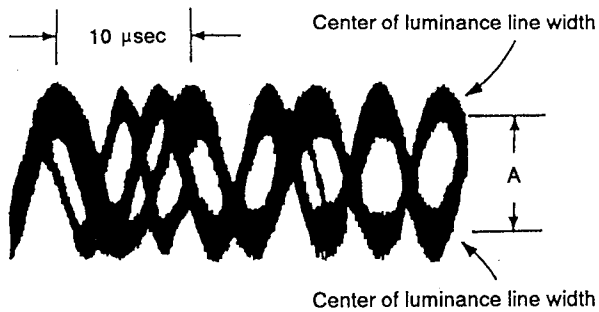


Fig. 10-20.

16. REC AFM level check (VS-99 board)

Mode	Record (SP)
Signal	No signal
Measurement Point	Pin ⑥ of CN002 (REC 2CH)
Measuring Instrument	Oscilloscope
Specified Value	$A=9 \pm 2.0$ mVp-p

Note : Use a MP type tape

Connection:

- 1) Connect Pin ⑨ of IC504 and GND with a $0.01 \mu\text{F}$ capacitor (1-101-004-00).

Checking method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2	D	55		Set the data to 00. (Minimizing the REC Y level) Note: Don't press the PAUSE button of the adjusting remote commander.	
3				Check that the REC AFM signal level (A) satisfies the specified value.	Recording mode
4				Turn the main power supply (7.5V) off	

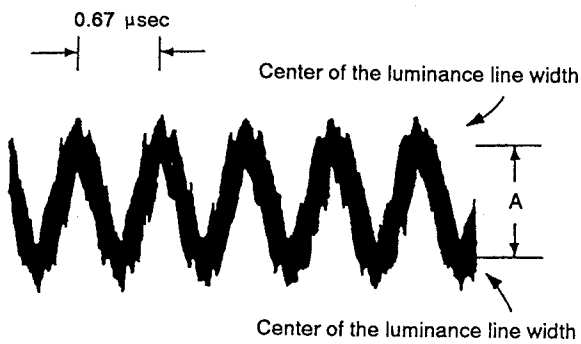


Fig. 10-21.

**17. Chroma comb filter fine adjustment
(VS-99 board)**

Mode	Playback
Signal	Alignment tape: For checking operations Color bar section
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjusting Element	RV161
Adjustment Page	D
Adjustment Address	4C (C COMB)
Specified Value	Minimum color luminance point movement when the "Edit" switch is turned on/off

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2				Minimize the movements of the color luminance point when the edit is on/off with RV161.	Playback mode
3	D	4C		Change the data with the PLAY and STOP buttons, and minimize the movements of the color luminance point when the edit is on/off.	Playback mode
4	D	4C		Press the PAUSE button.	
5				Repeat steps 2 to 4.	

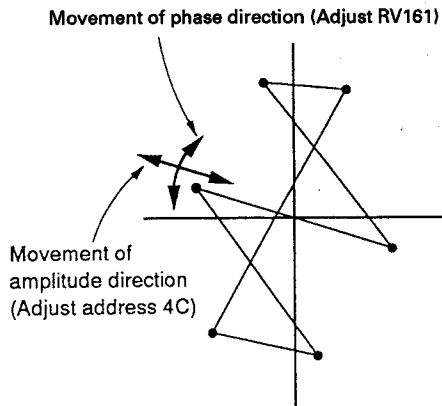


Fig. 10-22.

10-7. AUDIO SYSTEM ADJUSTMENT

- Adjust using the color bar signal as the video signal input.

[Connecting the measuring equipments for audio]

In addition to the measuring equipments for the video system, connect the measuring equipments for the audio system as shown in Fig. 10-23, and adjust with the power supply switch at "Player". Inputting signal and setting REC mode are described in section 10-1-3. Mode of HiFi sound select STEREO.
(How to setting: Refer to page 19, please changing the Mode Settings.)

- Note:**
- 1) When inputting the audio signal, input the same signal to both the L and R channels, unless specified otherwise.
 - 2) Be sure to insert the plug (shorting plug or dummy plug, etc.) into the audio output (or input/output) terminal (right). If the plug is not inserted, the monaural mode will be set, and correct adjustments cannot be carried out.
(Monaural mode)
During recording.....REC AFM RF 1.7 MHz carrier will not be output.
During playbackThe L+R signal will be output from the audio output (or input/output) terminal (left).
 - 3) Adjustments for channel R in adjustments for both channels L and R are in the [].

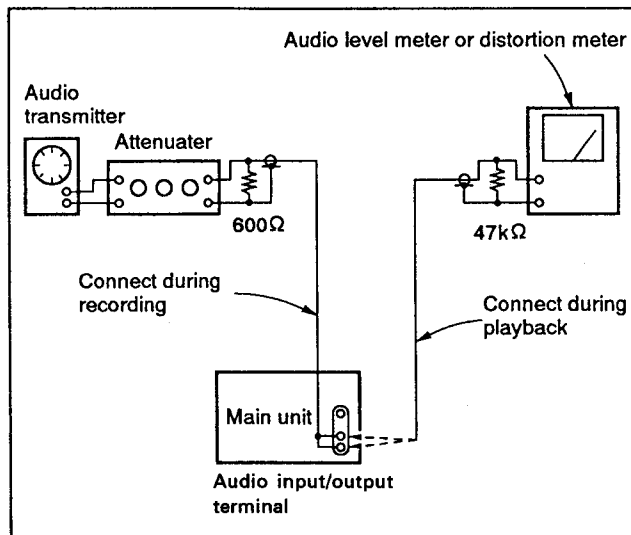


Fig. 10-23.

[Adjusting Procedure]

- 1) 1.5 MHz recording level check
- 2) E-E output level check
- 3) REC matrix L-R adjustment
- 4) REC matrix L+R check
- 5) 1.5 MHz deviation adjustment
- 6) 1.7 MHz deviation adjustment
- 7) Overall level characteristics, distortion rate check
- 8) Separation check
- 9) Overall noise level check

1. 1.5 MHz record level check (AU-149 board)

Mode	Record (Monaural)
Signal	No signal
Measurement Point	Pin ② of CN802 (REC AFM RF)
Measuring Instrument	Oscilloscope
Specified Value	$A=35 \pm 5$ mV

Note: Do not insert the plug into the right audio output terminal.

Checking method:

Order	Procedure
1	Read the center of the luminance line width and note down the read level.

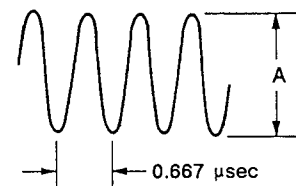


Fig. 10-24.

2. E-E output level check (AU-149 board)

Mode	Record
Signal	400 Hz, -7.5 dBs right audio input terminal [left][right]
Measurement Point	Pin ④ of IC801 [Pin ⑤ of IC801]
Measuring Instrument	Oscilloscope
Specified Value	$925 \begin{matrix} +240 \\ -190 \end{matrix}$ mVp-p (-7.5±2 dBs)

3. REC matrix L-R adjustment (AU-149 board)

Mode	Record
Signal	400 Hz, -7.5 dBs Input to both left and right terminals of the audio input terminal
Measurement Point	Pin ⑤ of IC801
Measuring Instrument	Oscilloscope (Use 1:1 probe)
Adjustment Page	D
Adjustment Address	78 (REC/PB MX (REC))
Specified Value	0 ± 20 mVp-p

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2	D	78		Change the data with the PLAY and STOP buttons, and minimize the 400 Hz signal level.	
3	D	78		Press the PAUSE button.	

4. REC matrix L+R check (AU-149 board)

Mode	Record
Signal	1. 400 Hz, -7.5 dBs : Audio input terminal (left) No signal: Audio input terminal (right) 2. No signal: Audio input terminal (left) 400 Hz, -7.5 dBs: Audio input terminal (right)
Measurement Point	Pin ④ of IC801
Measuring Instrument	Oscilloscope
Specified Value	The level difference when the signal is input to only the left terminal and when the signal is input to only the right terminal should be 0 ± 20 mVp-p.

Note: When measuring the signal level of Pin ④ of IC801, wait for more than 1 minute after signal input before measuring. (To regulate the AGC.)

Checking method:

Order	Procedure	Conditions
1	Input the 400 Hz, -7.5 dBs signal only to the left audio input terminal. (Insert the shorting plug to the right audio input terminal.)	
2	Read the 400 Hz signal level of Pin ④ of IC801, and note it down. (Approximately 400 mVp-p)	Input signal to left channel only
3	Input the 400 Hz, -7.5 dBs signal only to the right audio input terminal. (Insert the shorting plug to the left audio input terminal.)	
4	Check that the 400 Hz signal level of Pin ④ of IC801 is (the value noted down at step 2) ± 20 mVp-p.	Input signal to right channel only

5. 1.5 MHz deviation adjustment

Mode	Playback
Signal	Alignment tape: For checking operations (WR5-5NSP)
Measurement Point	Left or right audio output terminal
Measuring Instrument	Oscilloscope, level meter
Adjustment Page	D
Adjustment Address	7B (1.5 DEV)
Specified Value	-7.5 ± 0.5 dBs

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2	D	7B		Change the data with the PLAY and STOP buttons, and adjust the 400 Hz signal level to the specified value.	WR5-5NSP playback mode
3	D	7B		Press the PAUSE button.	

6. 1.7 MHz deviation adjustment (AU-149 board)

Mode	Playback
Signal	Alignment tape: AFM stereo For checking operations (WR5-9NS) Bilingual (Monoscope) section
Measurement Point	1. Pin ④ of IC801 2. Pin ⑤ of IC801
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	7D (1.7 DEV)
Specified Value	8 ± 0.05 graduation

Adjusting method:

Order	Page	Address	Data	Procedure	Conditions
1	1	00	01	Releasing of protect.	
2				Connect the oscilloscope to Pin ④ of IC801.	
3				Adjust the 400 Hz signal amplitude to the 8.0 scale using the VOLT/DIV knob of the oscilloscope.	WR5-9NS playback mode
4				Connect the oscilloscope to Pin ⑤ of IC801.	
5	D	7D		Change the data with the PLAY and STOP buttons, and adjust the amplitude of the 1 kHz signal to the 8 ± 0.05 graduation. (Adjust with the center of the luminance line width.)	WR5-9NS playback mode
6	D	7D		Press the PAUSE button.	

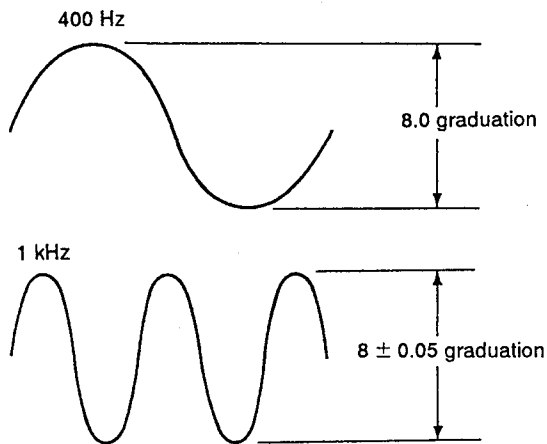


Fig. 10-25.

7. Overall level characteristics, distortion rate check

Mode	Self record/playback
Signal	400 Hz, -7.5 dBs: Left audio input terminal [right] No signal: Right audio input terminal [left]
Measurement Point	Left audio output terminal [right]
Measuring Instrument	Audio level meter and distortion meter
Specified Value	Level: -7.5 ± 2 dBs Distortion rate: Below 0.8% (Note 2)

Note: 1) The [] contains points to be measured when checking the right channel.

2) Value when the 200Hz to 6 kHz band pass filter is used.

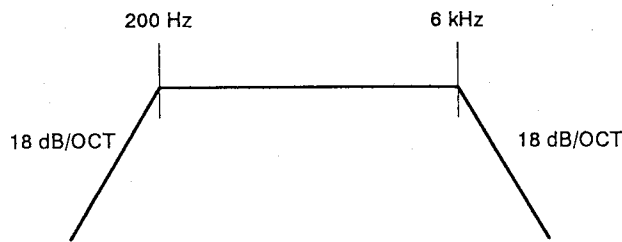


Fig. 10-26.

Checking method:

Order	Procedure
1	Input the 400 Hz, -7.5 dBs signal only to the left audio input terminal [right]. Note: Be sure to insert the shorting plug to the terminal of non-signal input.
2	Record the signal.
3	Remove the input signal, and playback the recorded section.
4	Check that the 400 Hz signal level of the left audio output terminal [right] is -7.5 ± 2 dBs, and that the distortion rate is below 0.8% (Note 2)

8. Separation check

Mode	Self recording/playback
Signal	No signal: Left audio input terminal [right] 400 Hz, -7.5 dBs: Right audio input terminal [left]
Measurement Point	Left audio output terminal [right]
Measuring Instrument	Audio level meter (Use an IHF-A curve auditory correction filter)
Specified Value	Below -27.5 dBs

Note: The [] contains points to be measured when checking the right channel.

Checking method:

Order	Procedure
1	Insert a shorting plug into the left audio input terminal [right], and input a 1 kHz, -7.5 dBs signal only to the right audio input terminal [left].
2	Record the signal.
3	Remove the input signal.
4	Play back the recorded section.
5	Check that the cross talk level (1 kHz) of the left audio output terminal [right] is below -27.5 dBs.

9. Overall noise level check

Mode	Self record/playback
Signal	No signal: Left and right audio input terminals
Measurement Point	Left audio output terminal [right]
Measuring Instrument	Audio level meter (Use an IHF-A curve auditory correction filter)
Specified Value	Below -67.5 dBs


Note: The [] contains points to be measured when checking the right channel.

Checking method:


Order	Procedure
1	Insert the shorting plug to both the left and right audio input terminals.
2	Record.
3	Remove the shorting plug.
4	Play back the recorded section.
5	Check that the noise level of the left audio output terminal [right] is below -67.5 dBs.

10-8. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS


DD-55 BOARD (COMPONENT SIDE)

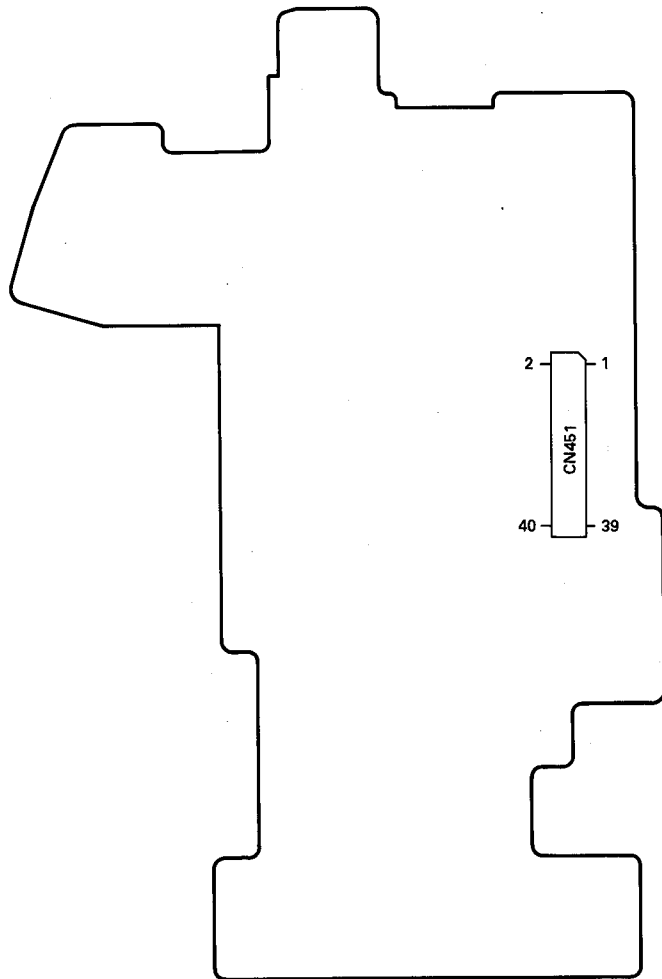


DD-55 BOARD (CONDUCTOR SIDE)

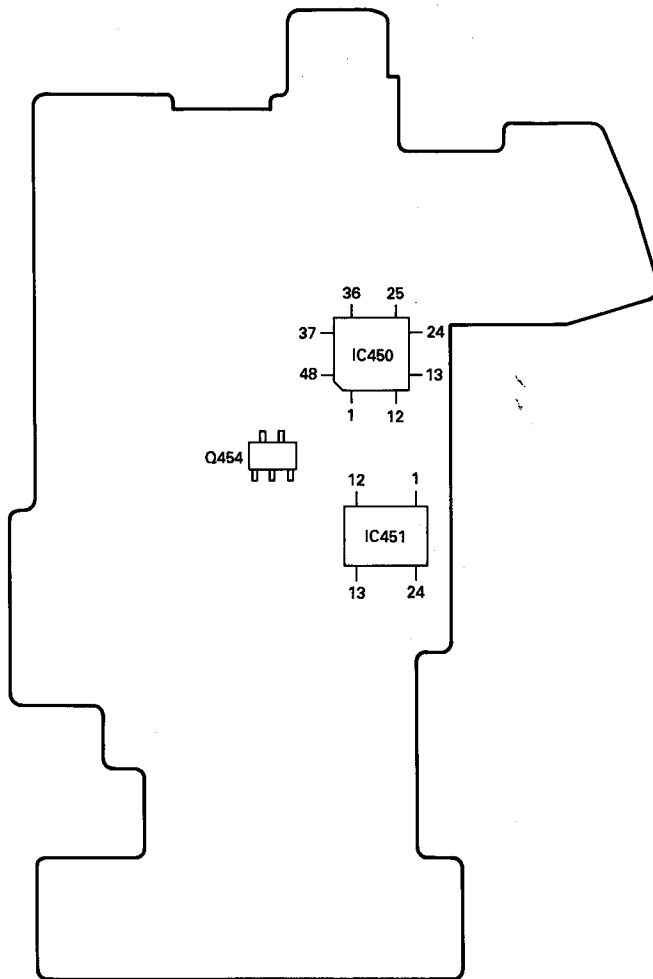

VS-99 BOARD (COMPONENT SIDE)

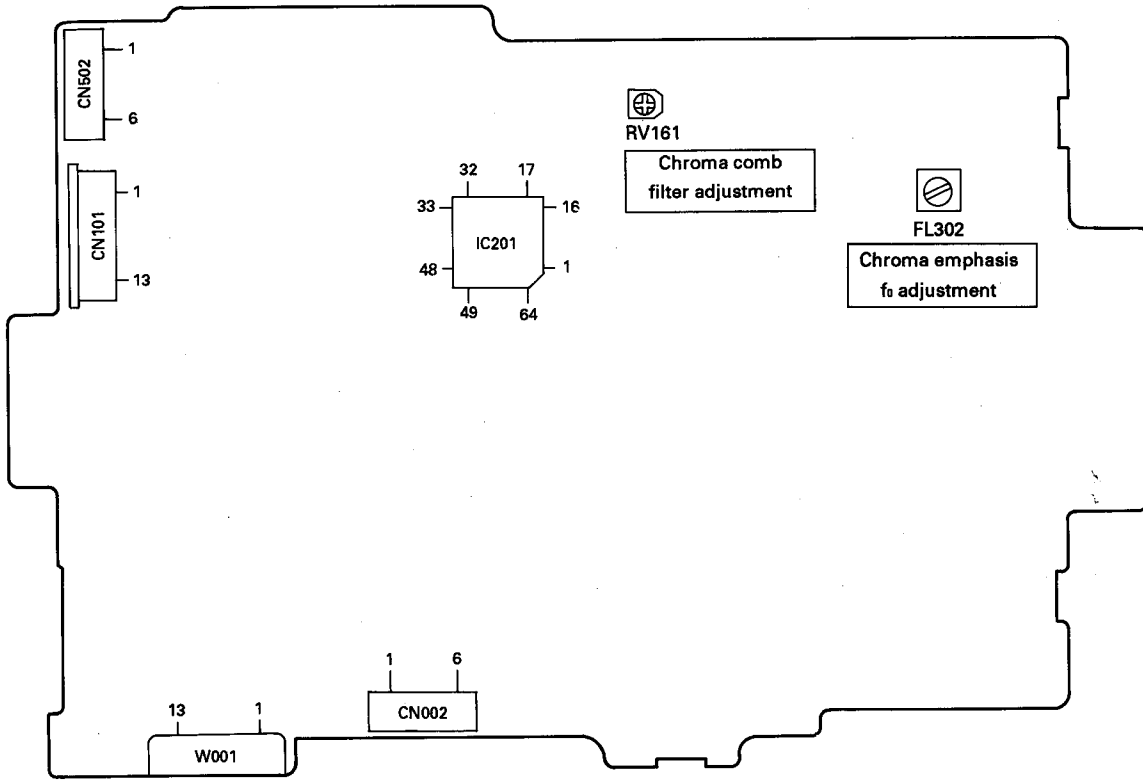

VS-99 BOARD (CONDUCTOR SIDE)

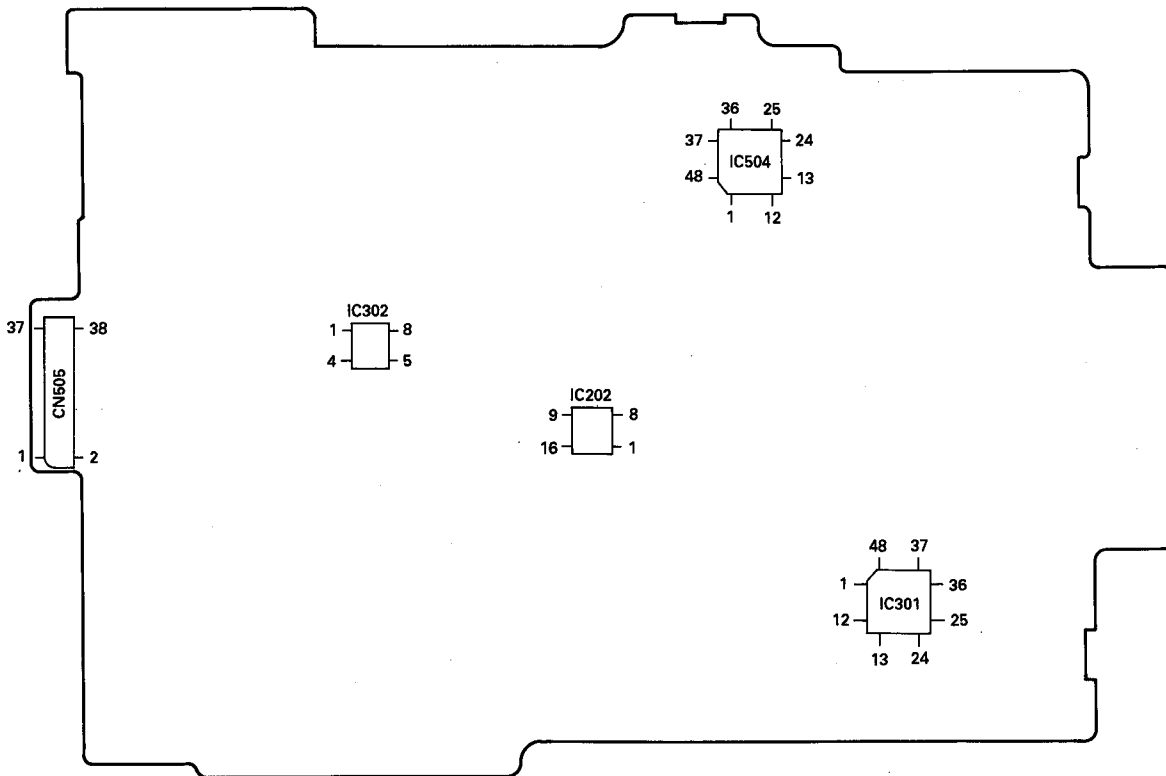

AU-149 BOARD (COMPONENT SIDE)

